



# Using The Tv's Features; Adjusting The Channel Settings; Switching Between Two Channels Using Channel Return; Switching Between Two Channels Using Surflock - Toshiba 62HM14 Owner's Manual

Toshiba television 62hm14, dlptm owner's manual



1

2

3

4

5

Table Of Contents

6

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64



- 

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Using the TV's features

### Adjusting the channel settings

#### Switching between two channels using Channel Return

The Channel Return feature allows you to switch between two channels without entering an actual channel number each time.

1. Select the first channel (or video mode) you want to view.
2. Select a second channel using the Channel Number buttons (0-9, 100).
3. Press CH RTN. The previous channel will display.

Each time you press CH RTN, the TV will switch back and forth between the last two channels that were selected.

#### Switching between two channels using SurfLock™

The SurfLock

## Using the TV's features

### Adjusting the channel settings

#### Switching between two channels using Channel Return

The Channel Return feature allows you to switch between two channels without entering an actual channel number each time.

1. Select the first channel (or video mode) you want to view.
2. Select a second channel using the Channel Number buttons (0-9, 100).
3. Press CH RTN. The previous channel will display.



feature temporarily stores one channel in the CH RTN button, so you can return to that channel quickly from any other channel by pressing CH RTN.

To store a channel in the CH RTN button:

1. Tune the TV to the channel you want to store in the CH RTN button.

2. Press and hold CH RTN for about 2 seconds until the message "Channel Memorized" appears on the screen. The channel has been stored in the CH RTN button.

3. Continue to change channels until your desired channel is selected.

4. Press CH RTN. The stored channel will be selected. The TV will return to the stored channel one time only. Once you

press CH RTN and then change channels again, the CH RTN button memory will be cleared and the button will function as Channel Return, by switching back and forth between the last two channels that were selected.

## Programming your favorite channels

You can preset up to 12 of your favorite channels using the Favorite Channel Programming feature. Because this feature scans through only your favorite channels, it allows you to skip other channels you do not normally watch.

To program your favorite channels:

1. Press MENU, and then press  $\leftarrow$  or  $\rightarrow$  until the CUSTOM menu appears.
2. Press y or z to highlight FAVORITE CH.

## Using the TV's features

### Adjusting the channel settings

#### Switching between two channels using Channel Return

The Channel Return feature allows you to switch between two channels with one pressing of the actual channel number each time.

1. Select the first channel (or video mode) you want to view.
2. Select a second channel using the Channel Number buttons (0-9, 100).
3. Press CH RTN. The previous channel will display.


Each time you press CH RTN, the TV will switch back and forth between the last two channels that were selected.

#### Switching between two channels using SurfLock™

The SurfLock feature temporarily stores one channel in the CH RTN button, so you can return to that channel quickly from any other channel by pressing CH RTN.

To store a channel in the CH RTN button:

1. Tune the TV to the channel you want to store in the CH RTN button.
2. Press and hold CH RTN for about 2 seconds until the message "Channel Memorized" appears on the screen. The channel has been stored in the CH RTN button.

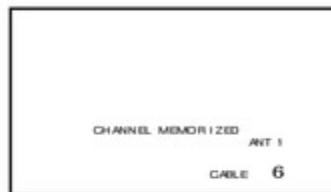

3. Continue to change channels until your desired channel is selected.
4. Press CH RTN. The stored channel will be selected.

The TV will return to the stored channel one time only. Once you press CH RTN and then change channels again, the CH RTN button memory will be cleared and the button will function as Channel Return, by switching back and forth between the last two channels that were selected.

### Programming your favorite channels

You can preset up to 12 of your favorite channels using the Favorite Channel Programming feature. Because this feature scans through only your favorite channels, it allows you to skip other channels you do not normally watch.

To program your favorite channels:

1. Press MENU, and then press  $\leftarrow$  or  $\rightarrow$  until the CUSTOM menu appears.
2. Press  $\blacktriangle$  or  $\blacktriangledown$  to highlight FAVORITE CH.



ON T I MER  
SLEEP T I MER  
CC  
FAVOR I TE CH  
CH LABEL I NG  
V I DEO LABEL  
BACKGROUND  
QU I CK RESTART  
:  
MOVE  
ENTER

26

62HM(E)26-37

26  
CHANNEL MEMOR I ZED  
CUSTOM  
0 0 h 0 0 m  
0 h 0 0 m  
OFF  
SHADED  
ON  
: START

(continued on next page)



POWER  
TV VIDEO  
RECALL  
INFO  
1  
2  
3  
4  
5  
6  
7  
8  
9  
+10  
CHRTN  
0  
100  
ENT  
FAV  
MENU  
SYSTEM  
FAV  
TV  
CHUSAT  
CH  
VOL  
VCR  
DVD  
POP DIRECT CH MUTE  
SLEEP  
TV/VCR  
PAUSE  
STOP  
PLAY  
FREEZE  
SOURCE  
SPLIT  
REW  
FF  
SEARCH

CH SCAN  
 SWAP  
 POP CH  
 REC  
 LIGHT  
 ANT 1  
 6  
 CABLE  
 POWER  
 TV / VIDEO  
 RECALL  
 INFO  
 1  
 2  
 3  
 4  
 5  
 6  
 7  
 8  
 9  
 +10  
 CHRTRN  
 0  
 100  
 ENT  
 FAV  
 MENU  
 DVD/MENU  
 FAV  
 TV  
 CBL/SAT  
 CH  
 VOL  
 VCR  
 DVD  
 POP-DIRECT CH/NOTE  
 SLEEP  
 TV/VCR  
 PAUSE  
 STOP  
 PLAY  
 FREEZE  
 SOURCE  
 SPLIT  
 REV  
 FF  
 SFP / SEARCH  
 CH SCAN  
 SWAP  
 POP CH  
 REC  
 LIGHT  
 1/24/05, 1:48 PM  
 TV/VIDEO  
 Channel  
 Number  
 CH RTN  
 MENU  
 yzx •



## Using the TV's features

### Adjusting the channel settings

#### Switching between two channels using Channel Return

The Channel Return feature allows you to switch between two channels without entering an actual channel number each time.

1. Select the first channel (or video mode) you want to view.
2. Select a second channel using the Channel Number buttons (0–9, 100).
3. Press CH RTN. The previous channel will display.

Each time you press CH RTN, the TV will switch back and forth between the last two channels that were selected.

#### Switching between two channels using SurfLock™

The SurfLock™ feature temporarily stores one channel in the CH RTN button, so you can return to that channel quickly from any other channel by pressing CH RTN.

To store a channel in the CH RTN button:

1. Tune the TV to the channel you want to store in the CH RTN



[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
23  
24  
25  
26  
27  
28  
29  
30

## Related Manuals for Toshiba 62HM14

### [Projection TV Toshiba 52HMX95 Service Manual](#)

(154 pages)

### [Projection TV Toshiba TheaterWide 46HM95 Owner's Manual](#)

Toshiba owner's manual integrated high definition dlp projection television (112 pages)

### [Projection TV Toshiba 56HM195 Service Manual](#)

(45 pages)

### [Projection TV Toshiba TheaterWide 52HM84 Owner's Manual](#)

Dlp projection television (68 pages)

### [Projection TV TOSHIBA DLP 46HM84 Owner's Manual](#)

(66 pages)

### [Projection TV Toshiba 62HM116 Operating Manual](#)

Integrated high definition dlp projection television (88 pages)

### [Projection TV Toshiba 62HM196 User Manual](#)

Integrated high definition dlp projection television (92 pages)

### [Projection TV Toshiba 62HM195 - 62" Rear Projection TV Specification](#)

62" diagonal hd dlp 1080p (2 pages)

### [Projection TV Toshiba 56HM195 Service Manual](#)

Projection television (45 pages)

### [Projection TV Toshiba 56HM195 Owner's Manual](#)

Integrated high definition dlp projection television (112 pages)

## Related Content for Toshiba 62HM14

### [46H84 Using The Tv's Features](#)

Toshiba 46H84

### [57HDX82 Using The Tv's Features](#)

Toshiba 57HDX82

### [42HM66 Using The Tv's Features](#)

Toshiba 42HM66

### [55A10 Using The Tv's Features](#)

Toshiba 55A10

### [50HX70 Using The Tv's Features](#)

Toshiba 50HX70

### [50A50 Using The Tv's Features](#)

Toshiba 50A50

### [43AX60 Using The Tv's Features](#)

Toshiba 43AX60

### [42HDX82 Using The Tv's Features](#)

Toshiba 42HDX82



This manual is also suitable for:

[DlptmDlp 62hm14](#)