



# Remote Control; Browser - Toshiba REGZA 32RV530U Owner's Manual

Integrated high definition lcd television



1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68

69



•

[Table of Contents](#)

•

## Bookmarks







## Remote Control functional key chart

Note:  
 "—" = key does not send a signal  
 in that remote  
 control  
 mode.

"\*-TV"  
 = key will affect  
 the TV, even though  
 the remote  
 control  
 is in another  
 mode.

\* Not available  
 for your  
 TV.

### Chapter 3: Using the remote control

## Remote Control functional key chart

**Note:**

- "—" = key does not send a signal in that remote control mode.
- "\*-TV" = key will affect the TV, even though the remote control is in another mode.
- \* Not available for your TV.

REMOTE CONTROL KEY	Toshiba TV	CABLE	SAT (satellite)	AUX 1 (VCR)
POWER	Power	Power	Power	Power

Chapter 3: Using the remote control

## Remote Control functional key chart

**Note:**

- "—" = key does not send a signal in that remote control mode.
- "TV" key will affect the TV, even though the remote control is in another mode.
- \* Not available for your TV.

REMOTE CONTROL KEY	Toshiba TV	CABLE	SAT (satellite)	AUX 1 (VCR)
POWER	Power	Power	Power	Power
SLEEP	Sleep timer	← TV	← TV	← TV
PIC SIZE	Picture size	← TV	← TV	← TV
FREEZE	FREEZE	← TV	← TV	← TV
1-9	Digit 1-9	Digit 1-9	Digit 1-9	Digit 1-9
0	Digit 0	Digit 0	Digit 0	Digit 0
100 (+) 0	– (sub CH)	---	– (sub CH)	100
INPUT	TV/video select	← TV	← TV	← TV
FAV BROWSER	FAV BROWSER	---	---	---
TOP MENU	DVD TOP Menu*	---	---	---
MUTE	Sound mute	← TV	← TV	← TV
SET UP/GUIDE	Guide*	---	SAT Guide	---
VOL +/–	Volume up/down	← TV	← TV	← TV
CH▲▼	Channel up/down	Channel up/down	Channel up/down	Channel up/down
RECALL	Previous channel	← TV	← TV	← TV
CH RTN/DVD RTN	DVD previous menu*	---	---	---
INFO	Info	---	Info	---
ENTER	Enter	---	Select, Enter	---
▲▼	Menu up/down	---	Menu up/down	---
◀	Menu left/Channel Browser™	---	Menu left	---
▶	Menu right/Channel Browser™	---	Menu right	---
MENU	Menu	---	Action Menu	---
EXIT/DVD CLEAR	Exit	---	Exit	---
PAUSE/STEP	DVD clear*	---	---	---
PLAY	Pause*	---	---	Pause
STOP	Play*	---	---	Play
SKIP ⏮	Stop*	---	---	Stop
SKIP ⏭	Skip REV*	---	---	---
REW	Skip FWD*	---	---	---
FF	Rewind*	---	---	Rewind
TV/VCR/SEARCH	Fast FWD*	---	---	Fast FWD
REC	DVD search*	---	---	TV/VCR
RESUME PLAY	REC MENU*	---	---	Record (2 cli
SLOW +	---	---	---	---
ANGLE	SLOW FWD*	---	---	---
SUB TITLE	Angle*	---	---	---
AUDIO	Sub title*	---	---	---
	Audio*	---	---	---

Power  
Sleep timer  
Picture size  
FREEZE  
Digit 1-9  
Digit 0  
– (sub CH)  
TV/video select  
FAV BROWSER  
DVD TOP Menu\*  
Sound mute  
Guide\*  
Volume up/down  
Channel up/down  
RECALL  
Previous channel  
DVD previous menu\*  
Info  
Enter  
Menu up/down  
Menu left/Channel Browser™  
Menu right/Channel Browser™  
Menu  
Exit  
DVD clear\*  
Pause\*  
Play\*  
Stop\*  
Skip REV\*  
Skip FWD\*  
Rewind\*  
Fast FWD\*  
DVD search\*  
REC MENU\*  
SLOW FWD\*

ManualsLib.com

## Chapter 3: Using the remote control

## Remote Control functional key chart

**Note:**

- "---" = key does not send a signal in that remote control mode.
- "← TV" = key will affect the TV, even though the remote control is in another mode.
- \* Not available for your TV.

REMOTE CONTROL KEY	Toshiba TV	CABLE	SAT (satellite)	AUX 1 (VCR)
POWER	Power	Power	Power	Power
SLEEP	Sleep timer	← TV	← TV	← TV
PIC SIZE	Picture size	← TV	← TV	← TV
FREEZE	FREEZE	← TV	← TV	← TV
1-9	Digit 1-9	Digit 1-9	Digit 1-9	Digit 1-9
0	Digit 0	Digit 0	Digit 0	Digit 0
100/-/+10	– (sub CH)	---	– (sub CH)	100
INPUT	TV/Video select	← TV	← TV	← TV
FAV BROWSER/ TOP MENU	FAV BROWSER DVD TOP Menu*	---	---	---
MUTE	Sound mute	← TV	← TV	← TV
SET UP/GUIDE	Guide*	---	SAT Guide	---
VOL +/–	Volume up/down	← TV	← TV	← TV
CH▲▼	Channel up/down	Channel up/down	Channel up/down	Channel up/down
RECALL	Channel recall	← TV	← TV	← TV
CH RTN/DVD RTN	Previous channel DVD previous menu*	---	---	---
INFO	Info	---	Info	---
ENTER	Enter	---	Select, Enter	---
▲▼	Menu up/down	---	Menu up/down	---
◀	Menu left/ Channel Browser™	---	Menu left	---
▶	Menu right/ Channel Browser™	---	Menu right	---
MENU	Menu	---	Action Menu	---
EXIT/DVD CLEAR	Exit DVD clear*	---	Exit	---
PAUSE/STEP	Pause*	---	---	Pause
PLAY	Play*	---	---	Play
STOP	Stop*	---	---	Stop
SKIP ◀▶	Skip REV*	---	---	---
SKIP ▶▶	Skip FWD*	---	---	---
REW	Rewind*	---	---	Rewind
FF	Fast FWD*	---	---	Fast FWD
TV/VCR/ SEARCH	DVD search*	---	---	TV/VCR
REC	REC MENU*	---	---	Record (2 cli
RESUME PLAY	---	---	---	---
SLOW +	SLOW FWD*	---	---	---
ANGLE	Angle*	---	---	---
SUB TITLE	Sub title*	---	---	---
AUDIO	Audio*	---	---	---

Angle\*  
Sub title\*  
Audio\*  
Eject\*  
Power  
TV  
TV  
TV  
Digit  
1-9  
Digit 0  
TV  
TV  
TV  
Channel  
up/down  
TV  
Power  
TV  
TV  
TV  
Digit  
1-9  
Digit 0  
100  
TV  
TV  
TV  
Channel  
up/down  
TV  
Power  
TV  
TV  
TV  
Digit  
1-9  
Digit 0  
- (sub CH)  
TV  
TV  
SAT Guide  
TV  
Channel  
up/down  
TV  
Info  
Select, Enter  
Menu  
up/down  
Menu left  
Menu right  
Action Menu  
Exit  
Power  
TV  
TV  
TV  
Digit  
1-9  
Digit 0  
+10  
TV  
Top Menu  
TV  
Setup  
TV  
Channel  
up/down  
TV  
DVD Return  
Display  
Enter  
Menu  
.....  
up/down  
.....  
Menu left  
Menu right  
Pause  
Play  
Stop  
Rewind  
Fast FWD  
TV/VCR  
Record  
(2 click)

DVD Menu  
DVD Clear  
Pause  
Play  
Stop  
Skip REV  
Skip FWD  
Rewind  
Fast FWD  
DVD search  
Record  
(2 click)  
Resume  
Play  
SLOW FWD  
DVD Angle  
DVD Sub title  
DVD Audio  
DVD Eject  
23

### Chapter 3: Using the remote control

## Remote Control functional key chart

**Note:**

- "----" = *key does not send a signal in that remote control mode.*

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

[1](#)  
[...](#)  
[20](#)  
[21](#)  
[22](#)  
[23](#)  
[24](#)  
[25](#)  
[26](#)  
[27](#)

Quick Links:

[Features of Your New Tv](#)

[Front/Side Panel Controls and Connections](#)

[Tv Back Panel Connections](#)

[Using the Tv's Features](#)

## Related Manuals for Toshiba REGZA 32RV530U

[LCD TV Toshiba 32RV530U Service Manual](#)

(134 pages)

[LCD TV Toshiba Regza 32RV530U Owner's Manual](#)

Integrated high definition lcd television (78 pages)

[LCD TV Toshiba 2XF550U Owner's Manual](#)

Toshiba integrated high definition lcd television owner's manual (74 pages)

[LCD TV Toshiba Regza 32RV530U Specifications](#)

1080p full hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba 46RV530U Service Manual](#)

Lcd color television (16 pages)

[LCD TV Toshiba Regza 37RV530U Specifications](#)

1080p full hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba Regza 42RV530U Specifications](#)

42.0" diagonal 1080p hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba Regza 46RV530U Specifications](#)

46.0" diagonal 1080p hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba Regza 52RV530U Specifications](#)

52.0" diagonal 1080p hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba 32RV525RZ Owner's Manual](#)

Integrated high definition lcd television (64 pages)

[LCD TV Toshiba 46RV525RZ Owner's Manual](#)

Integrated high definition lcd television (70 pages)

[LCD TV Toshiba 32RV525RZ Service Material And Reference Tips](#)

(10 pages)

[LCD TV Toshiba 40RL900A Owner's Manual](#)

(72 pages)

[LCD TV Toshiba 32R3500P Service Manual](#)

(168 pages)

[LCD TV Toshiba RL939 Digital Series Manual](#)

(90 pages)

[LCD TV Toshiba REGZA 32RL833G Manual](#)

(78 pages)

## Related Content for Toshiba REGZA 32RV530U

[40L543 DG Series The Remote Control](#)

Toshiba 40L543 DG Series

[32W2863DA Remote Control](#)

Toshiba 32W2863DA

[37AV504D Using The Remote Control](#)

Toshiba 37AV504D

[32WL68P The Remote Control](#)

Toshiba 32WL68P

[24 LL Series Remote Control](#)

Toshiba 24 LL Series

[24D143 DG Series The Remote Control \(Tv - Dvd\)](#)

Toshiba 24D143 DG Series

[32L153 DG Series The Remote Control](#)

Toshiba 32L153 DG Series

[40L543 DG Series The Remote Control](#)

Toshiba 40L543 DG Series



This manual is also suitable for:

Regza 46rv530uRegza 37rv530uRegza 52rv530uRegza 42rv530u

[Save PDF](#)