



# Selecting The Optical Audio Output Format; Using The Dolby ® Digital Dynamic; Using the Locks Menu; Entering The Pin Code - Toshiba REGZA 32RV530U Owner's Manual

Integrated high definition lcd television



1  
2  
3  
4  
5  
6  
Table Of Contents  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68

69



•

[Table of Contents](#)

•

## Bookmarks







## Selecting the optical audio output format

You can use this feature to select the optical audio output format when you connect a Dolby Digital decoder or other digital audio system to the DIGITAL AUDIO OUT terminal on the TV (see "Connecting a digital audio system" on page 18).

To select the optical audio output format:

- 1
- 2
- 3
- 0.

In the Optical Output Format field, select either Dolby Digital or PCM, depending on your device.

To save the new settings, highlight Done and press @.

To revert to the factory defaults, highlight Reset and

## Selecting the optical audio output format

You can use this feature to select the optical audio output format when you connect a Dolby Digital decoder or other digital audio system to the **DIGITAL AUDIO OUT** terminal on the TV (see "Connecting a digital audio system" on page 18).

**To select the optical audio output format:**

## Chapter 6: Using the TV's features

### Using the Locks menu

The Locks menu includes the Enable Rating Limits, Channels Block, Input Lock, Game Timer, and New PIN (these features after entering the code).

### Entering the PIN code

press @.

### Using the Dolby® Digital Dynamic Range Control feature

This dynamic range control feature causes the ATSC dynamic range to be further compressed, allowing you to switch from digital to analog broadcasts at the same dynamic range.

To use the Dolby Digital Dynamic Range Control:

- 1
- 2
- 3

From the Audio menu, highlight **Audio Setup** and press

@.

In the Dolby Digital Dynamic Range Control field, select

Compressed.

When Standard is selected, the

audio is output with minimal compression.

To save the new settings, highlight **Done** and press @.

To revert to the factory defaults, highlight **Reset** and

press @.




Note:

- This item will be grayed out for NTSC signals, Video, ColorStream, HDMI, and PC inputs.
- The Dolby Digital Dynamic Range Control will function in relation to Optical Output Format (PCM mode).

### Selecting the optical audio output format

You can use this feature to select the optical audio output format when you connect a Dolby Digital decoder or other digital audio system to the **DIGITAL AUDIO OUT** terminal on the TV (see "Connecting a digital audio system" on page 18).

 
#### To select the optical audio output format:

- 1 From the **Audio** menu, highlight **Audio Setup** and press .
- 2 In the **Optical Output Format** field, select either **Dolby Digital** or **PCM**, depending on your device.
- 3 To save the new settings, highlight **Done** and press . To revert to the factory defaults, highlight **Reset** and press .

### Using the Dolby® Digital Dynamic Range Control feature

This dynamic range control feature causes the ATSC dynamic range to be further compressed, allowing you to switch from digital to analog broadcasts at the same dynamic range.

#### To use the Dolby Digital Dynamic Range Control:

- 1 From the **Audio** menu, highlight **Audio Setup** and press .
- 2 In the **Dolby Digital Dynamic Range Control** field, select **Compressed**. When **Standard** is selected, the audio is output with minimal compression.
- 3 To save the new settings, highlight **Done** and press . To revert to the factory defaults, highlight **Reset** and press .

#### Note:

- This item will be grayed out for NTSC signals, Video, ColorStream, HDMI, and PC inputs.
- The Dolby Digital Dynamic Range Control will function in relation to Optical Output Format (PCM mode).

- Enable Rating Blocking Off
- Edit Rating Limits
- h\_i
- gio
- Input Lock Off
- conioi Panel Lock
- .....
- Of
- Game Timer Off
- New PIN Code

Press V, which displays the PIN code entry screen.

- The Lock System

screen (below) appears if a PIN

code has not been stored. Press the Channel Number buttons to enter a new four-digit code, enter the code a second time to confirm, and press @.


- The Locks/Active screen appears if the PIN code is already

## Using the Locks menu

The Locks menu includes the Enable Rating Limits, Channels Block, Input Lock, Game Timer, and New PIN Code features after entering the cor

### Entering the PIN code


- 1 On the remote control or TV c highlight the **Locks** menu icon

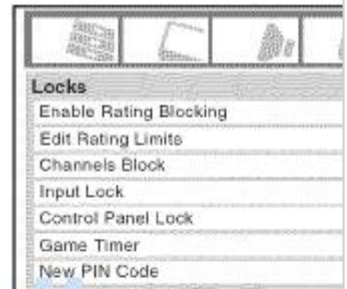


Press ▼, which displays the

- The **Lock System** screen (code has not been stored. Press buttons to enter a new four-second time to confirm, and



- The **Locks/Active** screen (already stored. Use the Num four-digit code and press .

If the wrong PIN code is entered, the "code, please try again!" appears. H . Enter the code again and press

When the correct PIN code is enter

### If you cannot remember

While the PIN code entering screen four times within five seconds. The and you can enter a new PIN code.

stored. Use the Number buttons to enter your four-digit code and press **\_**.

If the wrong PIN code is entered, the message "Incorrect PIN code, please try again!" appears. Highlight **Retry** and press **@**. Enter the code again and press **@**.

When the correct PIN code is entered, the **Locks** menu opens.

### If you cannot remember your PIN code

## Chapter 6: Using the TV's features

While the PIN code entering screen is displayed, press **RECALL**.

four times within five seconds. The PIN code will be cleared and you can enter a new PIN code.

## Selecting the optical audio output format

46

You can use this feature to select the optical audio output format when you connect a Dolby Digital decoder or other

RV530U (ELF) Web 213:276

## Using the Locks menu

[Table of Contents](#)

Next Page

1  
...  
43  
44  
45  
**46**  
47  
48  
49  
50

Quick Links:

[Features of Your New Tv](#)

[Front/Side Panel Controls and Connections](#)

[Tv Back Panel Connections](#)

[Using the Tv's Features](#)

## Related Manuals for Toshiba REGZA 32RV530U

[LCD TV Toshiba 32RV530U Service Manual](#)

(134 pages)

[LCD TV Toshiba Regza 32RV530U Owner's Manual](#)

Integrated high definition lcd television (78 pages)

[LCD TV Toshiba 2XF550U Owner's Manual](#)

Toshiba integrated high definition lcd television owner's manual (74 pages)

[LCD TV Toshiba Regza 32RV530U Specifications](#)

1080p full hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba 46RV530U Service Manual](#)

Lcd color television (16 pages)

[LCD TV Toshiba Regza 37RV530U Specifications](#)

1080p full hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba Regza 42RV530U Specifications](#)

42.0" diagonal 1080p hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba Regza 46RV530U Specifications](#)

46.0" diagonal 1080p hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba Regza 52RV530U Specifications](#)

52.0" diagonal 1080p hd lcd tv with cinespeed (2 pages)

[LCD TV Toshiba 32RV525RZ Owner's Manual](#)

Integrated high definition lcd television (64 pages)

[LCD TV Toshiba 46RV525RZ Owner's Manual](#)

Integrated high definition lcd television (70 pages)

[LCD TV Toshiba 32RV525RZ Service Material And Reference Tips](#)

(10 pages)

[LCD TV Toshiba 40RL900A Owner's Manual](#)

(72 pages)

[LCD TV Toshiba 32R3500P Service Manual](#)

(168 pages)

[LCD TV Toshiba RL939 Digital Series Manual](#)

(90 pages)

[LCD TV Toshiba REGZA 32RL833G Manual](#)

(78 pages)

## Related Content for Toshiba REGZA 32RV530U

[Regza 40XV645U Selecting The Optical Audio Output Format](#)

Toshiba Regza 40XV645U

[Regza 32RV530U Selecting The Optical Audio Output Format](#)

Toshiba Regza 32RV530U

[Regza42RV535U Selecting The Optical Audio Output Format](#)

Toshiba Regza42RV535U

[26HL47 Selecting The Optical Audio Output Format](#)

Toshiba 26HL47

[22AV500U Selecting The Optical Audio Output Format](#)

Toshiba 22AV500U

[22AV60U Selecting The Optical Audio Output Format](#)

Toshiba 22AV60U

[47TL515U Selecting The Optical Audio Output Format](#)

Toshiba 47TL515U

[40UL605U Selecting The Optical Audio Output Format](#)

Toshiba 40UL605U

This manual is also suitable for:

Regza 46rv530uRegza 37rv530uRegza 52rv530uRegza 42rv530u

[Save PDF](#)