

 
TOSHIBA

Toshiba Regza WL68 Owner's Manual

Lcd flat panel tv

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28



•

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Owner's Manual](#)



TOSHIBA

WL68

Owner's manual

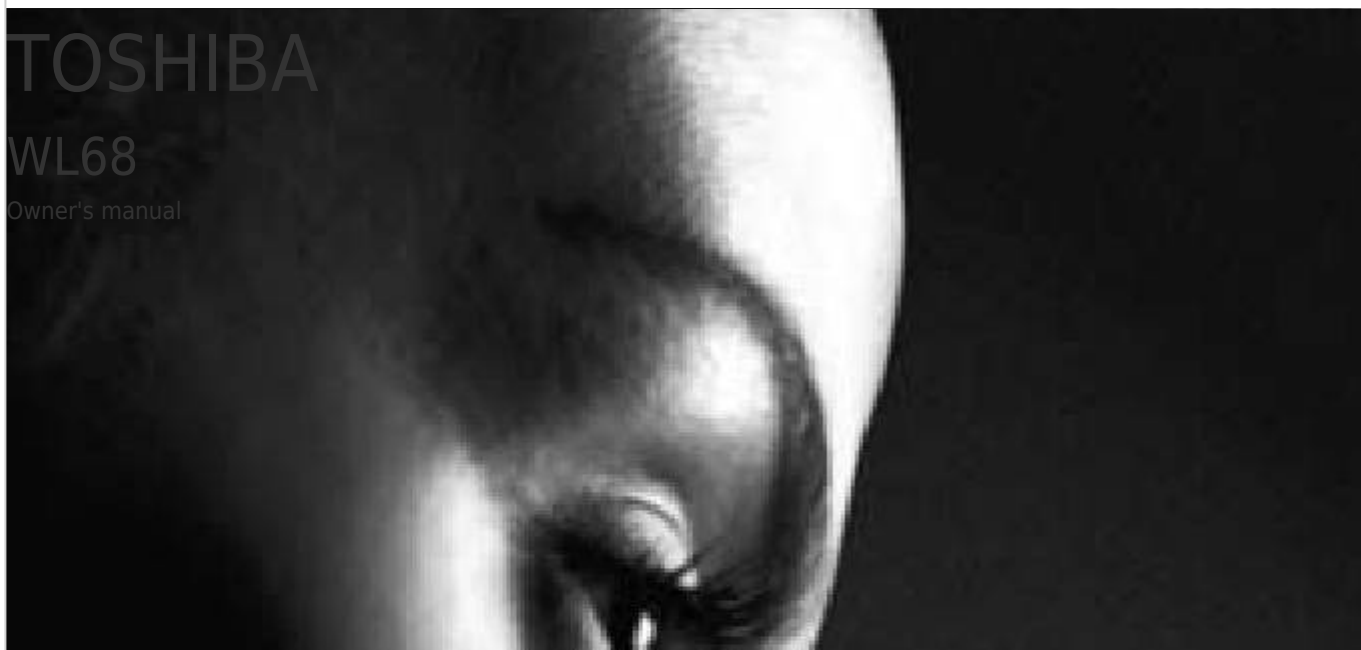


Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba Regza WL68

[LCD TV Toshiba WL68 Owner's Manual](#)

(196 pages)

[Universal Remote Toshiba VX1A00016500 Quick Setup Manual](#)

(2 pages)

[LCD TV Toshiba WL66 Series Owner's Manual](#)

Toshiba wl66 remote control owner's manual (28 pages)

[LCD TV Toshiba WL66/67 Owner's Manual](#)

Toshiba lcd tv regza owner's manual (29 pages)

[LCD TV Toshiba REGZA WL66 Series Owner's Manual](#)

(28 pages)

[LCD TV Toshiba WLT66 Series Owner's Manual](#)

Toshiba crt television user manual (40 pages)

[LCD TV Toshiba 46WX800 Owner's Manual](#)

Integrated high definition lcd television (106 pages)

[LCD TV Toshiba L43** Digital Series User Manual](#)

(94 pages)

[LCD TV Toshiba W43 Digital Series User Manual](#)

(90 pages)

[LCD TV Toshiba Regza WL75 Digital Series Manual](#)

(78 pages)

[LCD TV Toshiba Regza WL75 DIGITAL Series Manual Del Usuario](#)

(78 pages)

[LCD TV Toshiba Regza WLG66 Series Owner's Manual](#)

Regza wlg66/67 series (116 pages)

[LCD TV Toshiba L243 D Owner's Manual](#)

Digital series (59 pages)

[LCD TV Toshiba WL56 Series Service Manual](#)

(111 pages)

[LCD TV Toshiba 24 LL Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba WK3C63DA Operating Instructions Manual](#)

(50 pages)

Summary of Contents for Toshiba Regza WL68

[Page 1](#) TOSHIBA WL68 Owner's manual...

[Page 2: Table Of Contents](#)

SETTING UP Safety precautions - Some do's and don'ts for you to be aware of Installation and important information The remote control - an at-a-glance guide Connecting external equipment - a guide to connecting external equipment to the back of the television Connecting a computer -...

[Page 3: Safety Precautions - Some Do's And Don'ts For You To Be Aware Of](#)

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

[Page 4: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 5: The Remote Control - An At-A-Glance Guide](#)

Number buttons To return to the previous programme Widescreen viewing On-screen Menus To select mode No function on this model No function on this model When using a TOSHIBA VCR or DVD: press to PAUSE/STEP press to PLAY press to REWIND...

[Page 6: The Television](#)

Connecting external equipment Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket. SCART 2 (EXT2) SCART 1 (EXT1) decoder* media recorder Aerial cables: Connect the aerial to the socket on the rear of the television.

[Page 7: Connecting A Computer - Connecting A Computer To The Back Of The Television](#)

Connecting a computer Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket. Computer Conversion adaptor if required (not supplied) Connect the PC cable from the computer to the PC terminal on the back of the television.

Page 8 Controls and input connections A wide variety of external equipment can be connected to the input sockets on the side of the television. Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the television may be used for some functions.

[Page 9: Tuning The Television Using Quick Setup - Language, Country](#)

Tuning the television using Quick Setup, sorting programme positions Before switching on the television put your decoder and media recorder to Standby if they are connected. To set up the television use the buttons on the remote control as detailed on page 5. Connect the television to the mains power.

[Page 10: Manual Tune](#)

The television can be tuned-in manually using Manual tuning. For example: if the television cannot be connected to a media recorder/decoder with a SCART lead or to tune-in a station on another System. Use left and right to move across the screen and select any of these Manual Tune options. Programme System Programme: The number to be pressed on the remote control.

[Page 11: Programme Skip](#)

When your media recorder signal is found, press left to move along to Station. With up, down, left and right put in the required characters, e.g. VCR. Manual tuning Station C 60 Store Back Watch TV MENU EXIT Press OK to store. Repeat for each programme position you want to tune or, press MENU to return to the list of channels and select the next number to tune.

[Page 12: Auto Tune](#)

Auto tune, general controls, sound controls Using Auto tuning To set up the television using Auto tuning, press MENU and use left or right to select the SET UP menu. SET UP Language Country Auto tuning Manual tuning AV connection Picture position Back Watch TV...

[Page 13: Srs Wow™ Sound Effects - Srs 3D, Focus, Trubass](#)

Sound controls effects, dual, stable sound Bass boost Bass boost enhances the depth of the sound on the TV speakers. The difference will only be noticeable on sound with a strong bass. In the SOUND menu press down to highlight Bass boost.

[Page 14: Widescreen Viewing](#)

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the button repeatedly to select between Wide, Super Live 2, Cinema 2, 4:3, Super Live 1, Cinema 1, Subtitle and 14:9. Please note: Whenever the MENU button is pressed the picture size settings will change while the menus are ON the screen.

[Page 15](#) Widescreen viewing Use this setting when watching a 14:9 14:9 Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast WIDE (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen.

[Page 16: Picture Controls - Picture Position, Back Light](#)

Picture position The picture position may be adjusted to suit personal preference and can be particularly useful for external inputs. In the SET UP menu press down until Picture position is highlighted. SET UP Language Country Auto tuning Manual tuning AV connection Picture position MENU...

[Page 17: Mpeg Noise Reduction \(Mpeg Nr\), Digital Noise Reduction \(Dnr\), Colour Temperature](#)

Picture controls Picture preferences This television offers the choice of personalising the picture style. Press to view the different styles available: Picture mode-1 to 3 are preset options and Picture mode-M stores your own settings: Select Picture settings from the PICTURE menu. Picture settings Back light Contrast...

[Page 18: Colour Management](#)

Picture controls Colour management When Colour management is selected it allows the 'Base colour adjustment' feature to become available. In the PICTURE menu press down to select Colour management. PICTURE Picture settings Colour management Base colour adjustment Active Backlight Control Cinema mode Active Vision M100 Back...

[Page 19: Blue Screen](#)

Picture controls Active Vision M100 When Active Vision M100 is selected this feature will reduce 'smearing' and on video sources will reduce picture judder. In the PICTURE menu press down to select Active Vision M100. PICTURE Picture settings Colour management Base colour adjustment Active Backlight Control Cinema mode...

[Page 20: Panel Lock - Disabling The Buttons On The Television](#)

Panel lock, time display, stereo/bilingual transmissions, the timer Panel lock Panel lock disables the buttons on the television. All buttons on the remote control can still be used. From the FUNCTION menu select Panel lock and choose On or Off using left or right. FUNCTION Teletext Panel lock...

[Page 21: Pc Setting - Picture Position, Clock Phase, Sampling Clock, Reset, Pc Media Windows](#)

PC settings - picture position, clock phase, sampling clock, reset, PC media windows Picture position The picture position may be adjusted to suit personal preference. Press to select PC, then select PC Setting from the SET UP menu. SET UP Language Country AV connection...

[Page 22: Input Selection And Av Connections - Input And Output Sockets For Connected Equipment](#)

Defining the INPUT and OUTPUT sockets so that the television recognises connected equipment. See page 6 for a clear view of the back connection recommendations. Most media recorders and decoders send a signal through the SCART lead to switch the television to the correct Input socket.

[Page 23](#) Input selection and AV connections PC audio In order to receive sound from a connected PC, plug the audio cable into the back of the television (as shown in 'Connecting a computer' section), then use the PC/HDMI1 audio settings. In the SET UP menu press down until AV connection is highlighted, then press OK.

[Page 24: Setting Up, General Information, Auto. And List Modes](#)

For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. The four coloured choices at the bottom of the screen are numbers - 100, 200, 300 and 400, which have been programmed into the television's memory.

[Page 25: Text Services](#)

Below is a guide to the functions of the remote control text buttons. To display the index/initial page: Press to access the index/initial page. The one displayed is dependant on the broadcaster. To display a page of text: Press to display text. Press again to view a normal broadcast picture on the left of the screen and text to the right.

[Page 26](#) Below are the answers to some of the most common queries. For more information go to www.toshiba.co.uk Why is there no sound or picture? Check the mains switch is on and check all mains connections. Check the television is not in standby mode.

[Page 27: Cleaning The Screen And Cabinet](#)

Questions Why are there horizontal stripes and/or blurred images on the screen when in PC mode? The Clock phase may need adjustment. Select PC Setting from the SET UP menu, highlight Clock phase and adjust until the picture clears. Why are there problems with text? Good performance of text depends on a good strong broadcast signal.

[Page 28: Specifications And Accessories](#)

19kg 25kg 3.5mm stereo Remote control 2 batteries (AAA, IEC R03 1.5V) © Toshiba Information Systems (U.K.) Limited All rights reserved. Consumer Products Division, European Service Centre, Admiralty Way, Camberley, Surrey, GU15 3DT, UK Specification is subject to change without notice.