

TOSHIBA

Toshiba SD-43HK Owner's Manual

Toshiba home cinema system sd-43hk owner's manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25

•

-

Troubleshooting

•

Bookmarks

--

Quick Links


- [1 Connecting the Speakers](#)
- [2 Connecting to a Tv](#)
- [3 Connecting the Optical Equipment](#)
- [4 Setup Functions](#)
- [5 Speaker Setup](#)
- [6 To Set up Speaker Balance](#)

[7 Troubleshooting](#)

[8 Specifications](#)

[Download this manual](#)

[See also: Owner's Manual](#)

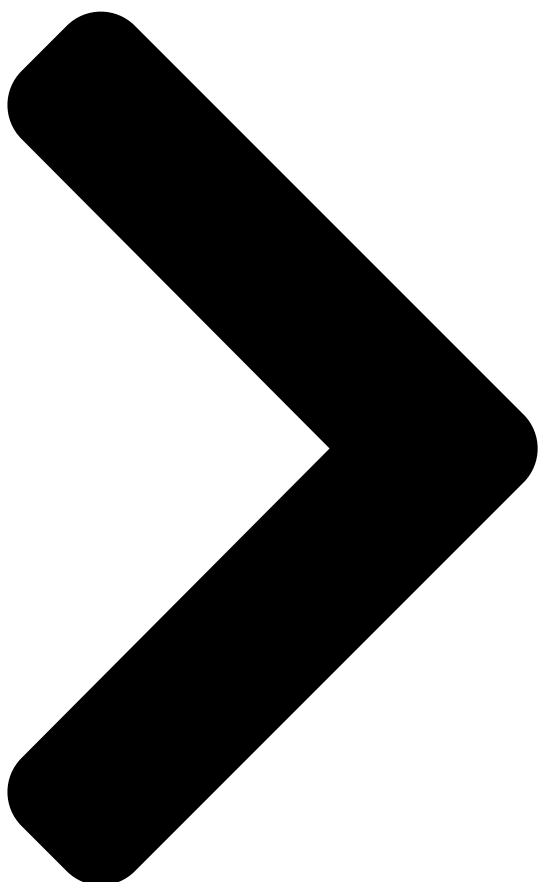

AH68-01289C

DVD HOME CINEMA SYSTEM SD-43HK

COMPACT
DIGITAL AUDIO
VIDEO

Before connecting, operating or adjusting this product, please
read this instruction booklet carefully and completely.


OWNER'S MANUAL

COMPACT
DIGITAL VIDEO

TOSHIBA

ManualsLib.com

TOSHIBA

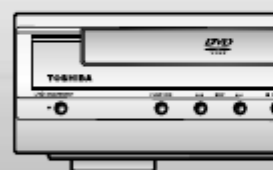

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-43HK

[Home Theater System Toshiba SD-43HK Owner's Manual](#)

(46 pages)

[Home Theater System Toshiba SD-43HT Service Manual](#)

Dvd home theater system (71 pages)

[Home Theater System Toshiba SD-43HT Owner's Manual](#)

Dvd home theater system (25 pages)

[Home Theater System Toshiba SD-44HKSE Owner's Manual](#)

Toshiba dvd home cinema system owner's manual sd-44hkse (34 pages)

[Home Theater System Toshiba SD-44HKSB Service Manual](#)

Dvd home cinema system (131 pages)

[Home Theater System Toshiba SD-47HKSR Service Manual](#)

Dvd home cinema theater (18 pages)

[Home Theater System Toshiba SD-47HKSR Service Manual](#)

Dvd home cinema theater (18 pages)

[Home Theater System Toshiba SD-47HKSR Service Manual](#)

(18 pages)

[Home Theater System Toshiba SD-43HKSE Service Manual](#)

(74 pages)

[Home Theater System Toshiba SD-44HKSB Owner's Manual](#)

(35 pages)

[Home Theater System Toshiba SD-43SHT Service Manual](#)

(88 pages)

[Home Theater System Toshiba SD-C67HTSU Owner's Manual](#)

Toshiba home theater system user manual (46 pages)

[Home Theater System Toshiba SD-63HK Owner's Manual](#)

Toshiba dvd home cinema kit owner's manual (40 pages)

[Home Theater System Toshiba SD-V55HTSU Service Manual](#)

Dvd/vcr home theater system (162 pages)

[Home Theater System Toshiba SD-V55HTSU Circuit Diagrams](#)

Dvd/vcr (76 pages)

[Home Theater System Toshiba SD-57HTKR Service Manual](#)

(27 pages)

Summary of Contents for Toshiba SD-43HK

[Page 1](#) OWNER'S MANUAL AH68-01289C DVD HOME CINEMA SYSTEM SD-43HK COMPACT COMPACT DIGITAL VIDEO DIGITAL AUDIO V I D E O Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely.

[Page 2: Safety Warnings](#)

Safety Warnings Use of controls, adjustments or performance of procedures other CLASS 1 LASER PRODUCT than those specified herein may result in hazardous radiation KLASSE 1 LASER PRODUKT exposure. LUOKAN 1 LASER LAITE KLASSE 1 LASER APPARAT PRODUCTO LASER CLASE 1 CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID

[Page 3: Table Of Contents](#)

Because of problems and errors that can occur during the creation of DVD software and or the manufacture of DVD discs, Toshiba cannot guarantee that this player will play every feature of every DVD bearing the DVD logo. As one of the creators of DVD technology, Toshiba DVD players are manufactured to the highest standards of quality and, as a result, such incompatibilities are very rare.

[Page 4: Description](#)

Description Front Panel ON/STANDBY indicator ON/STANDBY button FUNCTION button DISC TRAY STOP () button OPEN/CLOSE button PLAY/PAUSE () button TUNING DOWN & SKIP () buttons TUNING UP & SKIP () buttons Display TUNER indicator DTS Disc indicator INFO indicator MPEG indicator indicator...

[Page 5: Remote Control](#)

Remote Control TUNER button SUBTITLE button SETUP button OPEN/CLOSE button AUDIO button DVD button TOP MENU button CLEAR button PLAY/PAUSE button STEP button UNING PRESET/CD SKIP button PROGRAM button SLOW button RDS Selection button DPL II button TEST TONE button SOUND EDIT button SPK MODE button SLEEP button...

[Page 6: Connecting The Speakers](#)

Connecting the Speakers Turn off the Power first and set the volume knob to low initially before connecting. Right front speaker Left front speaker • Connect the speakers using the supplied speaker Center speaker cords by matching the colors of the terminals and those of the cords.

[Page 7: Connecting To A Tv](#)

Connecting to a TV Please turn off the Power of your TV, DVD receiver and other equipment before doing any connections. Set the volume to low initially. Rear of TV Note The video output of this unit may vary depending on the TV video format (NTSC or PAL) in use. •...

[Page 8: Connecting The Optical Equipment](#)

Connecting the Optical Equipment External Digital Components For connection to external equipment with digital output. Example: CD recorders, MD (Mini Disc) D/A converters or other components equipped with digital output jacks DIGITAL OUT (not supplied) Optical Cable Audio Cable (Red/White) If the external analog component has only one output jack, you may connect...

[Page 9: Dvd Playback](#)

DVD Playback Press the OPEN/CLOSE() button to open the disc tray. Insert a disc. • Place a disc gently into the tray with the disc's label facing up. Press the OPEN/CLOSE() button again to close the disc tray. •...

[Page 10: Mp3/Wma Cd Playback](#)

The technical criteria set out in this owner's manual are meant as a guide only. Customers should also not that permission is required in order to download MP3/WMA files and music from the internet. Toshiba has no right to grant such permission. Permission should always be sought from the copyright owner.

[Page 11: Forward/Reverse Searching](#)

Forward/Reverse Searching During playback, you can search quickly through a chapter or track for a specific scene or tune. Multi-Speed Playback Press the button. Each time the button is pressed Each time the 32 X PLAY Skipping through a Chapter Press the button.

[Page 12: Repeat Playback](#)

Repeat Playback Repeat playback allows you to repeat a chapter, title, or track. Playing Repeatedly Press the REPEAT button. Each time the REPEAT button is pressed Note • Repeat playback operation is not possible with version 2.0 VCD discs if PBC is turned on. To operate this feature, press the MENU button, and then select "PBC OFF".

[Page 13: Selecting The Audio Language/Subtitle Language](#)

Selecting the Audio Language/Subtitle Language Selecting the Audio Language Press the AUDIO button. • Depending on the number of languages recorded on a DVD disc, a different audio language (ENGLISH, SPANISH, FRENCH, etc.) is selected each time the button is pressed. •...

[Page 14: Jpeg File Playback](#)

JPEG File Playback Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this DVD player. Slide Show Function Place the JPEG disc on the disc tray. Press SLIDE SHOW(ZOOM) button.

[Page 15: Program Playback](#)

Program Playback Program allows you to store your favorite tracks for a particular disc in the player memory. To Program Tracks in a particular order Press the PROGRAM button while in the Insert the disc and close the tray. Stop mode. •...

[Page 16: Setup Functions](#)

Setup Functions You can install your own Personal Preferences. Initial Settings General Operation Press the SETUP button while Press the UP/DOWN (in Stop mode. to select the desired item. • • The setup menu appears. While the desired item is displayed, press the ENTER button.

[Page 17: Disc Language](#)

Setup Functions Press the UP/DOWN (Press the SETUP button while in Stop mode. to select the desired item. • • The setup menu appears. While the desired item is display, press the ENTER button. SETUP MENU -- MAIN PAGE SETUP MENU -- MAIN PAGE GENERAL SETUP GENERAL SETUP...

[Page 18: Speaker Setup](#)

Speaker Setup Setting up Speaker Mode and Delay Time Press the SPK MODE button. Press the LEFT/RIGHT (select the desired item. • Each time the button is pressed, a different mode selection is displayed on the front panel display as shown below. DIGITAL F SP SMALL Front speaker: Small...

[Page 19: To Set Up Speaker Balance](#)

To set up Speaker Balance You can set the sound level of the desired channel. To set up Speaker Balance Press the SOUND EDIT button. Each time the Use the LEFT/RIGHT (button is pressed, the selection switches as or lower the output level of the chosen shown below.

[Page 20: Dolby Pro Logic II Decoder](#)

Dolby Pro Logic II decoder Dolby Pro Logic II Dolby Pro Logic II is a new format for playing multichannel audio signals that offers improvements over conventional Dolby Pro Logic. It can be used to decode not only sources recorded in Dolby Surround, but also regular stereo sources into five channels (front left/right, center and surround left/right).

[Page 21: Listening To The Radio](#)

Listening to the Radio Preset radio stations in the DVD receiver's memory first (see "Presetting radio stations" on the Right side). Remote Press the TUNER button. Select a broadcast station. Control Unit • The selection toggles back When the Auto Station 1 and forth between "FM"...

[Page 22: About Rds Broadcasting](#)

About RDS broadcasting Using the RDS (Radio Data System) to receive FM stations RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.

[Page 23: Sleep Function](#)

Sleep Function To set up Sleep Press the SLEEP button. What is the Sleep function? • Each time the button is pressed the selection on the front panel toggles as follows: You can set the sleep time so that SLEEP 10 SLEEP 20 SLEEP 30 the unit powers off automatically...

[Page 24: Troubleshooting](#)

Troubleshooting Check the following guide for the possible cause of a problem before contacting service. Symptom Cause No power. • The power cord is disconnected. The power is on, but • No disc is inserted. the DVD receiver does not work. No picture.

[Page 25: Specifications](#)

Specifications Power Requirement AC 220~240V, 50/60Hz Power Consumption 120W Weight 7.0Kg Dimensions (W x H x D) 360 x 76 x 400 mm Operating Temperature Range +5°C ~ +35°C Operating Humidity Range 10% ~ 75% Usable Sensitivity 10dB S/N Ratio 55dB Distortion 0.3%...