



Toshiba SD-C67HTSU Owner's Manual

Toshiba home theater system user manual

1

2

3

Table Of Contents

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



SD-C67HTSU

DVD

Home Theater System
TOSHIBA
SD-C67HTSU

OWNER'S MANUAL



Before connecting, operating or adjusting this product,



please read this instruction booklet carefully and completely.

©2005 Toshiba Corporation

This device does not tape-record copy protected DVD Video Discs.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-C67HTSU

[Home Theater System Toshiba SD-C67HT Specifications](#)

Dvd changer home theater (2 pages)

[Home Theater System Toshiba SD-43HT Owner's Manual](#)

Dvd home theater system (25 pages)

[Home Theater System Toshiba SD-43HT Service Manual](#)

Dvd home theater system (71 pages)

[Home Theater System Toshiba SD-63HK Owner's Manual](#)

Toshiba dvd home cinema kit owner's manual (40 pages)

[Home Theater System Toshiba SD-43HK Owner's Manual](#)

(46 pages)

[Home Theater System Toshiba SD-43HK Owner's Manual](#)

Toshiba home cinema system sd-43hk owner's manual (25 pages)

[Home Theater System Toshiba SD-44HKSE Owner's Manual](#)

Toshiba dvd home cinema system owner's manual sd-44hkse (34 pages)

[Home Theater System Toshiba SD-44HKSB Service Manual](#)

Dvd home cinema system (131 pages)

[Home Theater System Toshiba SD-V55HT Owner's Manual](#)

Dvd/vcr home theater system (50 pages)

[Home Theater System Toshiba SD-V55HTSU Service Manual](#)

Dvd/vcr home theater system (162 pages)

[Home Theater System Toshiba SD-V55HTSU Circuit Diagrams](#)

Dvd/vcr (76 pages)

[Home Theater System Toshiba SD-47HKSR Service Manual](#)

Dvd home cinema theater (18 pages)

[Home Theater System Toshiba SD-47HKSR Service Manual](#)

Dvd home cinema theater (18 pages)

[Home Theater System Toshiba SD-47HKSR Service Manual](#)

(18 pages)

[Home Theater System Toshiba SD-57HTKR Service Manual](#)

(27 pages)

[Home Theater System Toshiba SD-43HKSE Service Manual](#)

(74 pages)

Summary of Contents for Toshiba SD-C67HTSU

[Page 1: Home Theater System](#)

SD-C67HTSU Home Theater System SD-C67HTSU OWNER'S MANUAL Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely. ©2005 Toshiba Corporation This device does not tape-record copy protected DVD Video Discs.

[Page 2](#) CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated

dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric...

[Page 3: Introduction](#)

IMPORTANT SAFETY INSTRUCTIONS 1. Read these instructions. - All these safety and operating instructions should be read before the product is operated. 2. Keep these instructions. - The safety, operating and use instructions should be retained for future reference. 3. Heed all warnings. - All warnings on the product and in the operating instructions should be adhered 4.

[Page 4: Table Of Contents](#)

Contents Introduction ...3-11 IMPORTANT SAFETY INSTRUCTIONS ..3 Symbol used in this Manual5 About the Symbol Display Notes on Discs .

[Page 5: Symbol Used In This Manual](#)

Introduction To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. This manual provides information on the operation and maintenance of your DVD Home Theater System. Should the unit require service, contact an authorized service location.

[Page 6: Types Of Playable Discs](#)

Because of problems and errors that can occur during the creation of DVD and Video CD software and/or the manufacture of DVD and Video CD discs, Toshiba cannot guarantee that this DVD Home Theater System will play every feature of every DVD bearing the DVD logo and/or every Video CD bearing the CD logo.

[Page 7: Remote Control Operation Range](#)

Disc-related terms VCD (Video CD) A VCD holds up to 74 minutes (650 MB disc) or 80 minutes (700 MB disc) of MPEG-1 full-motion video along with quality stereo sound. MPEG MPEG is an international standard for video and audio compression.

[Page 8: Front Panel](#)

Front Panel POWER button and indicator Switches the unit ON and OFF. Green when the unit is turns on. Red when the unit is at standby. Drawer Insert a disc here. Point the unit here. Opens or closes the Drawer. Select the unit's function mode.

[Page 9: Display Window](#)

Display Window DISC INDICATORS Flashes when a disc is loaded in the disk tray. Indicates sound mode is DOLBY PRO LOGIC or DOLBY PRO LOGIC II. Indicates encoding format of the current disc. Indicates the unit is playing back a disc or indicates the unit is pause playback of a disc temporarily.

[Page 10: Remote Control](#)

Remote Control POWER Turns DVD Home Theater System ON and OFF. Select the DVD Home Theater System's function mode to DVD. FM/AM Select FM or AM band as the listening choice. (FM and AM bands). Selects external input source. (AV1 or AV2) Disc buttons (1-5) HDMI...

[Page 11: Rear Panel](#)

Rear Panel AC Power Cord Plug into the power source. SPEAKER CONNECTORS Connect the six supplied speakers to these terminals. SPEAKERS FRONT REAR REAR FRONT MONITOR WOOFER CENTER S-VIDEO COAXIAL S-VIDEO OUT (DVD OUT) Connect to an S-Video Input on TV. FOR DVD VIEWING ONLY.

[Page 12: Installation And Setup](#)

Installation and Setup Setting up the DVD Home Theater System The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. If this occurs, position the DVD Home Theater System away from the TV, VCR, or radio, or turn off the unit after removing the disc.

[Page 13: Audio Connection To Optional Equipment](#)

Audio Connection to Optional Equipment Connect the DVD Home Theater System to your optional equipment for audio output. 1. Connect a VCR to the AV IN connectors (rear). 2. Connect an additional VCR to the LINE IN 2 connectors (front). 3.

[Page 14: Antenna Connections](#)

Antenna Connections Connect the supplied FM/AM antenna for listening to the radio. Connect the AM Loop antenna to the AM antenna connector. Connect the FM Wire antenna to the FM antenna connector. SPEAKERS FRONT REAR REAR FRONT WOOFER CENTER Notes: To prevent noise pickup, keep the AM Loop antenna away from the DVD/CD receiver and other components.

[Page 15: Hdmi Connection](#)

HDMI Connection If you have a HDMI TV or monitor, you can connect it to this DVD Home Theater System using a HDMI cable. 1. Connect the HDMI OUT jack on the Home Theater System to the HDMI jack on a HDMI compatible TV or monitor (H).

[Page 16: Speaker System Connection](#)

Speaker System Connection Connect the speakers using the supplied speaker cords. To obtain the best possible surround sound, adjust the speaker parameters (volume, distance, etc.). Notes: Be sure to match the speaker cable to the appropriate terminal on the components: + to + and - to -. If the cables are reversed, the sound will be distorted and will lack base.

[Page 17: Speaker Positioning](#)

Speaker Positioning In the case of normal position use the 6 speakers (2 front speakers, centre speaker, 2 rear speakers and subwoofer). If you want to play the excellent bass sound, DTS digital surround or Dolby Digital surround, you should connect a subwoofer.

[Page 18: Selecting The Input/Output Source](#)

Selecting the Input/Output Source AM/FM Follow these guidelines to select and switch among the various DVD Home Theater System input and output sources: • DVD/CD To view output from the DVD deck: Press DVD on the remote or FUNCTION on the front panel until the DVD indicator on the front panel lights and output from the DVD deck is viewed on the TV screen.

[Page 19: Mini Glossary For Audio Stream & Surround Mode](#)

Mini Glossary for Audio Stream & Surround Mode Allows you to enjoy 5.1(or 6) discrete channels of high quality digital audio from DTS program sources such as discs, DVD and compact discs, etc.bearing the trademark. DTS Digital Surround delivers up to 6 channels of transparent audio(which means identical to the original masters) and results in exceptional clarity throughout a true 360 degree sound field.

[Page 20: On-Screen Display](#)

On-Screen Display You can display the general playback status on the TV screen. Some items can be changed using the menu. To use the on-screen display: 1. Press DISPLAY during playback. 2. Press v / V to select an item. The selected item is highlighted.

[Page 21: Initial Settings](#)

Initial Settings By using the Setup menu, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, see pages 21 to 24. To display and exit the Menu: Press SETUP to display the menu.

[Page 22: Tv Aspect](#)

DISPLAY DISPLAY TV Aspect 16 : 9 Display Mode Widescreen Move TV Aspect 4:3: Select when a standard 4:3 TV is connected. 16:9 Wide: Select when a 16:9 wide TV is connected. Display Mode Display Mode setting works only when the TV Aspect mode is set to "4:3".

[Page 23: Lock \(Parental Control\)](#)

LOCK (Parental Control) LOCK Rating Unlock Password Country Code Move Rating Some movies contain scenes that may not be suitable for children to view. Many of these discs contain

parental control information that applies to the complete disc or to certain scenes on the disc. Movies and scenes are rated from 1 to 8, depending on the country.

[Page 24: Others](#)

OTHERS The DRC, Vocal, PBC, Auto Play, B.L.E., Pluge and DNR settings can be changed. OTHERS Auto Play B.L.E. Pluge Move Set Playback Control (PBC) to On or Off. On: Video CDs with PBC are played according to the PBC. Off: Video CDs with PBC are played the same way as Audio CDs.

[Page 25: Operation](#)

Operation Playback Setup Turn on the TV and select the video input source connected to the DVD Home Theater System. TO INSERT DISCS 1. Press OPEN/CLOSE on the unit. "OPEN SEL" will appear in the display window. 2. Press the desired DISC (1-5) on the unit. The selected disc tray number will appear in the display window and on the TV screen.

[Page 26: Playing A Dvd Or Video Cd](#)

Playing a DVD or Video CD Use the b B v V buttons to select the title/chapter you want to view, then press ENTER to start. Press TOP MENU or MENU to return to the menu screen. Use the number buttons to select the track you want to view and press RETURN to return to the menu screen.

[Page 27: Still Picture And Frame-By-Frame Playback](#)

STILL PICTURE AND FRAME-BY-FRAME PLAYBACK 1. Press PAUSE/STEP on the remote control during playback. Advance the picture frame-by-frame by pressing PAUSE/STEP repeatedly. 2. To exit still motion mode, press PLAY(2 2). SLOW SCAN 1. Press SLOW - t or SLOW T + during playback.

[Page 28: Zoom](#)

ZOOM Use zoom to enlarge the video image. 1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture. 2. Each press of the ZOOM button changes the TV screen in the sequence: 100% size →...

[Page 29: Playing An Memory Card](#)

- It is recommended that you back up your memory card data. Toshiba is not liable for any damage caused by the use of any memory card with this DVD Home Theater System. Toshiba will not compensate for any lost data or recording(s) caused by the use of such cards.

[Page 30: Playing An Audio Cd Or Mp3/Wma Disc](#)

MP3 and WMA formats, prior to the downloading thereof. Toshiba has no right to grant and does not grant permission top download any copyrighted content.

[Page 31: Audio Cd And Mp3 / Wma Disc Features](#)

Audio CD/Memory card and MP3/ WMA Disc Features PAUSE 1. Press PAUSE/STEP during playback. 2. To return to playback, press PLAY(2 2), or press PAUSE/STEP again. MOVING TO ANOTHER TRACK 1. Press SKIP (. or >) briefly during playback to go to the next track or to return to the beginning of the current track.

[Page 32: Programmed Playback](#)

Programmed Playback The program function enables you to store your favorite tracks from any disc in the DVD Home Theater System memory. A program can contain 30 tracks. 1. Insert a disc. Audio CD/Memory card or MP3/WMA Discs: AUDIO CD/Memory card or MUSIC menu appears. 2.

[Page 33: Viewing A Jpeg Disc](#)

Viewing a JPEG Disc Using this DVD Home Theater System you can view discs with JPEG files. 1. Insert a disc and close the tray. The PHOTO menu appears on the TV screen. PHOTO List Preview JPEG Folder 1 JPEG Folder 2 JPEG Folder 3 JPEG Folder 4 JPEG Folder 5...

[Page 34: Maintenance And Service](#)

Maintenance and Service Refer to the information in this chapter before contacting a service technician. HANDLING THE UNIT When shipping the unit Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

[Page 35: Additional Features](#)

Additional Features LAST SCENE MEMORY This receiver memorizes last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the receiver or switch off the receiver. If you load a disc that has the scene memorized, the scene is automatically recalled.

[Page 36: 5.1 Speaker Setup](#)

5.1 Speaker Setup This chapter includes important reference information to help you set your DVD Home Theater System. Speaker Setup Make the following settings for the built-in 5.1 channel surround decoder. 1. Press SETUP. The setup menu appears. 2. Use v / V to select the AUDIO option then press B to move to the second level.

[Page 37: Presetting The Radio Stations](#)

Presetting the Radio Stations You can preset 50 stations for AM (MW) and FM. Before tuning, make sure that you have turned down the volume. 1. Press AM/FM on the remote control until AM (MW) or FM appears in the display window. 2.

[Page 38: Setting The Tv Control Codes](#)

Controlling Your TV with the Supplied Remote The remote control can be compatible with various brands of TV by setting their control codes. The TOSHIBA code has initially been set to control TOSHIBA TVs. SETTING TV CONTROL CODES 1. While holding down PROG/MEMO. button, enter the two digits of your TV's brand code (listed on...

[Page 39](#) Controlling Your TV with the Supplied Remote (Continued) TABLE OF TV BRAND CODES Brand name of your TV Brand Code Toshiba Bell & Howell Carver Celebrity Citizen Curtis Mathes 09, 12 Dumont Electro band Emerson 09, 11 Fisher 02, 07, 11...

[Page 40: Reference](#)

Language Codes Use this list to input your desired language for the following initial settings: Disc Audio, Disc Subtitle, Disc Menu. Language Code Language Abkhazian 6566 Fiji Afar 6565 Finnish Afrikaans 6570 French Albanian 8381 Galician Ameharic 6577 Georgian Arabic 6582 German Armenian...

[Page 41: Troubleshooting](#)

Troubleshooting Check the following guide for the possible cause of a problem before contacting service. Symptom No power. • The power cord is disconnected. The power is on, but • No disc is inserted. the DVD Home Theater System does not work. •...

[Page 42](#) Symptom • The antenna is positioned or connected Radio stations cannot poorly. be tuned in. • The signal strength of the stations is too weak (when tuning in with automatic tuning). • No stations have been preset or preset stations have been cleared (when tuning by scanning preset stations).

[Page 43: Specifications](#)

Specifications Power supply Power consumption Mass External dimensions (W x H x D) Operating conditions Operating humidity Laser Signal system Frequency response (audio) Signal-to-noise ratio (audio) Dynamic range (audio) Harmonic distortion (audio) Video input Video output S-video output COMPONENT VIDEO OUT Tuning Range Intermediate Frequency Signal-to Noise Ratio...

[Page 44: Limited United States Warranty](#)

Limited United States Warranty Digital Audio Video ("DAV") Product - Exchange Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DAV PRODUCT AS A GIFT

FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 45](#) DAV Product to the TACP Warranty Exchange Center. For additional information, visit TACP's website: www.tacp.toshiba.com ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND...

[Page 46](#) ColorStream and ColorStream Pro are registered trademarks of Toshiba America Consumer Products, L.L.C. SmartMedia is a trademark of Toshiba Corp. Toshiba is an authorized license of the Compact Flash ® registered trademark. SD is a trademark of SD Card Association.

This manual is also suitable for:

[Sd-c67ht](#)