



# Maximizing Battery Life - Toshiba L20/L25 User Manual

Toshiba user's guide notebook computer I20/I25



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
Table Of Contents  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

 
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217



218  
219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240  
241  
242  
243  
244  
245  
246  
247  
248  
249  
250  
251  
252  
253  
254  
255  
256



•

[Table of Contents](#)

•

## Bookmarks





If a battery is leaking or damaged, replace it immediately.

Use protective gloves when handling a damaged battery. To replace the main battery, use an identical battery that you can purchase through the Toshiba Web site at [accessories.toshiba.com](http://accessories.toshiba.com).

A reverse polarity condition should be avoided with all batteries. The main battery is designed so that it cannot

be installed in reverse polarity.

Charge the battery only in the computer or in a battery charger designated as an approved option.

When you install the battery pack, you should hear a click when it is seated properly.

Do not expose the battery pack to fire. The battery pack could explode.

## Maximizing battery life

To maximize the life of your battery pack:

At least once a month, disconnect the computer from a power source and operate it on battery power until the battery pack fully discharges. Before doing so, follow the steps below:

- 1
- 2
- 3
- 4

Turn off the computer's power.

Disconnect the AC adapter and turn on the computer's power. If it does not turn on, go to step 4.

Operate the computer on battery power for five minutes. If the battery pack has at least five minutes of operating time, continue operating until the battery pack is fully discharged. If the battery light flashes or there is some other warning to indicate a low battery, go to step 4.

Connect the AC adapter to the computer and the power cord/cable to a power outlet. The battery indicator light will glow amber while the main battery is being charged, or glow green when the

## **Mobile Computing**

Taking care of your battery

# 121

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1

...

120

121

122

123

## Related Manuals for Toshiba L20/L25

### [Laptop Toshiba Satellite L20 Series Maintenance Manual](#)

Personal computer (264 pages)

### [Laptop Toshiba Satellite L20 Series User Manual](#)

(190 pages)

### [Laptop Toshiba Satellite L20-SP119 User Manual](#)

Portable personal computer (178 pages)

### [Laptop Toshiba Satellite L25-S119 Specifications](#)

Satellite l25 series (10 pages)

### [Laptop Toshiba Satellite L25-S1192 Specifications](#)

Satellite l25 series (10 pages)

### [Laptop Toshiba Satellite L25-S1193 Specifications](#)

Satellite l25 series (10 pages)

### [Laptop Toshiba Satellite L25-S1194 Specifications](#)

Satellite l25 series (10 pages)

### [Laptop Toshiba Satellite L25-S1195 Specifications](#)

Satellite l25 series (10 pages)

### [Laptop Toshiba Satellite L25-S1196 Specifications](#)

Satellite l25 series (10 pages)

### [Laptop Toshiba Satellite L25-S121 Specifications](#)

Toshiba satellite l25-s121: specifications (10 pages)

### [Laptop Toshiba Satellite L25-S1215 Specifications](#)

Toshiba satellite l25-s1215: specifications (10 pages)

### [Laptop Toshiba Satellite L25-S1216 Specifications](#)

Toshiba satellite l25-s1216: specifications (10 pages)

### [Laptop Toshiba Satellite L25-S1217 Specifications](#)

Toshiba satellite l25-s1217: specifications (10 pages)

### [Laptop Toshiba Satellite L20-S310TD Specifications](#)

Toshiba satellite l20-s310td: specifications (7 pages)

### [Laptop Toshiba L2-S022 User Manual](#)

L2-s022 user's guide (260 pages)

### [Laptop Toshiba Tecra L2-S022 Specifications](#)

Toshiba tecra l2-s022: specifications (7 pages)

## Related Content for Toshiba L20/L25

### [Satellite 1415 Series Maximizing Battery Life](#)

TOSHIBA Satellite 1415 Series

### [U205-S5002 - Satellite - Core Duo 1.66 GHz Maximizing Battery Life](#)

Toshiba U205-S5002 - Satellite - Core Duo 1.66 GHz

### [Tecra A7-ST5112 Maximizing Battery Life](#)

Toshiba Tecra A7-ST5112

### [Portege 2010 Maximizing Battery Life](#)

Toshiba Portege 2010

### [P105 S6197 - Satellite - Core 2 Duo 1.6 GHz Maximizing Battery Life](#)

Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz

[M45-S165 - Satellite - Celeron M 1.5 GHz Maximizing Battery Life](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

[M45 S169 - Satellite - Celeron M 1.6 GHz Maximizing Battery Life](#)

Toshiba M45 S169 - Satellite - Celeron M 1.6 GHz

[M105-S1021 - Satellite - Celeron M 1.46 GHz Maximizing Battery Life](#)

Toshiba M105-S1021 - Satellite - Celeron M 1.46 GHz

This manual is also suitable for:

[L20-s310tdL25-s119L25-s1192L25-s1193L25-s1194L25-s1195](#) ... [Show all](#)