



# Toshiba A5523T Basic Manual

Au by kddi



1  
2  
3  
4  
5  
6  
7  
8  
9

Table Of Contents

10  
11  
12  
13  
14  
15  
16  
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117



•

[Table of Contents](#)

•

## Bookmarks



[Download this manual](#)

## Quick Links



Basic

# Manual

## A5523T

Contents/  
Contents/  
Getting Ready  
Getting Ready  
Making and  
Making and  
Answering Calls  
Answering Calls  
Character Input  
Character Input  
Phone Book  
Phone Book  
Pair Function  
Pair Function  
Mail  
Mail  
Hello  
Hello  
Messenger  
Messenger  
Camera  
Camera  
EZweb  
EZweb



EZ Navi

EZ Navi

EZ □ FM

EZ □ FM

Limit Mode

Limit Mode

Simple Mode

Simple Mode

Others

Others

Remote Auto Lock/

Remote Auto Lock/

Troubleshooting

Troubleshooting

Index

Index



Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba A5523T

[Cell Phone Toshiba A5517T Basic Manual](#)

(62 pages)

[Cell Phone Toshiba A5516T Basic Manual](#)

(106 pages)

[Cell Phone Toshiba A5509T Basic Manual](#)

(102 pages)

[Cell Phone Toshiba PORTEGE G910 User Manual](#)

(13 pages)

[Cell Phone Toshiba W45T Basic Manual](#)

(126 pages)

[Cell Phone TOSHIBA TS10 User Manual](#)

Toshiba mobile phone (83 pages)

[Cell Phone Toshiba Regza ISO4 Basic Manual](#)

Toshiba regza is series mobile phone basic manual (79 pages)

[Cell Phone Toshiba VM4050 User Manual](#)

Pcs vision phone (249 pages)

[Cell Phone Toshiba SG4-E01 User Manual](#)

(33 pages)

[Cell Phone Toshiba Portege G710 User Manual](#)

Toshiba cell phone user guide (140 pages)

[Cell Phone Toshiba 2032SP Online User's Manual](#)

Dual-band pcs phone (106 pages)

[Cell Phone Toshiba G500 User Manual](#)

Toshiba cell phone user manual (123 pages)

[Cell Phone Toshiba T-01B User Manual](#)

(176 pages)

[Cell Phone Toshiba W53T Manual Manual](#)

Cdma 1x win (93 pages)

[Cell Phone Toshiba TX80 User Manual](#)

Toshiba cell phone user manual (145 pages)

[Cell Phone Toshiba RG4-E01 User Manual](#)

(120 pages)

## Summary of Contents for Toshiba A5523T

[Page 1](#) Mail Hello Hello Messenger Messenger Camera Camera EZweb EZweb EZ Navi EZ Navi  
EZ □ FM EZ □ FM Limit Mode Limit Mode Simple Mode Simple Mode Others Others A5523T  
Remote Auto Lock/ Remote Auto Lock/ Troubleshooting Troubleshooting Index Index...

[Page 2](#) Introduction Thank you for purchasing the A5523T. Before using your A5523T, be sure  
to read the A5523T Basic Manual (this PDF manual) to ensure correct usage. After you have  
finished reading this manual, store this PDF manual and the printed manuals in safe places so  
you can retrieve them whenever you need them.



### [Page 3: Cell Phone Etiquette](#)

Cell Phone Etiquette Etiquette for Cell Phone Use ■ The cell phone always emits weak radio waves when power is on. ■ Use the cell phone in an enjoyable and safe manner without forgetting to be considerate of others around you. ●The use of cell phones is not ●Be considerate of where you allowed in some places.

### [Page 4: Cell Phone Basics](#)

Cell Phone Basics Cell Phone Features Hello Messenger Mail Camera Up to four You can e-mail to other You can take members can cell phones or to a PC. photos and movie exchange text, clips and then photos and sound send them Page in real time using...

### [Page 5: Manner Mode And Voice Memo](#)

3

Manner Mode and Voice Memo Manner Mode Voice Memo You can use manner mode to turn When you cannot answer calls, off the incoming call ring tone and the cell phone can play an other tones so as not to answering message (Japanese) inconvenience other people.

### [Page 6: Do Not Use The Cell Phone While Driving!](#)

4

Do not use the cell phone while driving! Holding a cell phone, talking on a cell phone, looking at a cell phone display to send mail or perform some other operation while driving is against the law in Japan. (Revised Traffic Control Law, effective November 1, 2004) x...

### [Page 7: Spam And One-Ring](#)

Calls5

5

Spam and One-ring Calls If you receive spam: You can set the mail filters to reject only specific mail or mail indicated by \* (Unsolicited Advertisement), which often tends to be spam. The following mail filters are available for rejecting spam: ...

### [Page 8: Disaster Message Board Service](#)

6

Disaster Message Board Service About Disaster Message Board When a big scale disaster occurs, you can register your safety information through EZweb. The registered safety information can be referred from anywhere in Japan through EZweb or Internet. ●When a big scale disaster occurs, from au phone, you can register your safety information Registering such as your condition or comments to the ...

### [Page 9 Safety information Top display of for registration registration display the Disaster Message Board Safety information reference display](#)

display reference display  
Safety information  
reference display  
...

### [Page 10: Table Of Contents](#)

Contents ●Introduction ●Cell Phone Etiquette Etiquette for Cell Phone Use  
1 ●Cell Phone Basics Cell Phone Features  
2 Manner Mode and Voice Memo  
3 Checking the Power, Signal Strength, and Battery Level  
3 Do not use the cell phone while driving!  
4 Spam and One-ring Calls  
5 Disaster Message Board Service  
6 ●Contents...

### [Page 11 Viewing Photos in Simple Mode](#)

107 ●Other Functions  
108 Using the Safety Buzzer  
108 ●In Case You Lose Your A5523T  
110 Setting Conditions for Enabling the Remote Auto Lock  
110 Remotely Enabling the Auto Lock on Your A5523T  
111 ●Troubleshooting  
112 ●Index









pressing 2 Delete after you...

## [Page 51: Saving A Phone Number From The Incoming Or Outgoing History](#) 49

Saving a Phone Number from the Incoming or Outgoing History Example: Saving a phone number from the incoming history to the phone book When the standby screen is displayed, press D and use G to select the phone number you want to save. Press K (Option) and then press 1 Add Phone Book.

## [Page 52: Pair Function](#)

Pair Function You can register a maximum of five pair partners you contact often to easily call or send mail. You can also invite pair partners to a Hello Messenger meeting. Registering a Pair Partner When the standby screen is displayed, press Q.

## [Page 53: Making A Call To A Pair Partner](#) 51

Making a Call to a Pair Partner When the standby screen is displayed, press Q. Use F to select the person you want to call. Use G to select Call and then press @ (Select). Note Note □If multiple phone numbers and e-mail addresses are registered in a phone book entry, you can select the phone number and e-mail address to use with the Pair function.

## [Page 54: Sending A Mail To A Pair Partner](#) 52

Sending a Mail to a Pair Partner When the standby screen is displayed, press Q and then use F to select the person you want to send a mail. Use G to select E-mail or C-mail and then press @ (Select). □To create an e-mail message, see "Creating and Sending E-mail Messages"...

## [Page 55: Mail](#)

Mail EZweb Subscription Required Using E-mail To use e-mail, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center. Also, before use, be sure to configure initial settings.

## [Page 56: Creating And Sending E-Mail Messages](#) 54

Creating and Sending E-mail Messages When the standby screen is displayed, press L and then press 1 Create New. Use G to select To and then press @ (Select). Press @ (Select) and then press 1 Use Phone Book. □You can specify up to five addresses for the To, Cc, and Bcc fields.

[Page 57](#) Use G to select Subject and then press @ (Select). Enter a subject and then press @ (OK). □You cannot enter single-byte Japanese characters or a new line in a subject. Use G to select Text and then press @ (Select). Enter the text of the message and then press @ (OK).

## [Page 58: Reading Received E-Mail Messages](#) 56

Reading Received E-mail Messages When you receive an e-mail message Email appears on the standby screen along with the number of messages received. Use G to select Email and then press @. Indicators □Indicates a folder containing a new message. Press @ (Select).

[Page 59](#) Viewing a Received Message Sender of the message Time and date the message The e-mail address of was received the sender may appear in place of the name. Message text Message subject Name of attached file, if any See page 58. Note Note □The procedure may differ depending on the e-mail settings.

## [Page 60: Reading An E-Mail Message With An Attached Photo Or Movie](#) 58

Reading an E-mail Message with an Attached Photo or Movie Example: Viewing an attached photo Display the e-mail message (page 56). Use G to select the file name and then press @ (Rcv). Press @ (Play). Note Note □Some files will already be displayed on the screen in Step 1,

while other files will require that you select the file name (Step 2), and then press @ (Play).

## [Page 61: Replying To Received E-Mail Messages](#)

61

Replying to Received E-mail Messages When the standby screen is displayed, press L and then press 2 Inbox. Press @ (Select). Use G to select the message you want to reply to and then press @ (Select). Press J (Reply). The Create Mail screen appears.

## [Page 62: Rejecting Spam](#)

62

Rejecting Spam The setting of mail filters to reject spam is recommended. Also, selecting (Supportive Settings) enables you to set mail filters easily while answering questions that appear on the screen. Setting Mail Filters Example: Connecting to (Supportive Settings) When the standby screen is displayed, press L.

## [Page 63: Using C-Mail](#)

63

Using C-mail C-mail is a service that enables the use of phone numbers as addresses to exchange messages between au cell phones that support c-mail. A c-mail message can contain up to 50 double-byte (or 100 single-byte) characters. A message is sent to a phone number.

## [Page 64: Creating And Sending C-Mail Messages](#)

64

Creating and Sending C-mail Messages When the standby screen is displayed, hold down L for at least one second, and then press 1 Create New. Enter the text of the message and then press @ (OK). Use G to select Use Phone Book and then press @ (Select).

## [Page 65: Reading Received C-Mail Messages](#)

65

Reading Received C-mail Messages Received c-mail messages are saved to the Inbox. When you receive a c-mail message Cmail appears on the standby screen along with the number of received messages. Use G to select Cmail and then press @. Indicators indicates a read message.

## [Page 66: Hello Messenger](#)

Hello Messenger Hello Messenger is a service that enables you to use a desired cartoon-style character to represent you in a meeting (exchange text, sound, and other data in real time) between au cell phones that support Hello Messenger. The host can select up to four members from the phone book to join the meeting.

## [Page 67: Displaying Hello Messenger](#)

67

Displaying Hello Messenger When the standby screen is displayed, press @. Use E to select Hello Messenger and then press @ (Select). When Starting Hello Messenger for the First Time Press @ (OK), use E to select your character, and then press @ ([Set]).

## [Page 68: Holding A Meeting](#)

68

Holding a Meeting You can start a meeting by selecting the members to invite to the meeting from the phone book, a group, or the hello ranking (members that you invited or that invited you to a meeting in the past), or use the Pair function to start a meeting.

## [Page 69: Inviting Members To A Meeting](#)

69

Inviting Members to a Meeting You can start a meeting by inviting members registered in the members list. Use G to select (Start) from the Hello Messenger menu (see page 65) and

then press @ ([Select]). Use G to select Phone Book (Phone Book) and then press @ ([Select]).

## Page 70: Accepting An Invitation To Join A Meeting

Accepting an Invitation to Join a Meeting When you receive an invitation to a meeting, the ring tone sounds and/or the cell phone vibrates, and then a message inviting you to join the meeting appears. However, if (Incoming Mode) is set to (Auto ...)

## Page 71: Camera

Camera Your cell phone has a 1.3 megapixel camera (1,300,000 pixels available) that you can use to shoot photos and movies. It also has a self-timer for taking photos. You can use images you record for the standby screen, and you can attach them to e-mail messages.

## Page 72: Photo And Movie Shooting Tips

Photo and Movie Shooting Tips When shooting photos or movies, frame the subject within the display and hold the A5523T steady with both hands to avoid shaking. When oriented vertically ...

## Page 73: Taking A Photo

Taking a Photo When the standby screen is Monitor screen displayed, hold down P for at least one second. The monitor screen appears. Point the lens at the subject Preview screen and then press @ (Shot) or aThe photo you just took appears. Saving a Photo Press @ (Save) in the preview screen.

## Page 74: Recording A Movie

Recording a Movie When the standby screen is displayed, press @. Use E to select Camera and then press @ (Select). Press 2 Movie. The monitor screen appears. Point the lens at the subject and then press @ (Rec) or P. The cell phone emits a recording start sound, and lights when...

Page 75 Note Note If you do not want to save the movie, press R in the preview screen, use G to select Yes, and then press @ (OK). The following shows how to read the file name in the Data Folder when you record a movie in the High L mode.

## Page 76: Viewing Photos Or Movies

Viewing Photos or Movies Example: Viewing a photo When the standby screen is displayed, press @. Use E to select Data Folder and then press @ (Select). Use G to select Photo Folder and then press @ (Select). To view a movie, select Movie Folder. Use G to select a folder and then press @ (Select).

## Page 77: Ezweb

EZweb EZweb Subscription Required EZweb is an information service that allows you to enjoy using the Internet on your cell phone. You can also download Chaku-Uta , news, and other data from web pages. To use EZweb, you need to apply for an EZweb subscription. If you did not apply for an EZweb subscription at the time of purchase, contact an au shop or the au Customer Service Center.

## Page 78: Accessing Sites

Accessing Sites Viewing the EZ Top Menu You can access EZweb from the Top menu. A variety of useful and fun sites are available on EZweb. (Search by Keyword) Provides an information search function for searching by keyword. (Search by Category)



Searches sites by category.

[Page 79](#) Basic Operations Use G to select the site you want to access and then press @ (Select). Pressing D or R returns to the previous screen. Holding down either key for at least one second returns to the Top menu. Select the item you want to display and...

## [Page 80: Bookmarking Frequently Accessed Pages](#)

78

Bookmarking Frequently Accessed Pages You can save the titles and URLs you often visit, which makes it easy to return to them when you want. When the page you want to bookmark is displayed, press K (Browser menu). Press 1 New bookmark. Some pages cannot be bookmarked.

## [Page 81: Viewing Bookmarked](#)

79

Viewing Bookmarked Pages When the standby screen is displayed, press M and then use F to select the EZweb. Press 2 Bookmark. Use G to select the bookmark for the page you want to view and then press @ (Access). The cell phone connects to the site.

## [Page 82: Downloading Chaku-Uta ®](#)

80

® Downloading Chaku-Uta When the standby screen is displayed, press M and then use F to select the EZweb. Press 1 Top Menu. Use G to select Category Search and then press @ (Select). Use G to select ®...

## [Page 83](#) Follow the instructions that appear on the display. Download is completed.

Downloaded data is saved automatically to the Data Folder. Press J (Play). The downloaded Chaku-Uta ® plays. During playback, press @ (Register). The Register to where? menu appears. Use G to select the tone you want to use the ®...

## [Page 84: Ez Navi](#)

(Auto Position Search [monthly charge]), Position Search Mail [no monthly charge] EZnaviwalk Using Position Search from the A5523T enables you to locate an Safety Navi au cell phone equipped with Position Search. EZnavi Setup • (Area Message [no monthly charge])...

## [Page 85](#) EZ Navi Walk for when you go out Displays various useful menu items for when you

are out. Search for the best route to your destination [voice navigation] or for local stores or facilities. Check out maps of your current location or places you like to go. FREE...

## [Page 86: What You Can Do With Safety](#)

84

What You Can Do with Safety Navi Safety Navi lets you use your A5523T to check on the location of an au cell phone or have it sound an alarm to notify you when the au cell phone is in a particular area during a specified time period.

## [Page 87](#) EZapps transmission is included in the free calling time provided by your service

plan. However, family c-mail and packet communications discount services do not apply. When the A5523T displays maps or collects Position Search information, information charges apply in addition to the packet communication charge.

## [Page 88: Ez Fm](#)

EZ FM EZweb Subscription Required You can use your A5523T to listen to the FM radio. You can also record songs broadcast over the radio. Antenna The bundled Toshiba flat-type stereo earphone 04 has a built-in antenna for listening to the FM radio. When you want to listen to EZ FM radio, be sure to connect the earphone so that you can receive the signal.

## [Page 89: Listening To Ez](#)

Listening to EZ FM When the standby screen is displayed, press @. Use E to select EZ · FM, press @ (Select), use G to select (Agree), and then press @. Important notes are

displayed. A screen for selecting your area appears the first time you start EZ ...

**Page 90** Basic Operations EZ FM Screen Frequency display area You can use F to manually select a station in increments of 0.1 MHz. You can hold F for at least one second to automatically select a station. Displayed when there is downloadable information Speaker/Earphone toggle display Station/Song name display area The name of the broadcast station is normally...

**Page 91: Switching To Background Music Reception Or Exiting Ez**

Note Note When you first purchase the A5523T, it is set to automatically exit EZ FM if you do not press any of the keys for approximately 2 hours. You can change this in the (Auto Radio Exit) setting.

**Page 92: Limit Mode**

Limit Mode Limit Mode allows a parent or superior to limit how much each function can be used to prevent overuse of the cell phone by a child or subordinate. Limits can be placed on incoming and outgoing calls and c-mail. Registering Permitted Members If you register permitted members, your cell phone allows incoming and outgoing calls and c-mail from/to them regardless of the Use Limit settings.

**Page 93** Use E to select a phone book entry and then press @ (Select). Press J (OK). Use G to select Yes and then press @ (OK).

**Page 94: Limiting Calls And C-Mail**

92

Limiting Calls and C-mail You can limit incoming and outgoing calls and c-mail (Access Limit). Example: Only allowing outgoing calls to permitted members When the standby screen is displayed, press @. Use E to select Limit Mode and then press @ (Select). Press 4 Limit Mode Setup.

**Page 95** Use G to select Limit Setup and then press @ (Select). Use G to select Access Limit and then press @ (Select). Use G to select Outgo and then press @ (Select). Use G to select Only Permit Member and then press @ (Select).

**Page 96: Setting Use Limits**

94

Setting Use Limits You can configure your cell phone to prohibit outgoing calls and/or c-mail if the monthly planned use limit will be exceeded. Example: Limiting the call amount When the standby screen is displayed, press@. Use E to select Limit Mode and then press @ (Select).

**Page 97** Use G to select Use Limit and then press @ (Select). Use G to select Call and then press @ (Select). Use G to select Limited and then press @ (Select). Enter the call amount and then press @ (OK). Note Note Your cell phone does not place limits on outgoing calls and c-mail to permitted...

**Page 98: Turning Limit Mode On And Off**

96

Turning Limit Mode On and Off When the standby screen is displayed, press@. Use E to select Limit Mode and then press @ (Select). Press 5 Limit · Cancel. Enter your Limit Mode password and then press @ (OK). The initial default password is "12345678".

**Page 99: Simple Mode**

Simple Mode Setting Simple Mode enables limited and simplified operations of the phone function, phone book, camera, mail, EZweb and other often-used functions. Entering Simple Mode When the standby screen is displayed, press @. Use E to select Simple Mode and then press @ (Select).

**Page 100: Exiting Simple Mode**

98

Exiting Simple Mode When the standby screen is displayed, press @. Use G to select Setup and then press @ (Select). Use G to select End Simple Mode and then press @ (Select). Use G to select Yes and then press @ (OK). aThis exits Simple Mode.

Page 101: Viewing The Display In Simple Mode

99

Viewing the Display in Simple Mode The following indicators are available for checking the status on the standby display when your cell phone is in Simple Mode. ① ② Indicator Description ① Indicates signal strength. ② Indicates battery level. ③ ③...

Page 102: Viewing The Simple Menu

100

Indicator Function Name Photo Camera Movie Barcode Reader Alarm Calendar Notepad Calculator Useful Function Toshiba Site Photo Folder Data Folder Movie Folder SD Card Volume Melody Standby Screen Setup Character/Pict Size Manner Mode Pay/Apply End Simple Mode...

Page 103 Using the Simple EZ Menu The Simple EZ menu provides a quick and simple way to access functions such as EZweb and EZ Navi. When the standby screen is displayed, press M to display the Simple EZ menu. Use G to select a menu item, press @ (Select), use G to select a function, and then press @ (Select).

Page 104: Saving A Phone Book Entry Using Simple Mode

102

Saving a Phone Book Entry Using Simple Mode When the standby screen is displayed, press K. Use G to select Yes and then press @ (OK). Enter a name and then press @ (OK). Use G to select Direct Input and then press @ (Select).

Page 105 Use G to select Direct Input and then press @ (Select). If you do not want to enter an e-mail address, use G to select Not Input, press @ (Select), and then proceed to Step 8. You can also use G to select Sent History or Received Hist and enter an e-mail address from there.

Page 106: Creating And Sending E-Mail/C-Mail Messages In Simple Mode

104

Creating and Sending E-mail/C-mail Messages in Simple Mode Example : Creating and sending an e-mail message When the standby screen is displayed, press L. Use G to select E-mail and then press @ (Select). To create a c-mail message, select C-mail.

Page 107 Enter a subject and then press @ (OK). Enter the text of the message and then press @ (OK). You can use G to select an item and then press @ (Edit) to edit the currently selected item. Press J ( Send).

Page 108: Taking Photos In Simple Mode

106

Taking Photos in Simple Mode When the standby screen is displayed, press @. Use G to select Camera and then press @ (Select). Use G to select Photo and Monitor screen then press @ (Select). aThe monitor screen appears. Point the lens at the subject Preview screen and then press @ (Shot) .

Page 109: Viewing Photos In Simple Mode

107

Viewing Photos in Simple Mode When the standby screen is displayed, press @. Use G to select DataFolder and then press @ (Select). Use G to select PhotoFolder and then press @ (Select). Use G to select a folder and then press @ (Select). Use E to select the photo you want to view and then press @ (Play).

Page 110: Other Functions

## [108](#)

Standby EZapps is starting up or when the cell phone is turned off. You cannot receive calls while the A5523T is emitting the Safety Buzzer. Also, you cannot make calls other than to the emergency services (110, 119 or 118).

[Page 111](#) Katakana word Dict and contains a total of roughly 159 thousand entries. Barcode Reader & Maker You can use the camera in the A5523T to scan bar codes. This feature will also create bar codes that contain profiles and address book entries.

## [Page 112: In Case You Lose Your A5523T](#)

110

A5523T to prevent others from using your cell phone. Setting Conditions for Enabling the Remote Auto Lock You can enable the auto lock if you call your A5523T repeatedly from a registered phone number within a pre-specified period of time. When the standby screen is...

## [Page 113: Remotely Enabling The Auto Lock On Your A5523T](#)

111

Time, Remote Auto Lock is activated and a message is played notifying you that the cell phone is locked. Note Note The Remote Auto Lock cannot be enabled when the A5523T is turned off or out of the service area, or Emission OFF is set to ON.

[Page 114](#) Troubleshooting Reference Symptom Check Measure Page Charge the battery pack. ●Is the battery pack charged? Cannot turn on ●Did you hold down S for at least Hold down S for at least one second. power. one second? Hold down S for at least one second. ●Is power turned on? Move to a location where (out...

[Page 115](#) For more detailed information, visit the following website: - From the A5523T a Hold down M for at least one second. (Toshiba User Club Site, in Japanese only) - From a PC a [http://www.toshiba.co.jp/product/etsg/cmt/faq/top\\_au.htm](http://www.toshiba.co.jp/product/etsg/cmt/faq/top_au.htm) (In Japanese only)

[Page 116](#) Index Entering 42 Entering characters 40 Accessories 10 Entering characters from the same key 41 Adjusting the earpiece volume 39 Entering pictograms 44 Alert window 24 Extra large characters 28 Area Message 82,85 EZ/FM 86 Antenna 86 Exiting 89 Battery level 16 Listening 87 Battery pack 10,11 Switching to background music reception 89 EZ menu 23...

[Page 117](#) Registering a pair partner 50 Standby screen 16 Sending a mail to a pair partner 52 Sub-display 11,21 Passwords 12 Phone (call) Answering 30 Toshiba flat-type stereo earphone 04 10,86 Making 29 Turning on/off the power 16 Redialing 31 184/186 29 Phone book 45 Viewing Dialing 47...

[Page 118](#) OKINAWA CELLULAR TELEPHONE COMPANY Cellphone and PHS operators collect and recycle unused telephones, batteries and Manufactured by: battery chargers at stores bearing the logo regardless of brand and TOSHIBA CORPORATION manufacturer to protect the environment February 2007 Edition and reuse valuable resources.