



# Toshiba LED TV Series Owner's Manual



1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18  
19  
20  
21  
22

•

- 

Troubleshooting

•

Bookmarks

--

## Quick Links

[1 Specifications](#)

[Download this manual](#)





24L2900

32L2900

Owner's Record

You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model number:

Serial number:

HTTEMK721020

**TOSHIBA**

## [Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba LED TV Series

### [Speakers Toshiba e-STUDIO5540C Software Installation Manual](#)

Multifunctional digital systems (238 pages)

### [All in One Printer Toshiba e-STUDIO6540C Management Manual](#)

Multifunctional digital color systems / multifunctional digital systems (192 pages)

### [LCD TV Toshiba DIGITAL Series User Manual](#)

(57 pages)

### [Flat Panel TV Toshiba 40BL702B Owner's Manual](#)

Digital series (50 pages)

### [TV Toshiba 32BV501B User Manual](#)

Digital series (49 pages)

### [LCD TV Toshiba 40BV701B User Manual](#)

(48 pages)

### [TV Toshiba 22BL704B Owner's Manual](#)

Digital series (48 pages)

### [TV Toshiba 32BV801B User Manual](#)

Digital series (45 pages)

### [LED TV Toshiba Digital 19EL93 Series Owner's Manual](#)

(41 pages)

### [Air Conditioner Toshiba RAS-10~16 SKV\(R\) Series Owner's Manual](#)

Split type (4 pages)

### [Storage Toshiba MK1031 Installation Notes](#)

(4 pages)

### [LED TV Toshiba 24L2900 Owner's Manual](#)

(26 pages)

### [Monitor Toshiba 15VL33 Owner's Manual](#)

Toshiba stasia owner's manual (27 pages)

### [Monitor Toshiba 26HLC56 Owner's Manual](#)

Toshiba lcd tv monitor owner's manual (46 pages)

### [Monitor Toshiba RMTI-EMD-HT Brochure & Specs](#)

Environmental monitoring management (2 pages)

### [Monitor Toshiba PA3923U-1LC3 USB Monitor User Manual](#)

Mobile lcd monitor (40 pages)

## Summary of Contents for Toshiba LED TV Series

**Page 1** You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product. Model number: Serial number:...

### **Page 2: Table Of Contents**

Contents Welcome to Toshiba • Thank you for purchasing this Toshiba LED TV. This manual will help you use the exciting features of your new TV. • Instructions in this manual are based on using the remote control. Please read all safety and operating instructions in this manual •...

### [Page 3: Important Safety Precautions](#)

Important Safety Precautions Be sure to observe the following instructions and precautions to ensure safe use of this TV. • Never block or cover the slots and openings in the cabinet. • Never place the TV so that it is facing upward or on its side. •...

### [Page 4: Important Information](#)

Important Safety Precautions Cleaning Be especially careful that children do not insert objects in the TV. 4. When the TV will not be used for a long period of time, such as during vacation or travel, remove the power plug from the CAUTION: Avoid using chemicals (such as air refreshers, wall outlet for safety.

[Page 5](#) • Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual. • Toshiba is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

### [Page 6: Getting Started](#)

Getting started Accessories List Installing the wall mount bracket The following accessories are included with TV: 200X200 mm (24") Wall mount hole pattern (mm) 100X200 mm (32") 24" Owner's Manual Base Stand x 1 Remote Control x 1 Wall mount screw size (mm) 4XM6 AAA Battery x...

### [Page 7: Tv Front](#)

Getting started TV Front NOTE Powering on the TV requires several seconds to load programmes. Do not rapidly turn the TV off as it may cause the TV work abnormally. Single button(Remote sensor / Power indicator / Standby) 32"...

### [Page 8: Tv Rear](#)

Getting started TV Rear 24" 32" NOTE • Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure. • Not all A/V devices have the ability to connect to a TV, please refer to the user's manual of your A/V device for compatibility and connections procedure.

### [Page 9: Terminals](#)

Getting started Terminals VIDEO Connect a composite video cable and left-right audio cables from an external AV device. VIDEO The VIDEO can be used to connect a range of equipment, including video recorders, camcorders, INPUT decoders, satellite receivers, DVD players, or games consoles. (Only for 24") Connect a composite video cable and left-right audio cables from MINI AV an external AV device.

### [Page 10: Connecting With An Hdmi Cable](#)

• Be sure to select the correct country/region for use. Use with incorrect settings may violate certain laws or other regulations, and may result in criminal punishment. In such cases, TOSHIBA CORPORATION and the TOSHIBA Group shall bear no responsibility whatsoever.

### [Page 11: Remote Control](#)

Remote Control Buttons on the Remote Control POWER: Switch the TV on or into standby mode □ Select input source P.MODE: Select picture mode S.MODE: Select sound mode SLEEP: Set the sleep timer : Select aspect ratio MEDIA: Enter the media TV: Enter the Live TV 0-9: Direct channel selection or numbers input : To return to the last view programme...

### [Page 12: Installing Batteries In The Remote Control](#)

Remote Control Installing Batteries in the Remote Control Remote Control Operation Range 24" Press the release button on the back of the remote control to remove the battery compartment cover. Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.

### [Page 13: General Operation](#)

General Operation Turning the TV on for the First Time Adding channels to a Favorites list "Press [▲/▼] buttons to select channel then press [Yellow] button 1. Connect the mains cable to the mains socket after you have to add the selected channel to the favorite list. Deleting channels

from Favorites list completed all the connections.

### [Page 14: Sound](#)

General Operation Direct Choosing a sound mode Point to point display also known as 1:1 Pixel Mapping in HDMI > Sound > Sound Mode source. You can select a favourite sound mode suitable for the content type or the listening environment. NOTE You can adjust the equalizer at specific frequency points(Such as •...

### [Page 15: Timer](#)

General Operation Channel Edit Key Lock: If this switch is set to ON, the button on the machine Manually edit the channel list order to your preference. will not respond. Hotel Mode: Allows you to lock your desired item on screen •...

### [Page 16: Media Operation](#)

- Press [◀/▶/▲/▼] buttons to select the name of the content/folder that contains your content. • Press the [ OK ] button to play/enter content/the folder. You must obtain any required permission from copyright owners to download or use copyrighted content. TOSHIBA cannot and does not grant such permission.

### [Page 17: Troubleshooting](#)

Troubleshooting Picture Problem The Problem Possible Solutions When the TV has trouble with the picture, these steps may help No sound and · Check if the power cord is plugged into a resolve the problem. picture. powered AC outlet. · Press the button in the remote control to The Problem Possible Solutions...

### [Page 18: Specifications](#)

Specifications Features, appearance and specifications are subject to change without notice. Item 24" 32" Without Stand 553 x 335 x 70 mm 730 x 443 x 73 mm Dimension (W x H x D) With Stand 553 x 356 x 143 mm 730 x...

[Page 19](#) Specifications MPEG2: MP@HL MPEG4: Simple Profile and Mpeg1,2,4 .mkv 1080P @ 30fps 20Mbps Advanced Simple Profile @ Level 5 Main Profile and High H.264 .mkv 1080P @ 30fps 20Mbps Profile@Level 4.0 Motin JPEG .mkv 680X480 @ 30fps 10Mbps MPEG2: MP@HL .avi: Y MPEG4: Simple Profile and Mpeg2,4...

[Page 20](#) Specifications Bitrate: 128bps ~ 320kbps .wma Sampling Rate: 8kHz ~ 48kHz <768kbps(Bit rate) WMA Pro .wma Sampling Rate: ~ 96kHz Bitrate: 64kbps ~ 1.5Mbps LPCM (work with video files Sampling Rate: 8kHz ~ 48kHz only) IMA-ADPCM: Y supported bit rate: Bitrate: 384kbps 64Kbps IMA-ADPCM/MS-...

### [Page 21: License Information](#)

For more detailed information about the collection and recycling programmes available in your country/region, please visit our website ([www.toshiba.eu/recycling](http://www.toshiba.eu/recycling)) or contact your local city office or the shop where you purchased the product.

[Page 22](#) For more detailed information about the collection and recycling programmes available in your country/region, please visit our website ([www.toshiba.eu/recycling](http://www.toshiba.eu/recycling)) or contact your local city office or the shop where you purchased the product. The CE-mark is available only for EE/EV models.

This manual is also suitable for:

32129002412900