

Ras Information; Pf311 Information That Can Be Referenced As I/O Connection - Toshiba V Series User Manual

Integrated controller

1

2

3

4

5

6

7

8

9

10

Table Of Contents

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67



•

[Table of Contents](#)

•

Bookmarks



Chapter 8 RAS Information

0010h

The address is the offset address (word address) from the beginning of the PF311

TXER
NDT
ACL
CNT

6F8C0921

15

PF module status (1W)

Healthy counter (1W)

Device error (1W)

PROFIBUS-DP status (32W)

Table 8-2 PF module status

C	
B	
A	
9	
8	
DV_STS	

→

(ON LINE)

1: PF module is online

00: PF module is online

01: PF is standby

10: PF module is not operating

11: PF is down

→

(DV_STS)

00: Transmission module is offline

01: Transmission module is stopped

10: Transmission module is cleared

11: Transmission module is operating

→

(DEV_ERR)

1: Transmission module error

→

(NO_PARA)

1: No activation request

1: Parameter error

0
7
6
5
4

--	--	--	--	--	--	--	--	--	--

DVER

NPR TXER

0: Not online

0: Operating normally

0: Activation request

0: Operating normally

0: Operating normally

0: Operating normally

0: Operating normally

3

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
36
37
38
39
40
41
42
43

Quick Links:

[Module Overview](#)

[Pf311 Module External](#)

Related Manuals for Toshiba V Series

[Controller Toshiba V Series Manual](#)

Integrated, devicenet module (264 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller ethernet module, en311 (258 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller (230 pages)

[Controller Toshiba V Series User Manual](#)

Sequence controllers (205 pages)

[Controller Toshiba V Series Manual](#)

(177 pages)

[Controller Toshiba V Series User Manual](#)

Admap-5m an712 module (150 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller (130 pages)

[Control Unit Toshiba V Series Operation Manual](#)

Integrated controller, ethernet module (122 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller (108 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller (98 pages)

[Controller Toshiba V Series Operation Manual](#)

Integrated controller, control network fl-net opcn-2, module (96 pages)

[Control Unit Toshiba V Series User Manual](#)

Analog module (96 pages)

[Controller Toshiba 2000 User Manual](#)

V series integrated controller (76 pages)

[Controller Toshiba V Series User Manual](#)

(50 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller, cif module (49 pages)

[Controller Toshiba V Series Manual](#)

Integrated controller (46 pages)

Related Content for Toshiba V Series

[AS311 Ras Information](#)

Toshiba AS311

[BMS-CT2560U-E Useful Information](#)

Toshiba BMS-CT2560U-E

[TCB-IFDLR01UP-E Troubleshooting Based On Information Displayed On Remote Controller](#)

Toshiba TCB-IFDLR01UP-E

[TCB-SC640U Register Contact Information When An Error Occurs \(Register Contact Info\)](#)

Toshiba TCB-SC640U

[TCB-SC640U-UL Checking The Device Information \(Information\)](#)

Toshiba TCB-SC640U-UL

[RBC-AWSU52-E Information](#)

Toshiba RBC-AWSU52-E

[vlp technology P9 ASD General Safety Information](#)

Toshiba vlp technology P9 ASD

[RBC-AWSU52-UL Information](#)

Toshiba RBC-AWSU52-UL

This manual is also suitable for:

3000 profibus