TOSHIBA

Toshiba Canvio AeroMobile Frequently Asked Questions

Wireless

2								
•								



Download this manual	Quick Links	



Canvio AeroMobile Wireless SSD Frequently Asked Questions

Q. Will my AeroMobile charge when connected to my computer?

A. To charge the battery of your AeroMobile it must be connected to the included AC adapter and

plugged into a wall outlet. The device will not charge when connected to a computer.

Q. How do I know when my AeroMobile needs to be recharged?

A. Look at the battery indicator light when the device is powered on. If the light is Green the battery

power is 30% or higher. A Yellow light means the battery is between 10% and 30% power. If the light is

Orange (and blinking fast) it means the battery power is below 10% and should be charged soon.

Q. I connected my AeroMobile to my computer via the USB cable but I cannot access it.

A. Before connecting the AeroMobile to your computer via USB it must be in the off position. To turn

the device on and off, press and hold the power button for 2 seconds. When all the lights are "off" it can be connected to your computer and accessed as an external storage device.

Q. How do I access my AeroMobile device from my phone or tablet?

A. To access the AeroMobile from your mobile device you must first download the free mobile app. The

apps support both iOS and Android devices. On your mobile device go to your app store and search for

"Wireless SSD for Toshiba." Turn on your AeroMobile, then on your mobile device, go to network

settings. Look for and join Toshiba wssd xxxx (where xxxx is four numbers.) You will be prompted for a

password. The default password is 12345678. Once you are connected the AeroMobile network open

the Wireless SSD app you just installed. You will now be able to access the content on your AeroMobile.

Q. Can I access my AeroMobile via a web browser on my computer?

A. Yes. Connect your computer to the "Toshiba wssd xxxx" (where xxxx is four numbers) network. The

 
default network password is 12345678. Then open your browser and in the address bar enter:

https://www.wirelessssd/

Q. Does adding an SD card into the available slot increase the capacity of the AeroMobile? A. No. The SD card slot enables you to access and backup photos and videos from your camera or other

device to the AeroMobile, and reuse the space of your SD card.





DC Drives Toshiba Canvio AeroMobile User Manual

Wireless solid state drive (196 pages)

Storage Toshiba CANVIO AEROMOBILE User Manual

Wireless ssd (56 pages)

Storage Toshiba Canvio AeroMobile Updating Instructions

Instructions on updating the firmware for ios 5 users for the wireless solid state drive (18 pages)

Storage Toshiba Canvio AeroMobile Faq

(5 pages)

Storage Toshiba CANVIO AeroCast Quick Start Manual

(8 pages)

Storage Toshiba Canvio AeroCast User Manual

Wireless hard drive (193 pages)

Storage Toshiba Canvio AeroCast User Manual

(1307 pages)

Storage Toshiba canvio aerocast User Manual

Wireless (171 pages)

Storage Toshiba Canvio AeroCast User Manual

Wireless hard drive (60 pages)

Storage Toshiba Canvio AeroCast Manual

Wireless hdd disconnecting from the internet (17 pages)

Storage Toshiba CANVIO ADVANCE User Manual

(185 pages)

Storage Toshiba HDTC910EK3AA User Manual

(201 pages)

Storage Toshiba CanvioDTQ112 User Manual

Wireless ssd (47 pages)

Storage Toshiba Canvio Slim User Manual

(205 pages)

Storage Toshiba HDTB420EK3AA User Manual

(199 pages)

Summary of Contents for Toshiba Canvio AeroMobile

<u>Page 1</u> "Wireless SSD for Toshiba." Turn on your AeroMobile, then on your mobile device, go to network settings. Look for and join Toshiba wssd xxxx (where xxxx is four numbers.) You will be prompted for a password. The default password is 12345678. Once you are connected the AeroMobile network open the Wireless SSD app you just installed.

<u>Page 2</u> Canvio AeroMobile Wireless SSD Frequently Asked Questions Q. Can I backup the content from my SD card to the AeroMobile automatically? A. Yes. When you first backup your SD Card you can check the Auto Backup check box. After this anytime you insert your SD Card it will back up automatically to the user folder you selected.