



Asus PK-519 Installation Manual

Punch kit

1
2
3
4
5
6
7
8

--

•

Bookmarks

[Download this manual](#)

Quick Links



1. Punch unit
2. Stopper arm
3. Stopper pin
4. Rail cover
5. Front cover

6. Seal

7. Screw A

(3 x 6 mm)

8. Screw B

(3 x 6 mm)

9. Installation

manual

* This part is not used when installing models

367/287/227.

PK-519

INSTALLATION MANUAL

Shape

Q'ty

1

1

1

1

1

3

2

1

1

set


Punch Kit


Keep this bag away from babies and children. Do not use in cribs, beds, carriages, or playpens.

The thin film may cling to nose and mouth and prevent breathing. This bag is not a toy.

Note:

- This manual provides the illustrations of the accessory parts and machine that may be slightly different in shape from yours. In that case, instead of the illustrations, use the

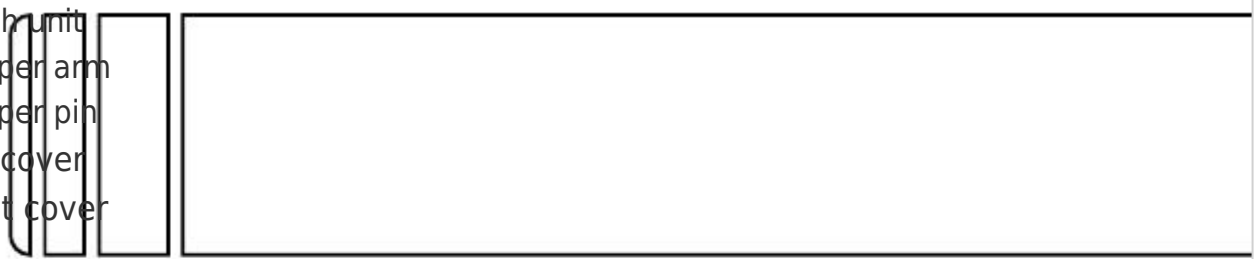

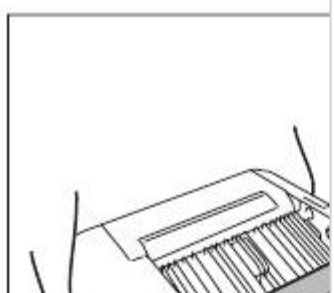

appearance of your machine to follow the installation procedure. This does not cause any significant change or problem with the procedure.

- If none of the later steps instruct you to use the parts including screw and cover that you removed following the instructions described in this manual, discard them.
- After installing the Punch Kit PK-519 to the Finisher FS-533, check again that the punch unit is securely locked into the finisher before installing, removing, or carrying the finisher.

< OK >


Locked

E-1

< NG >

Unlocked

A3EU-9551-00

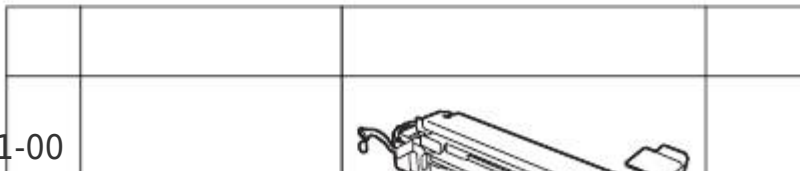

[Next Page](#)

1
2
3
4
5

Summary of Contents for Asus PK-519

[Page 1](#) • After installing the Punch Kit PK-519 to the Fin- 5. Front cover isher FS-533, check again that the punch unit is securely locked into the finisher before install- ing, removing, or carrying the finisher.

[Page 2: Installation Procedures](#)

• If the punch unit is open, do not carry the front. (3) If the Finisher FS-533 is mounted on the main unit, remove the finisher. Note: <C554e/C454e/C364e/C284e/C224e/C554/C454/C364/C284/C224/C368/C308/554e/454e/364e/ 284e/224e> See the installation manual for the Finisher FS- 533 for removal instructions. <367/287/227>...

[Page 3](#) (6) Attach the supplied stopper pin to the paper feed (9) Remove the screw shown in the illustration from side of the finisher at the position shown in the the finisher. illustration. (One supplied screw A) (7) Remove the cover shown in the illustration from the finisher.

[Page 4](#) (12) Remove the lock part from the back of the fin- (16) Secure the punch unit with the supplied screw isher, then install by sliding in the “ PK” direc- tion. (One screw) (13) By pulling the finisher’s lever, extend the front rail to the maximum.

[Page 5](#) (19) Reattach the cover removed in step (7) to the <367/287/227> Finisher. (Three screws) a) Remove the screw shown in the illustration from the finisher. Note: Hook the tab on the plate to the cover. Note: Discard the removed screw. b) Install the cover D supplied with the MK-602 at the position as shown in the illustration.

[Page 6](#) (22) Slide the finisher out by pulling its lever. c) Secure the rail cover with the screw (front side) (23) Attach the supplied rail cover to the finisher. and the shoulder screw (rear side). a) Set the rail cover at the end of the rail. Note: Note: Use the shoulder screw and the screw supplied...

[Page 7: Configuration Procedures](#)

(3) Touch “Finisher.” C-clip (4) Touch “Punch option setting.” Lever (5) Touch “PK-519” and select a desired number of holes. (6) Touch “decision.” (7) Touch “END.” (8) Touch “Exit” on the Service Mode screen. (9) Turn OFF and ON the power switch.

[Page 8](#) <Punch regist loop size adjustment> (6) Loosen the screw shown in the illustration. (1) Make a copy in the punch mode. (Refer to the User’s Guide CD) (2) Check the tilt of the output paper. Note: If it tilts, follow the procedures below for punch loop adjustment.