



Asus Hyper M.2 x16 Gen 4 Quick Start Manual

1
2
3
4
5
6
7
8
9
10

--

-

[Table of Contents](#)

•

Bookmarks

--

Table of Contents

[1 Parts and Features](#)


[2 Specifications Summary](#)

[3 Getting Started](#)

[4 FCC Compliance Information](#)

[5 Asus Contact Information](#)

[Download this manual](#)

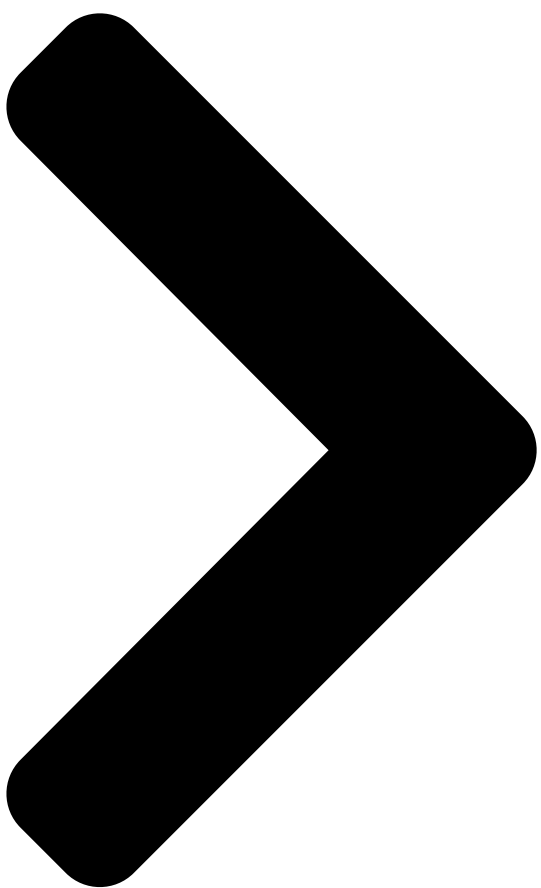

ASUS HYPER 

M.2

X16 Gen 4 Card

Quick Start Guide

E16246

15060-0GR20000

First Edition

December 2019

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus Hyper M.2 x16 Gen 4

[PCI Card Asus HYPER M.2 X16 Quick Start Manual](#)

(13 pages)

[PCI Card Asus S370-DL Installation Manual](#)

(8 pages)

[PCI Card Asus XONAR DX Quick Start Manual](#)

Xonar dx quick start guide for english (10 pages)

[PCI Card Asus Xonar DG SI User Manual](#)

Pci 7.1 & headphone amp audio card (52 pages)

[PCI Card Asus PCE-AC56 Quick Start Manual](#)

Dual-band wireless pci-e adapter (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[PCI Card Asus WL-130g User Manual](#)

Wifi-g 54mbps pci ap/wlan adapter (46 pages)

[PCI Card Asus Xonar D1 Quick Start Manual](#)

Pci audio card (10 pages)

[PCI Card Asus PCE-AC55BT Quick Start Manual](#)

802.11ac wireless dual-band with bluetooth 4.0 pci-e adapter (for 802.11 a/g/b/n/ac wireless networks) (2 pages)

[PCI Card Asus ROG Xonar Phoebe Quick Start Manual](#)

7.1 channel pci express audio card (73 pages)

[PCI Card Asus PCE-N53 User Manual](#)

Wireless dual-band pci-e card (for 802.11 a/b/g/n wireless networks) (35 pages)

[PCI Card Asus DVI-ADD2 Installation Manual](#)

Pci express digital display card (9 pages)

[PCI Card ASUS PCI-SC896 User Manual](#)

2ch. ultra2 pci scsi card (34 pages)

[PCI Card Asus Xonar D-Kara User Manual](#)

Pci 5.1 karaoke audio card (44 pages)

[PCI Card Asus PCI-L101 User Manual](#)

10/100 fast ethernet pci card (28 pages)

[PCI Card Asus NX1001 Quick Installation Manual](#)

Pci fast ethernet adapter (4 pages)

Summary of Contents for Asus Hyper M.2 x16 Gen 4

[Page 1](#) ASUS HYPER M.2 X16 Gen 4 Card Quick Start Guide E16246 15060-0GR20000 First Edition December 2019...

[Page 2: Parts And Features](#)

M.2 storage devices. PCI Express interface This is the interface for the ASUS HYPER M.2 X16 GEN 4 CARD to be installed in your motherboard's PCI Express slot. Ensure to install the ASUS HYPER M.2 X16 GEN 4 CARD into a PCI Express 4.0/3.0 slot for optimum results.

Page 3: Specifications Summary

To install M.2 storage devices onto your ASUS HYPER M.2 X16 GEN 4 CARD: Remove the six (6) cover screws that secure the cover to the ASUS HYPER M.2 X16 GEN 4 CARD, then remove the cover and set it aside.

Page 4 M.2 storage devices. Secure the stand screws onto the ASUS HYPER M.2 X16 GEN 4 CARD. Insert the M.2 storage devices into the PCIe M.2 storage device connectors (A), then secure the M.2 storage devices with the...

Page 5 Peel the plastic films off the thermal pads, secure the cover to the ASUS HYPER M.2 X16 GEN 4 CARD with the cover screws that you removed earlier, then install the ASUS HYPER M.2 X16 GEN 4 CARD into a PCI Express 4.0/3.0 slot.

Page 6: Fcc Compliance Information

Appendix Notices FCC Compliance Information Responsible Party: Asus Computer International
Address: 48720 Kato Rd., Fremont, CA 94538, USA Phone / Fax No: (510)739-3777 / (510)608-4555 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Page 7 ASUS follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASUS product is in line with global environmental regulations. In addition, ASUS disclose the relevant information based on regulation requirements.

Page 8 Vietnam RoHS ASUS products sold in Vietnam, on or after September 23, 2011, meet the requirements of the Vietnam Circular 30/2011/TT-BCT. Turkey RoHS AEEE Yönetmeliğine Uygundur ASUS Recycling/Takeback Services ASUS recycling and takeback programs come from our commitment to the highest standards for protecting our environment.

Page 9 доступний на: www.asus.com/support Cijeli tekst EU izjave o sukladnosti dostupan je na: www.asus.com/support Türkçe AsusTek Computer Inc., bu aygıtın temel gereksinimlerle ve ilişkili Čeština Společnost ASUSTeK Computer Inc. tímto prohlašuje, že Výnergelerin diğer ilgili koşullarıyla uyumlu olduğunu beyan eder.

Page 10: Asus Contact Information

+1-510-739-3777 +1-510-608-4555 Web site <http://www.asus.com/us/> Technical Support
Support fax +1-812-284-0883 Telephone +1-812-282-2787 Online support
<http://qr.asus.com/techserv> ASUS COMPUTER GmbH (Germany and Austria) Address Harkort Str.
21-23, 40880 Ratingen, Germany +49-2102-959931 Web site <http://www.asus.com/de> Online
contact <http://eu-rma.asus.com/sales> Technical Support Telephone +49-2102-5789555 Support
Fax...