 


Removing A Pc Card; Learning The Basics - Toshiba SATELLITEPRO S300 User Manual

Toshiba laptop user manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56



•

[Table of Contents](#)

•

Bookmarks



Removing a PC Card

1

Prepare the card for removal by clicking the Safely Remove Hardware icon in the Notification Area and then selecting the PC Card device.

CAUTION

If the system is unable to prepare the card for safe removal, a message will tell you to try again later. If the card can be removed now, the system displays Safe To Remove Hardware.

NOTE

2

Locate the PC Card eject button next to the PC Card slot.

3

Press the PC Card eject button once to pop it out slightly, then push it in to remove the PC Card.

The PC Card ejects slightly from the slot.

4

CAUTION

Grasp the edges of the PC Card and slide it out of the slot.

Learning the basics

NOTE

Computing tips

❖ Save your work frequently.

Your work stays in the computer's temporary memory until you save it to the internal storage drive. If the network you are using goes down and you must restart your computer to reconnect, or your battery runs out of charge while you are working, you will lose all work since you last saved.

❖ Back up your files to disks (or other removable media) on a regular basis. Label the backup copies clearly and store them in a safe place.

❖ Scan all new files for viruses.

❖ Do not turn off the computer if a drive indicator light indicates a drive is active.

Be sure to disable the PC Card prior to removing it. Otherwise, the system may be damaged.

Before removing a PC Card, make sure that no applications or system services are using the card.

HINT: Some programs have an automatic save feature that can be activated. This feature saves your file to the internal storage drive at preset intervals. See your software documentation for details.

Removing a PC Card

35

[Previous Page](#)
[Next Page](#)

1
...
32
33
34
35
36
37
38
39

Quick Links:

[Table of Contents](#)

[Introduction](#)

[Learning the Basics](#)

[If Something Goes Wrong](#)

[Features and Specifications](#)

[Index](#)

Related Manuals for Toshiba SATELLITEPRO S300

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba TECRA A10 Series User Manual](#)

(246 pages)

[Laptop Toshiba PTMB3U-00X00X User Manual](#)

User manual (242 pages)

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba TECRA A10 Satellite Pro S300 Series User Manual](#)

(242 pages)

[Laptop Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual](#)

Vizio mouse user manual (240 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S1001 Specifications](#)

Toshiba satellite pro s300-s1001: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-S2503 Specifications](#)

Toshiba satellite pro s300-s2503: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2402 Specifications](#)

Toshiba satellite pro s300m-ez2402: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-EZ2421 Specifications](#)

Toshiba satellite pro s300m-ez2421: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300M-S2403 Specifications](#)

Toshiba satellite pro s300m-s2403: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300L-SP5919 Specifications](#)

Toshiba satellite pro s300l-sp5919: specifications (3 pages)

Related Content for Toshiba SATELLITEPRO S300

[PORTEGE R200 Figure 4-2 Removing The Pc Card](#)

Toshiba PORTEGE R200

[Portege 2010 Removing A Pc Card](#)

TOSHIBA Portege 2010

[TECRA S1 Removing The Optional Pc Card](#)

Toshiba TECRA S1

[Satellite U300 Removing A Pc Card](#)

Toshiba Satellite U300

[Satellite M20 Removing The Optional Pc Card](#)

Toshiba Satellite M20

[Satellite A205 Series Removing A Pc Card](#)

Toshiba Satellite A205 Series

[Satellite M30 Removing The Pc Card](#)

Toshiba Satellite M30

[Satellite L300D Removing The Optional Pc Card](#)

Toshiba Satellite L300D

This manual is also suitable for:

[Satellite pro s300-ez1511](#)[Satellite pro s300-ez1512](#)[Satellite pro s300-ez1513](#)[Satellite pro s300-ez1514](#)[Satellite pro s300-ez2501](#)[Satellite pro s300-ez2502](#) ... [Show all](#)