

 
Writing On The Screen - Toshiba e350 User Manual

Toshiba user's manual pocket pc e350

1
2
3
4
5
6
7
8
9
10
11
12
Table Of Contents
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



To use Block Recogniser:

With Block Recogniser you can input character strokes using the stylus that are similar to those used on other devices.

1

Tap the arrow next to the Input Panel button and then Block Recogniser.

2

Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the screen. For specific instructions on using Block Recogniser, with Block Recogniser open, tap the question mark next to the writing area.

Writing on the Screen

In any program that accepts writing, such as the Notes program, the Notes tab in Calendar, Contacts, and Tasks, you can use your stylus to write directly on the screen. Write the way you do on paper. You can edit and format what you've written and convert the information to text at a later time.

To write on the screen:



Tap the Pen button to switch to writing mode. This action displays lines on the screen to help you write.

Some programs that accept writing may not have the Pen button. See the documentation for that program to find out how to switch to writing mode.

Tap the Pen button and use your stylus like a pen.

Basic Skills

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
34
35
36
37
38
39
40
41

Related Manuals for Toshiba e350

[Handhelds Toshiba e355 User Manual](#)

E355 user's guide (116 pages)

[Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

[Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

[Handhelds Toshiba e400 User Manual](#)

Toshiba pocket pc user's manual e400, e405 (118 pages)

[Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

[Handhelds Toshiba e740 User Manual](#)

Toshiba user's manual pda e740 (182 pages)

[Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

[Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

[Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

[Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

[Handhelds Toshiba e570 User Manual](#)

E570 user's guide (109 pages)

[Handhelds TOSHIBA e570 Instruction Manual](#)

Pocket pc (103 pages)

[Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

[Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

[Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

[Handhelds Toshiba e830 User Manual](#)

(30 pages)

Related Content for Toshiba e350

[e750 Writing On The Screen](#)

Toshiba e750

[e740 Writing On The Screen](#)

Toshiba e740

[e400 Writing On The Screen](#)

Toshiba e400

[e310 Writing On The Screen](#)

Toshiba e310

[RG4-J01 Today Screen](#)

Toshiba RG4-J01

[e800 Power Screen](#)

Toshiba e800