

Recording A Message; To Create A Recording - Toshiba e400 User Manual

Toshiba pocket pc user's manual e400, e405

1
2
3
4
5
6
7
8
9
10
11
12
13
Table Of Contents
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117



•

[Table of Contents](#)

•

Bookmarks



Recording a Message

In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. In Calendar, Tasks, and Contacts, you can include a recording in the Notes tab. In the Notes program, you can either create a stand-alone recording or add a recording to an existing note. If you want to add a recording in a note, open the note first. In the Inbox program, you can add a recording to an email message.

To create a recording:

1.

If you do not see the Record/Playback toolbar, tap

2.

Hold your mobile device's microphone near your mouth or other source of sound.

3.

Tap
and make your recording.

4.

Tap
when finished. If you are recording in an open note, an icon will appear in the note. If you are creating a stand-alone recording, it will appear in the note list.

You can quickly create a recording by holding down the Record hardware button. When you hear the beep, begin your recording. Release the button when you are finished.

The new recording is stored  in the open note or as a stand-alone recording if  note is open.

To play a recording, tap the recording icon in the open note or tap the recording in the note list.

Chapter 2: Basic Skills

Indicates an embedded recording.

Tap to begin recording.

Tap to show or hide the Recording toolbar.

.

39

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
36
37
38
39
40
41
42
43

Quick Links:

[Power Button](#)

[Battery Switch](#)

[Battery Charging](#)

[Specifications](#)

Related Manuals for Toshiba e400

[Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

[Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

[Handhelds Toshiba e350 User Manual](#)

Toshiba user's manual pocket pc e350 (105 pages)

[Handhelds Toshiba e355 User Manual](#)

E355 user's guide (116 pages)

[Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

[Handhelds Toshiba e740 User Manual](#)

Toshiba user's manual pda e740 (182 pages)

[Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

[Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

[Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

[Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

[Handhelds Toshiba e570 User Manual](#)

E570 user's guide (109 pages)

[Handhelds TOSHIBA e570 Instruction Manual](#)

Pocket pc (103 pages)

[Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

[Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

[Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

[Handhelds Toshiba e830 User Manual](#)

(30 pages)

Related Content for Toshiba e400

[e355 Recording A Message](#)

Toshiba e355

[e750 Recording A Message](#)

Toshiba e750

[e740 Recording A Message](#)

Toshiba e740

[e350 Recording A Message](#)

Toshiba e350

[e310 Recording A Message](#)

Toshiba e310

This manual is also suitable for:

[E405Pd400u-00002r](#)