

Deleting An Icon - Toshiba e400 User Manual

Toshiba pocket pc user's manual e400, e405

1
2
3
4
5
6
7
8
9
10
11
12
13
Table Of Contents
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117



•

[Table of Contents](#)

•

Bookmarks



Moving Application Icons

You can move icons in tabs or between tabs. To create a new tab, see "Tab Settings" later in this chapter.

To move icons in tabs:

- 1.

Drag and drop the desired icon to the desired position with the icon in a tapped state. When the icon is moved, the icon near where the icon is to be moved is highlighted. When the icon is dropped, the icon is moved to the position of the highlighted icon. If there is no highlighted icon when the icon is dropped, the icon is moved to the end of the icons.

When "Icons are sorted as launched order (for all tabs)" is selected in "Tab Settings" screen, icons in tabs are sorted in the order that they are launched. Icons cannot be moved in tabs when this is set.

To move icons to another tab using the pop-up menu:

1.

Tap and hold the icon you want to move to display the pop-up menu.

2.

Tap Cut on the pop-up menu.

3.

Tap the destination tab, then tap and hold any portion other than the icon, and then tap Paste on the pop-up menu. The selected icon is pasted next to the last icon on the tab screen.

An icon cannot be moved into a tab that already includes 18 icons.

To move icons to another tab using drag and drop:

1.

Tap the icon you want to move.

2.

Drag the icon to the destination tab, and then drop it. The name of the destination tab is displayed inverted, the icon is moved, and that icon in the original tab screen is deleted.

Icons that can be moved are displayed inverted when they are tapped. The moved icon is placed next to the last icon on the tab screen. An icon cannot be moved into a tab that already includes 18 icons.

Deleting an Icon

NOTE

1.

Tap and hold the icon you want to delete to display the pop-up menu.

2.

Tap Drop on the pop-up menu. The icon is deleted and the next icon automatically shifts to fill the deleted icon position.

Chapter 8: Optional Functions

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
82
83
84
85
86
87
88
89

Quick Links:

[Power Button](#)

[Battery Switch](#)

[Battery Charging](#)

[Specifications](#)

Related Manuals for Toshiba e400

[Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

[Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

[Handhelds Toshiba e350 User Manual](#)

Toshiba user's manual pocket pc e350 (105 pages)

[Handhelds Toshiba e355 User Manual](#)

E355 user's guide (116 pages)

[Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

[Handhelds Toshiba e740 User Manual](#)

Toshiba user's manual pda e740 (182 pages)

[Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

[Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

[Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

[Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

[Handhelds Toshiba e570 User Manual](#)

E570 user's guide (109 pages)

[Handhelds TOSHIBA e570 Instruction Manual](#)

Pocket pc (103 pages)

[Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

[Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

[Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

[Handhelds Toshiba e830 User Manual](#)

(30 pages)

Related Content for Toshiba e400

[e350 Deleting An Icon](#)

Toshiba e350

[e310 Deleting An Icon](#)

Toshiba e310

[e755 Adding An Icon](#)

Toshiba e755

[e355 Display Icon List](#)

Toshiba e355

This manual is also suitable for:

[E405Pd400u-00002r](#)