

TOSHIBA

Toshiba e740 User Manual

Toshiba user's manual pda e740


1
2
3
4
5
6
7
8
9
10
11
12
Table Of Contents
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172
173
174
175
176
177
178
179
180
181
182

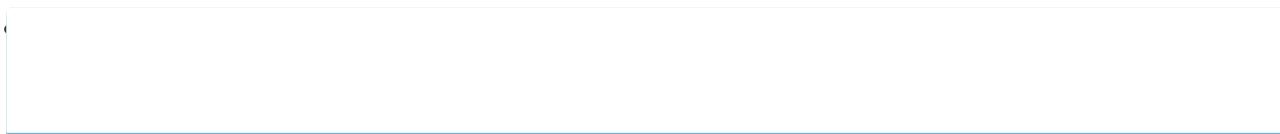

•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

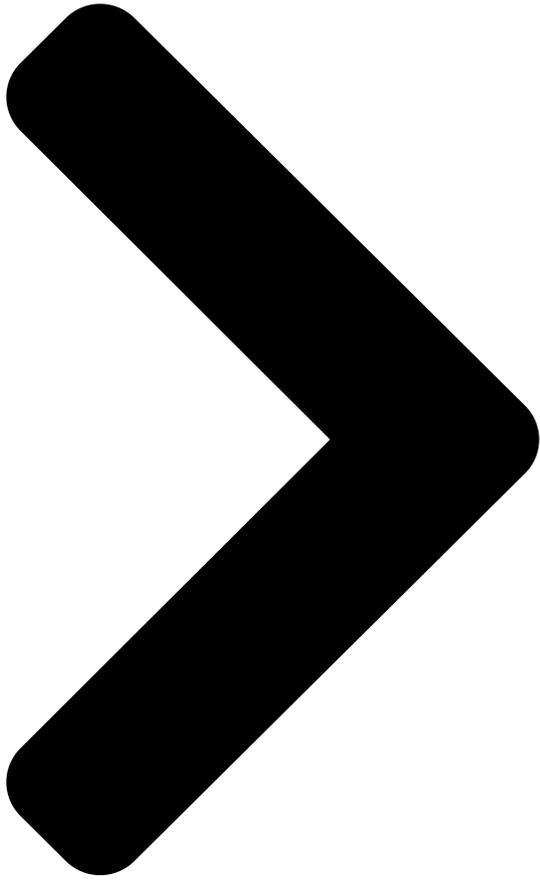

Introduction

TOSHIBA Pocket PC e740

Pocket PC e740

User's Manual

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba e740

[Handhelds Toshiba e310 User Manual](#)

Toshiba user's manual pocket pc e310 (104 pages)

[Handhelds Toshiba e350 User Manual](#)

Toshiba user's manual pocket pc e350 (105 pages)

[Handhelds Toshiba e355 User Manual](#)

E355 user's guide (116 pages)

[Handhelds Toshiba Pocket PC e350 Specifications](#)

Toshiba pocket pc e350: specifications (1 page)

[Handhelds Toshiba e400 User Manual](#)

Toshiba pocket pc user's manual e400, e405 (118 pages)

[Handhelds Toshiba Pocket PC e400 Specifications](#)

Toshiba pocket pc e400: specifications (1 page)

[Handhelds Toshiba FREEDOM E330 User Manual](#)

Toshiba pda user manual (105 pages)

[Handhelds Toshiba e750 User Manual](#)

Toshiba pocket pc user's manual e750 (215 pages)

[Handhelds Toshiba e755 User Manual](#)

Toshiba pocket pc user's guide (187 pages)

[Handhelds Toshiba Pocket PC e750 Specifications](#)

Toshiba pocket pc e750: specifications (2 pages)

[Handhelds TOSHIBA e570 Instruction Manual](#)

Pocket pc (103 pages)

[Handhelds Toshiba e570 User Manual](#)

E570 user's guide (109 pages)

[Handhelds Toshiba e800 User Manual](#)

Toshiba pocket pc user's guide (236 pages)

[Handhelds Toshiba Pocket PC e800 Specifications](#)

Toshiba pocket pc e800: specifications (2 pages)

[Handhelds Toshiba Pocket PC e755 Specifications](#)

Toshiba pocket pc e755: specifications (1 page)

[Handhelds Toshiba e830 User Manual](#)

(30 pages)

Summary of Contents for Toshiba e740

[Page 1](#) Introduction TOSHIBA Pocket PC e740 Pocket PC e740 User's Manual TOSHIBA Pocket PC e740...

[Page 2: Copyright Information](#)

Introduction Thank you very much for your purchase of this Toshiba Pocket PC e740. Please be sure to read this user's manual before using the Toshiba Pocket PC, and ensure that you are aware of the correct handling procedures. ■...

[Page 3: Safety Precautions](#)

Safety precautions ■ Please carefully read “Safety precautions” before using the Toshiba Pocket PC and ensure that you are aware of correct handling procedures. ■ The precautions provide essential information for the protection of the user and others from possible injury and property damage. They also provide information on the safe handling of this product .

[Page 4](#) Limitation of liability ■ Toshiba Corporation is in no way liable for any damage resulting from earthquakes, fire, actions on the part of a third party, other accidents beyond the control of Toshiba Corporation or intentional acts, negligence or misuse on the part of the user or any usage under abnormal conditions.

[Page 5](#) The battery can suffer liquid leakage, ignition, or rupture. ■ Do not drop the Pocket PC or allow the Pocket PC to be subjected to any severe shock. The battery can suffer liquid leakage, ignition, or rupture. TOSHIBA Pocket PC e740 Introduction...

[Page 6](#) Dispose of used batteries Do not dispose of used batteries with your ordinary waste. Dispose of the batteries as required by local ordinances or regulations. Use only batteries recommended by Toshiba as replacements. Handling AC adaptor, power cord, cradle WARNINGS ■...

[Page 7](#) Connecting the terminals (metallic parts) with metallic objects can cause heat generation or burns. ■ Keep the Pocket PC out of the reach of infants. Placing within the reach of infants can cause injury. TOSHIBA Pocket PC e740 Introduction...

[Page 8](#) Do not wipe the display with a wet cloth. Do not touch it with wet hands. Wiping or touching under these conditions can cause failure or malfunction. Wipe the display with a soft dry cloth. TOSHIBA Pocket PC e740 Introduction viii...

[Page 9](#) ■ Failure or repair servicing of the Pocket PC ■ Toshiba Corporation is in no way liable for change or loss of stored data resulting from failure or repair of the unit. Please understand this before usage. ■ When using the optional (sold separately) “SD memory card”, please be sure to read the relevant instruction manual and ensure that you are aware of correct handling procedures.

[Page 10](#) EMC (Electromagnetic compatibility) and safety standards. However, Toshiba cannot guarantee that this product still observes these EMC standards if options or cables not produced by Toshiba are connected or implemented. In this case, the persons who have connected / implemented those options / cables have to make sure that the system (PC plus options / cables) still fulfils the required standards.

[Page 11](#) Only peripherals complying with the FCC class B limits may be attached to this equipment. Operation with non-compliant peripherals or peripherals not recommended by Toshiba is likely to result in interference to radio and TV reception. Shielded cables must be used between the external devices and the computer’s USB ports, external monitor port, PS/2 keyboard port and...

[Page 12](#) This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. TOSHIBA Pocket PC e740 Introduction...

[Page 13: Table Of Contents](#)

Programs ...2-21 Navigation Bar and Command Bar ...2-22 Pop-up Menus ...2-23 Notifications...2-23 Enter Information on Your Toshiba Pocket PC...2-24 Find and Organize Information...2-33 Customize Your Toshiba Pocket PC ...2-34 Chapter 3 Microsoft ActiveSync ...3-1 Chapter 4 Microsoft Pocket Outlook ...4-1 Calendar: Scheduling Appointments and Meetings ...4-2...

[Page 14](#) IP Address Page ...8-3 TMU-Traffic Monitoring Utility ...8-12 Chapter 9 Bluetooth Settings Help ...9-1 Bluetooth Settings...9-1 Specifications ...9-2 Setup ...9-3 Bluetooth™ Connection ...9-4 Bluetooth™ Settings ...9-13 Disconnecting/Exiting Bluetooth™ Connection ...9-17 Bluetooth Chat...9-21 BPU-Bluetooth Management Utility...9-22 Error Messages ...9-25 TOSHIBA Pocket PC e740...

[Page 15](#) Home Help ...11-6 How to Make a Backup...11-10 Carrying Out Restore Operation ...11-12 Data Backup Help ...11-13 Chapter 12 Additional Information ...12-1 Troubleshooting ...12-1 Resetting ...12-4 Initializing ...12-5 Specifications ...12-5 Appendix A FAQ about Wireless LAN... A-1 TOSHIBA Pocket PC e740...

[Page 16: Chapter 1 Getting Started](#)

■ A Calendar reminder alerts you that it is time to catch the bus. You grab your Toshiba Pocket PC device and catch the bus just in time. Because ActiveSync keeps the information on your device up-to-date, you leisurely review your task list, make notes about the new books and CDs you want to buy, and read and respond to e-mail messages.

[Page 17: Where To Find Information](#)

See this source: This User's Manual and device Help. To view Help, tap and then Help. The Toshiba Pocket PC Companion CD. The Quick Start Card or ActiveSync Help on your computer. To view Help, click Help and then Microsoft ActiveSync Help.

[Page 18: Chapter 2 Basic Skills](#)

TOSHIBA Pocket PC e740 Basic Skills You can easily learn to use your Toshiba Pocket PC. This chapter describes the use and customization of your Toshiba Pocket PC. Parts Names and Function Main unit and optional Expansion Pack (front view)

[Page 19: The Cradle](#)

Cradle Connection Port The Cradle Initial Setting of Program Button Program button 1 = Calendar Program button 2 = Tasks Program button 3 = Home Program button 4 = Contacts Program button 5 = Voice recorder User's Manual DC IN Socket Expansion Pack (optional) USB Port Basic Skills...

[Page 20: Power Button](#)

The power button turns the unit and the front light on and off. Power button Press and hold it. Press it quickly. User's Manual Microphone Stereo Headphone Jack Toshiba Scroller Battery Pack Lock Expansion Pack DC-IN Socket When the power is The power turns on. The power turns on.

[Page 21: Battery Switch](#)

The battery switch supplies/cuts off the battery power to the Toshiba Pocket PC. The setting of this switch at shipment is "stop". When using the Toshiba Pocket PC for the first time, slide this switch to the left (the "supply" side) with the stylus.

[Page 22: How To Use The Stylus](#)

On the pop-up menu that appears, tap the action you want to perform. When you operate the touch screen of the Toshiba Pocket PC e740, use the supplied stylus. If the tip of the stylus is damaged, do not use it. If you operate the touch screen with a damaged stylus or a ballpoint pen, the touch screen may be damaged.

[Page 23: Battery Charging](#)

Battery Charging A battery is installed in the Toshiba Pocket PC. When using the Toshiba Pocket PC for the first time, set the battery switch to the supply side, and then charge the battery with the supplied AC adapter. How to Charge the Battery You can use two charging methods.

[Page 24](#) You cannot turn on the power if the Battery Pack Lock is at the Release position. You can change the main battery without data loss because your Toshiba Pocket PC e740 has a rechargeable backup battery. But the capacity of the backup battery is small. When you change the main battery, please attach the new main battery and switch Battery Pack Lock to the Lock position as soon as possible.

[Page 25](#) How to Use the High Capacity Battery Pack Turn off the power. Switch the Battery Pack Lock to release the battery pack. Remove battery from the Pocket PC. Connect the High Capacity Battery pack to the Pocket PC. Switch the Battery Pack Lock to lock the High Capacity Battery pack. User's Manual Basic Skills...

[Page 26: How To Prolong Battery Life](#)

■ Do not leave the Toshiba Pocket PC in a place of high or low temperature. It may shorten battery life. If you have not used the Toshiba Pocket PC for several days, its battery charge level reading may be inaccurate.

[Page 27: How To Use The Optional Expansion Pack](#)

The battery gradually discharges even if the device is not being used. When the Toshiba Pocket PC is left for a long time, the battery of the Toshiba Pocket PC may completely discharge. As a precaution, it is recommended that you save the Toshiba Pocket PC's memory data to your computer or to a storage card.

[Page 28: Parts And Functions Of The Expansion Pack](#)

Only use a Microsoft Pocket PC compatible keyboard. Release Button: When being pressed, the Release Button releases the Expansion Pack from the Pocket PC e740. Connecting the Expansion Pack to the Pocket PC Plug the Guide Pins into the corresponding jacks on the Pocket PC.

[Page 29: Initial Setup](#)

Initial Setup When using the Toshiba Pocket PC e740 for the first time, carry out the initial setup according to the procedures below after the battery has been charged. Move the battery switch to the "supply" position. The Toshiba Pocket PC powers on automatically and the Welcome screen appears.

[Page 30: Inserting A Cf Ii Card](#)

Inserting a CF II Card Turn off the power. Remove the dummy card. Insert the CF II card confirming the direction of the card. Line up the side grooves of the card and the groove edge of the card slot. Insert the card smoothly and completely.

[Page 31](#) To remove a card: Turn off the power. Lightly press down the release button with the stylus. The button will pop out. Press down on the release button again. The card will withdraw slightly from the slot. Pull the card straight up to remove. Use the stylus to release the CF II card.

[Page 32: Inserting An Sd Card](#)

Inserting an SD Card Turn off the power. Remove the dummy card. Insert the card with its contact surface (metal contact surface) facing the back of the Toshiba Pocket PC. Press down until it clicks. User's Manual Basic Skills 2-15...

[Page 33](#) To remove a card: Turn off the power. Lightly press the card down until a clicking sound is heard. The card will pop out slightly from the slot. Pull the card straight up to remove it. When storage cards are inserted in both the CF and SD card slots, one of them may only be accessible depending on the application or the Settings operation (typically, the first storage card inserted is accessed).

[Page 34: Connecting To A Computer](#)

Connecting to a Computer Before connecting your Toshiba Pocket PC to a computer, check the following: ■ ActiveSync has been installed on your computer. (See Chapter 3.) ■ The position of connecting port on the computer may differ according to the computer type.

[Page 35: To Connect Directly Using A Connection Cable](#)

Basic Skills To connect directly using a connection cable: Connect the Pocket PC directly to your computer using an optional USB Client cable. When the Pocket PC is connected to another device via a USB Client cable do not plug the AC adapter directly into the Pocket PC as this may lead to interference.

[Page 36: Today Screen](#)

Today Screen When you turn on your device for the first time each day (or after 4 hours of inactivity), you'll see the Today screen. You can also display it by tapping and then Today. On the Today screen, you can see at a glance important information for the day.

[Page 37](#) Following are some of the status icons you may see. Status Icon If more notification

icons need to be displayed than there is room to display them, the Notification icon, notification icons. User's Manual Meaning Traffic Monitoring Utility (Wireless LAN model only).

[Page 38: Programs](#)

Drag the stylus off the label so that the command is not carried out. The following table contains a partial list of programs that are on your device. Look on the Toshiba Pocket PC Companion CD for additional programs that you can install onto your device. Icon...

[Page 39: Navigation Bar And Command Bar](#)

Navigation Bar and Command Bar The navigation bar is located at the top of the screen. It displays the active program and current time, and allows you to switch to programs and close screens. Use the command bar at the bottom of the screen to perform tasks in programs.

[Page 40: Pop-Up Menus](#)

Pop-up Menus With pop-up menus, you can quickly choose an action for an item. For example, you can use the pop-up menu in the contact list to quickly delete a contact, make a copy of a contact, or send an e-mail message to a contact.

[Page 41: Enter Information On Your Toshiba Pocket Pc](#)

Enter Information on Your Toshiba Pocket PC You have several options for entering new information: ■ Use the input panel to enter typed text, either by using the soft keyboard or other input method ■ Write directly on the screen ■...

[Page 42: To Type With The Soft Keyboard](#)

When you use the input panel, your device anticipates the word you are typing or writing and displays it above the input panel. When you tap the displayed word, it is inserted into your text at the insertion point. The more you use your device, the more words it learns to anticipate.

[Page 43: To Use Block Recognizer](#)

To use Block Recognizer: With Block Recognizer you can input character strokes using the stylus that are similar to those used on other devices. Tap the arrow next to the Input Panel button and then Block Recognizer. Write a letter in the box. When you write a letter, it is converted to typed text that appears on the screen.

[Page 44: Writing On The Screen](#)

Writing on the Screen In any program that accepts writing, such as the Notes program, and in the Notes tab in Calendar, Contacts, and Tasks, you can use your stylus to write directly on the screen. Write the way you do on paper. You can edit and format what you've written and convert the information to text at a later time.

[Page 45: To Convert Writing To Text](#)

To convert writing to text: ■ Tap Tools and then Recognize. If you want to convert only certain words, select them before tapping Recognize on the Tools menu (or tap and hold the selected words and then tap Recognize on the pop-up menu). If a word is not recognized, it is left as writing.

[Page 46](#) If the conversion is incorrect, you can select different words from a list of alternates or return to the original writing. To do so, tap and hold the incorrect word (tap one word at a time). On the pop-up menu, tap Alternates.

[Page 47: Drawing On The Screen](#)

Drawing on the Screen You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you select items and how they can be edited. For example, selected drawings can be resized, while writing cannot.

[Page 48: Recording A Message](#)

Recording a Message In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. In Calendar, Tasks, and Contacts, you can include a recording in the Notes tab. In the Notes program, you

can either create a standalone recording or include a recording in a written note.

[Page 49: Using My Text](#)

Basic Skills Using My Text When using Inbox or MSN Messenger, use My Text to quickly insert preset or frequently used messages into the text entry area. To insert a message, tap My Text and tap a message. You can add text after inserting a My Text message before sending it. To edit a My Text message, in the Tools menu, tap Edit and then tap My Text Messages.

[Page 50: Find And Organize Information](#)

Find and Organize Information The Find feature on your device helps you quickly locate information. ■ On the data type, and then tap Go to start the search. To quickly find information that is taking up storage space on your Pocket PC, select Larger than 64 KB in Type.

[Page 51: Customize Your Toshiba Pocket Pc](#)

*.exe., or *.zip file, a Setup.exe file, or several versions of files for different device types and processors. Be sure to select the program designed for the Toshiba Pocket PC and your device processor type. Read any installation instructions, Read Me files, or documentation that comes with the program.

[Page 52: To Add A Program To The Start Menu](#)

Connect your Pocket PC and computer. Double-click the *.exe file. ■ If the file is an installer, the installation wizard will begin. Follow the directions on the screen. Once the software has been installed on your computer, the installer will automatically transfer the software to your device.

[Page 53: Setting A Password](#)

Setting a Password You can protect data or settings from a third person by setting a password which is requested when turning power on. and then Settings. On the Personal tab, tap Password. Select the type of password you would like to use. Enter a password and tap OK.

[Page 54](#) ...or set the front light on External power Set the Brightness level. When finished, tap OK to return to the System tab screen. User's Manual Basic Skills Tap and set the front light brightness level by move the cursor up or down. If Power Save is activated, the front light turns off.

[Page 55: Setting Power](#)

Setting Power You can set to confirm the battery remaining power and the time that elapses until the power turns off after the last operation. and then Settings. On the System tab, tap Power. Perform your Power settings according to your needs. When finished, tap OK to return to the System tab screen.

[Page 56: Setting Microphone](#)

Setting Microphone and then Settings. On the System tab, tap Microphone. ■ This program is setting AGC Enable or Disable. ■ Enable AGC: Turn on automatic gain control for Microphone. ■ Disable AGC: Adopt a fix gain's for Microphone. User's Manual Basic Skills 2-39...

[Page 57: Chapter 3 Microsoft Activesync](#)

Before you begin synchronization, install ActiveSync on your PC from the Toshiba Pocket PC Companion CD. For more information on installing ActiveSync, see your Quick Start card. ActiveSync is already installed on your device.

[Page 58](#) After your first synchronization, take a look at Calendar, Contacts, and Tasks on your device. You'll notice that information you've stored in Microsoft Outlook on your PC has been copied to your device, and you didn't have to type a word. Disconnect your device from your PC and you're ready to go! Once you have set up ActiveSync and completed the first synchronization process, you can initiate synchronization from your device.

[Page 59: Chapter 4 Microsoft Pocket Outlook](#)

TOSHIBA Pocket PC e740 Microsoft Pocket Outlook ® Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Inbox, and Notes. You can use these programs individually or together. For example, e-mail addresses stored in Contacts can be used to address e-mail

messages in Inbox.

[Page 60: Calendar: Scheduling Appointments And Meetings](#)

Calendar: Scheduling Appointments and Meetings Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month, and Year) and easily switch views by using the View menu. You can customize the Calendar display, such as changing the first day of the week, by tapping Options on the Tools menu.

[Page 61: To Create An Appointment](#)

To create an appointment If you are in Day or Week view, tap the desired date and time for the appointment. Tap New. Using the input panel, enter a description and a location. Tap first to select the field. If needed, tap the date and time to change them. Enter other desired information.

[Page 62: Using The Summary Screen](#)

Using the Summary Screen When you tap an appointment in Calendar, a summary screen is displayed. To change the appointment, tap Edit. **Creating Meeting Requests** You can use Calendar to set up meetings with users of Outlook or Pocket Outlook. The meeting request will be created automatically and sent either when you synchronize Inbox or when you connect to your e-mail server.

[Page 63: Contacts: Tracking Friends And Colleagues](#)

Contacts: Tracking Friends and Colleagues Contacts maintains a list of your friends and colleagues so that you can easily find the information you're looking for, whether you're at home or on the road. Using the device infrared (IR) port, you can quickly share Contacts information with other device users.

[Page 64: To Create A Contact](#)

To create a contact: Tap New. Using the input panel, enter a name and other contact information. You will need to scroll down to see all available fields. To assign the contact to a category, scroll to and tap Categories and select a category from the list.

[Page 65](#) **Using the Summary Screen** When you tap a contact in the contact list, a summary screen is displayed. To change the contact information, tap Edit. **User's Manual Microsoft Pocket Outlook View contact details.** Tap to change contact information. Tap to view notes.

[Page 66: Tasks: Keeping A To Do List](#)

Tasks: Keeping a To Do List Use Tasks to keep track of what you have to do. To change the way information is displayed in the list, tap Tools and then Options. **User's Manual Microsoft Pocket Outlook Select the category of tasks you want displayed in the list.**

[Page 67: To Create A Task](#)

To create a task: Tap New. Using the input panel, enter a description. You can enter a start date and due date or enter other information by first tapping the field. If the input panel is open, you will need to hide it to see all available fields.

[Page 68](#) **Using the Summary Screen** When you tap a task in the task list, a summary screen is displayed. To change the task, tap Edit. **User's Manual Microsoft Pocket Outlook View task details.** Tap to show and hide additional summary information. View notes.

[Page 69: Notes: Capturing Thoughts And Ideas](#)

Notes: Capturing Thoughts and Ideas Quickly capture thoughts, reminders, ideas, drawings, and phone numbers with Notes. You can create a written note or a recording. You can also include a recording in a note. If a note is open when you create the recording, it will be included in the note as an icon.

[Page 70: To Create A Note](#)

To create a note: Tap New. Create your note by writing, drawing, typing, and recording. For more information about using the input panel, writing and drawing on the screen, and creating recordings, see Chapter 2. **User's Manual Microsoft Pocket Outlook Tap to return to the note list**

(the note is saved automatically).

[Page 71: Inbox: Sending And Receiving E-Mail Messages](#)

Inbox: Sending and Receiving E-mail Messages Use Inbox to send and receive e-mail messages in either of these ways: ■ Synchronize e-mail messages with Microsoft Exchange or Microsoft Outlook on your computer. ■ Send and receive e-mail messages by connecting directly to an e-mail server through an Internet Service Provider (ISP) or a network.

[Page 72](#) When you receive a message, tap it to open it. Unread messages are displayed in bold. When you connect to your e-mail server or synchronize with your computer, by default, you'll receive messages from the last five days only, the first 100 lines of each new message, and file attachments of less than 100 KB in size.

[Page 73: Composing Messages](#)

Composing Messages To compose a message: Tap New. In the To field, enter an e-mail or SMS address of one or more recipients, separating them with a semicolon, or select a name from the contact list by tapping the Address Book button. All e-mail addresses entered in the e-mail fields in Contacts appear in the Address Book.

[Page 74](#) Managing E-mail Messages and Folders By default, messages are displayed in one of five folders for each service you have created: Inbox, Deleted Items, Drafts, Outbox, and Sent Items. The Deleted Items folder contains messages that have been deleted on the device.

[Page 75: Chapter 5 Companion Programs](#)

Word (.doc), Pocket Word (.psw), Rich Text Format (.rtf), and Plain Text (.txt). User's Manual User's Manual Chapter 5 © Pocket Word, Microsoft © Money, Windows Media™ Player for Toshiba © Reader. , Programs, Pocket Word, Companion Programs ©...

[Page 76](#) Pocket Word contains a list of the files stored on your device. Tap a file in the list to open it. To delete, make copies of, and send files, tap and hold a file in the list. Then, select the appropriate action on the popup menu. You can enter information in Pocket Word in one of four modes (typing, writing, drawing, and recording), which are displayed on the View menu.

[Page 77: Typing Mode](#)

Typing Mode Using the input panel, enter typed text into the document. For more information on entering typed text, see Chapter 2. To format existing text and to edit text, first select the text. You can select text as you do in a Word document, using your stylus instead of the mouse to drag through the text you want to select.

[Page 78: Writing Mode](#)

Writing Mode In writing mode, use your stylus to write directly on the screen. Ruled lines are displayed as a guide, and the zoom magnification is greater than in typing mode to allow you to write more easily. For more information on writing and selecting writing, see Chapter 2.

[Page 79: Drawing Mode](#)

Drawing Mode In drawing mode, use your stylus to draw on the screen. Gridlines appear as a guide. When you lift your stylus off the screen after the first stroke, you'll see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the drawing.

[Page 80: Pocket Excel](#)

Pocket Excel Pocket Excel works with Microsoft Excel on your computer to give you easy access to copies of your workbooks. You can create new workbooks on your device, or you can copy workbooks from your computer to your device. Synchronize workbooks between your computer and your device so that you have the most up-to-date content in both locations.

[Page 81: Msn Messenger](#)

Tips for Working in Pocket Excel Note the following when working in large worksheets in Pocket Excel: ■ View in full-screen mode to see as much of your worksheet as possible. Tap View and then Full Screen. To exit full-screen mode, tap Restore.

[Page 82: Working With Contacts](#)

Setting Up Before you can connect, you must enter Passport or Exchange account information. To set up an account and sign in: In the Tools menu, tap Options . In the Accounts tab, enter your Passport or Exchange account information. To sign in, tap the sign-in screen and enter your e-mail address and password.

[Page 83: Chatting With Contacts](#)

Chatting with Contacts Tap a contact name to open a chat window. Enter your message in the text entry area at the bottom of the screen, or tap My Text to enter a preset message, and tap Send. To invite another contact to a multi-user chat, in the Tools menu, tap Invite and tap the contact you want to invite.

[Page 84](#) To know if the contact you are chatting with is responding, look for the message under the text entry area. For more information on using MSN Messenger, tap User's Manual Companion Programs View full chat. View status of the chat. and then Help.

[Page 85: Windows Media Player](#)

Windows Media. Use Microsoft Windows Media Player on your computer to copy digital audio and video files to your Toshiba Pocket PC. You can play Windows Media and MP3 files on your Toshiba Pocket PC. For more information about using Windows Media Player for Toshiba...

[Page 86: Microsoft Reader](#)

Sample books and a dictionary are also included in the MSReader folder in the Extras folder on the Toshiba Pocket PC Companion CD. Use ActiveSync to download the files from your computer to your activated device as described in the Read Me file in the MSReader folder.

[Page 87: Using The Library](#)

Using the Library The Library is your MSReader home page; it displays a list of all books stored on your device or storage card. To open the Library: ■ On the MSReader command bar, tap Library. ■ On a book page, tap the book title, and then tap Library on the popup menu.

[Page 88: Reading A Book](#)

Reading a Book Each book consists of a cover page, an optional table of contents, and the actual pages of the book. Navigation options are listed in the bottom portion of the cover page. The first time you open a book, you will probably want to go to the first page or to the table of contents, if there is one.

[Page 89: Using Reader Features](#)

Using Reader Features Reading a book electronically gives you several options not available with paper books. These options are available on any book page. Select text by dragging across the text on the page. Then, tap an option on the pop-up menu, as described here: ■...

[Page 90: Chapter 6 Pocket Internet Explorer](#)

TOSHIBA Pocket PC e740 Pocket Internet Explorer Use Microsoft either of these ways: ■ During synchronization with your computer, download your favorite links and mobile favorites that are stored in the Mobile Favorites subfolder in Internet Explorer on the computer.

[Page 91: Mobile Favorites](#)

Mobile Favorites If you are using Microsoft Internet Explorer 5.0 or later on your computer, you can download mobile favorites to your device. Synchronizing mobile favorites downloads Web content to your device so that you can view pages while you are disconnected from your ISP and computer. Use the Internet Explorer plug-in installed with ActiveSync to create mobile favorites quickly.

[Page 92: Using Avantgo Channels](#)

Using AvantGo Channels AvantGo is a free interactive service that gives you access to personalized content and thousands of popular Web sites. You subscribe to AvantGo channels directly from your device. Then, you synchronize your device and computer, or connect to the Internet to download the content.

[Page 93: To View Mobile Favorites And Channels](#)

To view mobile favorites and channels: Tap the Favorites button to display your list of favorites. Tap the page you want to view. You'll see the page that was downloaded the last time you synchronized with your computer. If the page is not on your device, the favorite will be dimmed.

[Page 94: Chapter 7 Getting Connected](#)

TOSHIBA Pocket PC e740 Getting Connected You can use your device to exchange information with other mobile devices as well as your computer, a network, or the Internet. You have the following connection options: ■ Use the infrared (IR) port on your device to send and receive files between two devices.

[Page 95: Transfer Items Using Infrared](#)

Transfer Items Using Infrared Using infrared (IR), you can send and receive information, such as contacts and appointments, between two devices. To send information: Switch to the program where you created the item you want to send and locate the item in the list. Align the IR ports so that they are unobstructed and within a close range.

[Page 96: To Create An Ethernet Connection To An Isp](#)

In the Select a modem list, select your modem type. If your modem type does not appear, try reinserting the modem card. If you are using an external modem that is connected to your device with a cable, select Hayes Compatible on COM1. You should not need to change any settings in Advanced.

[Page 97: Connect To Work](#)

To start the connection, simply start using one of the programs listed in the preceding section. Once connected, you can perform the same activities as listed in the preceding section. Connect to Work If you have access to a network at work, you can send e-mail messages, view intranet pages, synchronize your device, and possibly access the Internet.

[Page 98: To Create An Ethernet Connection To A Network](#)

To start the connection, simply start using one of the following programs. Your device will automatically begin connecting. Once connected, you can: ■ Send and receive e-mail messages by using Inbox. Before you can use Inbox, you need to provide the information it needs to communicate with the e-mail server.

[Page 99: End A Connection](#)

End a Connection To disconnect, do one of the following: ■ When connected via dial-up or VPN, tap the Connection icon, , on your navigation bar, and then tap End. ■ When connected via cable or cradle, detach your device from the cable or cradle.

[Page 100: Chapter 8 Wi-Fi \(Ieee 802.11B\) Wlan Adaptor](#)

Wi-Fi (IEEE 802.11b) WLAN Adaptor Overview Your Pocket PC e740 may be equipped with a IEEE 802.11b WLAN Adaptor which can connect your Pocket PC e740 wirelessly to the existing IEEE 802.11b wireless networks or form its own Wireless Network. Using the adaptor in the Pocket PC, you can enjoy the complete mobile and high-speed wireless Internet connectivity while in range of a Wi-Fi compatible access point .

[Page 101](#) Configuration Click Start > Settings > Connections > Network Adaptors > "IEEE 802.11b WLAN Adaptor" > Properties > IP Address to set IP address, Subnet mask and Default gateway settings if needed. Click Start > Settings > System > Wireless LAN Utility to view or adjust other configuration settings, such as Mode and SSID etc.

[Page 102: Ip Address Page](#)

IP Address Page Use IP Address Page to view and edit the IP address, Subnet mask and Default gateway. Click Start > Settings > Connections > Network Adaptors > "IEEE 802.11b WLAN Adaptor" > Properties > IP Address ■ IP Address: IP Address is Internet Protocol Address; a numeric address such as 10.37.238.100 that the domain name server translates into a domain name.

[Page 103: Name Servers Page](#)

Name Servers Page Use Name Servers Page to view and edit DNS, Alt DNS, WINS and Alt WINS. Start > Settings > Connections > Network Adaptors > "IEEE 802.11b WLAN Adaptor" > Properties > Name Servers ■ DNS: Domain Name System is a database system that translates addresses and domain names.

[Page 104](#) Link Page Use the Link page to view SSID, Channel, TxRate, BSSID, IP Address, Subnet Mask and Gateway. Click Start > Settings > System > Wireless LAN Utility > Link ■ SSID: An up to 32 character case sensitive name shared among all devices on a wireless network.

[Page 105](#) Wi-Fi (IEEE 802.11b) WLAN Adaptor When the adaptor is disconnected with the Access Point or the 802.11 Ad Hoc network, "Non-associated" will appear in the BSSID field. Configuration Page Use the Configuration page to set the Mode, SSID, Channel and Country, and to view Link Quality as well.

[Page 106](#) ■ Mode: Use the Mode pull-down menu to select the operating mode. Infrastructure – This is a default mode. This mode allows Wireless LAN Module to transmit and receive data with an Access Point. This mode enables roaming between AP cells in the network. 802.11 Ad Hoc –...

[Page 107: Advanced Page](#)

Advanced Page Use Advanced page to view and edit Power Saving Mode, Transmission Rate and Wired Equivalent Privacy (WEP). Click Start > Settings > System > Wireless LAN Utility > Advanced ■ Wired Equivalent Privacy (WEP) ■ Mode: The default WEP Mode setting is "Disable". You can choose "64 bits (ASCII)", "128 bits (ASCII)", "64 bits (HEX)"...

[Page 108](#) ■ Key ID: While enabling "64 bits (ASCII)", "128 bits (ASCII)", "64 bits (HEX)" or "128 bits (HEX)", the "Key ID" will then be enabled as well. You must choose the same "Key ID" for connection with the Access Point or the Peer site Station. You can choose "Key 1" ~ "Key 4"...

[Page 109](#) Scan Page Use Scan page to scan and select the available Access Points and 802.11 Ad Hoc networks. Click Start > Settings > System > Wireless LAN Utility > Scan ■ Rescan: The Scan Page displays the available local wireless Access Points and 802.11 Ad Hoc networks.

[Page 110](#) Info Page Use Info Page to view MAC Address, Utility version, Driver version and Firmware version. Click Start > Settings > System > Wireless LAN Utility > Info ■ MAC Address: MAC stands for Media Access Control. The physical address of a device connected to a network expressed as a 48-bit hexadecimal number.

[Page 111: Tmu-Traffic Monitoring Utility](#)

TMU-Traffic Monitoring Utility TMU keeps users updated of current WLAN Module's activity status. Icon Specification Wireless Communication Switch off: The Wireless Communication Switch, on the bottom of the PDA, is turned off. Clicking on the icon Wireless Communication Switch". Click "OK" to close the Message Box. Turn on the switch and you will see the icon on the original setting for the WLAN Module Power.

[Page 112](#) Wi-Fi (IEEE 802.11b) WLAN Adaptor Wireless LAN Power off: The WLAN Module is at Power Off Status. Clicking on the icon displays you 2 icons, "On" and "Off". Click "On" to turn on the Wireless LAN Module, and then the icon turns to .

[Page 113](#) Wi-Fi (IEEE 802.11b) WLAN Adaptor Wireless LAN Power on: The WLAN Module is at Power On Status. Clicking on the icon displays you 2 icons, "On" and "Off". Click "Off" to turn off the Wireless LAN Module, and then the icon turns to .

[Page 114: Chapter 9 Bluetooth Settings Help](#)

TOSHIBA Pocket PC e740 Bluetooth Settings Help If your Pocket PC e740 is equipped with a Bluetooth adaptor, you can wirelessly connect to a Bluetooth-enabled computer or modem. Bluetooth Settings You can select the desired User Mode, Security Mode and other settings for use when connecting to other Bluetooth devices.

[Page 115: Specifications](#)

Specifications By enabling the Bluetooth device on your Toshiba Pocket PC, you will be able to wirelessly communicate with Bluetooth-enabled PCs, modems and other peripherals, and chat with other Toshiba Pocket PCs. The Toshiba Pocket PC supports following Bluetooth services:

■...

[Page 116: Setup](#)

After installing the program to your Toshiba Pocket PC, follow the instructions on the reset confirmation screen. After resetting your Toshiba Pocket PC, you will be able to use the Bluetooth Settings program. Enabling Bluetooth™ on Your Toshiba Pocket PC Enable Bluetooth™ ...

[Page 117: Bluetooth™ Connection](#)

Bluetooth™ Connection Once Bluetooth™ is connected, your Toshiba Pocket PC is called as "local device" while another device is called as "remote device". To establish Bluetooth™ connection Follow the procedure below to establish a Bluetooth™ connection. Detect other devices (remote devices) After starting the Bluetooth Settings program, a Bluetooth icon will appear on the command bar at the bottom of Today screen.

[Page 118](#) No device will appear on the remote device list when using this program for the first time or after initializing your Toshiba Pocket PC. Once you have used this program to connect to a remote device, the information for the previously connected device will be displayed in the remote device list.

[Page 119](#) Tap Remote Device Search on the Tools menu. The Remote Device Search screen will appear. It may take several minutes to complete the remote device search. Once the search is completed, the remote device list will be updated with the latest remote device information. Tap and hold to display the properties of the remote devices in a pull-down menu.

[Page 120](#) The device addresses are displayed for devices that did not respond to the remote device name search. Connected icon Unconnected icon "Ghost" icon You can reduce the time to search for remote devices by disabling the device name search function. Tap Search Options on the Tools menu, and select Disable Device Name Search.

[Page 121](#) Device Address ■ You can delete all of the "ghost" devices from the remote device list by tapping Delete Ghost Device on the Tools menu. ■ A maximum of 255 devices can be displayed on the remote device list. ■ You can differentiate between devices with the same name on the remote device list by checking the device address.

[Page 122](#) Tap and hold on the name of the device to which you want to connect. A pop-up menu will appear. Tap Service List on the pop-up menu to display a list of services for that device. No information will appear on the service list when the remote device has not been connected before.

[Page 123](#) Enter the Bluetooth Passkey within 20 seconds. The passkey must not exceed 16 alphanumeric characters. The default Bluetooth Passkey allows you to connect to other Toshiba Pocket PC Pocket PCs. Enter the Bluetooth Passkey on the local device and tap OK.

[Page 124](#) The same passkey must be entered on the remote device. The remote device will be authenticated and the service list will be updated. Tap and hold on the name of the service to which you want to connect. A pop-up menu will appear. User's Manual Bluetooth Settings Help 9-11...

[Page 125](#) Connect to PC via ActiveSync Requirements: The PC must be Bluetooth™ -enabled and ActiveSync must have been installed. Your Toshiba Pocket PC must also have been synchronized with the PC using a cradle or a cable at least once to establish a "partnership" to the PC.

[Page 126: Bluetooth™ Settings](#)

On your Toshiba Pocket PC, tap Start, Programs, and then Bluetooth Connection. The connection and authentication processes will begin. Bluetooth Connection changes the synchronization interface to "Bluetooth" automatically. If you want to use ActiveSync via USB interface after

using "Bluetooth Connection", please reset the ActiveSync interface to "USB".

[Page 127](#) Tap the Settings button. The Settings menu allows you to make advanced settings for the User Mode and display the local device information. Tap Change User Mode. You can select Office, Mobile, Home or Other for the User Mode. Selecting a User Mode immediately enables the corresponding settings.

[Page 128](#) User Mode security settings The User Modes have been programmed with the following Security Modes. User Mode Office Mobile Home Other Because Bluetooth is a wireless network, and unknown devices can connect to the local device, you can restrict remote access to your device.

[Page 129](#) Set the Connectability Mode (Non-connectable Mode or Connectable Mode). Set the Security Mode (Security Off or Security On). ■ When using the Security On mode, you can check Enable Encryption to encrypt all data sent and received. Tap OK to return to the Change User Mode screen and enable the new User Mode settings.

[Page 130: Disconnecting/Exiting Bluetooth™ Connection](#)

If you turn off the power of your Toshiba Pocket PC without first disconnecting the Bluetooth connection, the following error message may appear the next time you turn on the power of the Toshiba Pocket PC: "An error has occurred with Bluetooth, either because the power has been turned off or because the device has been disabled.

[Page 131](#) to select the different attributes of the devices Connected remote devices are indicated with a Connected icon. On the Remote Device List screen, tap and hold on the name of the device which you want to disconnect. Tap Service List to display a list of services for the device. Tap and hold on the name of the service which you want to disconnect.

[Page 132](#) Tap Disconnect on the pop-up menu. Once the service is disconnected, the Connected icon will change to a Serial Port or Dial-up Network icon. Tap OK to return to the Remote Device List screen. User's Manual Bluetooth Settings Help 9-19...

[Page 133](#) Tap Tools to display the Tools menu. Tap Return to Top of Page to display the Bluetooth Settings screen. Tap Exit. Turn off the power of your Toshiba Pocket PC. Disable the Bluetooth device on your Pocket PC. User's Manual...

[Page 134: Bluetooth Chat](#)

Bluetooth Chat To chat with another Toshiba Pocket PC using this program, both devices must perform the following steps. Connect using Bluetooth™ ■ Tap Start, Programs, and then Toshiba Bluetooth Chat. ■ Tap Begin Bluetooth Chat from the Tools menu.

[Page 135: Bpu-Bluetooth Management Utility](#)

BPU-Bluetooth Management Utility BPU keeps users updated of current Bluetooth Module's activity status, and provide a interface to turn the Bluetooth module on/off. Icon Specification Wireless Communication Switch off: The Wireless Communication Switch, on the bottom of the PDA, is turned off.

[Page 136](#) Bluetooth Settings Help Bluetooth Power off: The Bluetooth Module is at Power Off Status. Tapping the icon displays you 2 icons, On and Off. Click On to turn on the Bluetooth Module, and then the icon turns to . Click Off to exit without turning on the Bluetooth Module.

[Page 137](#) Bluetooth Settings Help Bluetooth Power on: The Bluetooth Module is at Power On Status. Tapping the icon displays you 2 icons, On and Off. Tap Off to turn off the Bluetooth Module, and then the icon turns to . Click "On" to exit without turning off the Bluetooth Module.

[Page 138: Error Messages](#)

Turn the Wireless Communication Switch off and on again. The power of the Toshiba Pocket PC is off. Turn on the power of the Toshiba Pocket PC and then tap OK on the screen. Bluetooth Setting has ended. Reset the system to restart the program A different type of malfunction has occurred.

[Page 139](#) Increase the amount of available memory and then try the service list search

again. The Toshiba Pocket PC has detected more than its maximum number of services (30). Have the remote devices delete unneeded services, and then update the service list.

[Page 140](#) Disconnect from the remote device and then try connecting to another device. Restart Bluetooth Settings or reset the Toshiba Pocket PC. Restart Bluetooth Settings or reset the Toshiba Pocket PC. Restart Bluetooth Settings or reset the Toshiba Pocket PC.

[Page 141](#) Solution User's Manual An error occurred while trying to write on the Bluetooth module. Reset the Toshiba Pocket PC. The software required to connect could not be found. Reinstall the software. Enter a PIN with a maximum of 16 alphanumeric characters.

[Page 142: Chapter 10 Ati Presentation Pack](#)

Pocket PC. IA Presenter can run as a standalone mobile PowerPoint player using your portable device's LCD screen. But with IA Presenter and the Toshiba Expansion Pack linked to an LCD projector or a monitor, you can create powerful presentations from your Pocket PC.

[Page 143: Ia Presenter](#)

After accepting the license agreement, choose the folder to which you want the ATI Presentation Pack to be installed. Click Next to accept the default destination folder; click Browse... to specify a different folder. Check your Pocket PC screen for any additional steps required to complete the installation.

[Page 144](#) Using IA Presenter's Desktop Converter When you drag-and-drop a PowerPoint file from your PC to your Pocket PC, the ActiveSync Converter in the IA Presenter will automatically convert the PowerPoint file to a special IA Presenter format for your Pocket PC, using the resolution you specify. The file will be placed in any folder on your mobile device where you choose to drag-and-drop it.

[Page 145: Opening A Presentation And Using View Modes](#)

Opening a Presentation and Using View Modes When you invoke IA Presenter, the first screen that appears lists all the converted PowerPoint presentations currently in your \My Documents folder. Tap on the name of the file you want to load. You can then choose from the following view modes.

[Page 146: Notes Page](#)

■ If no slides are selected, there is no change to the current status of the VGA Display. That is, if an image is already displayed on the VGA Display, that image remains until you select a slide on your LCD screen for projection.

[Page 147: Slide Show](#)

ATI Presentation Pack The lower pane displays the Speaker Notes that were entered for the original PowerPoint presentation, or entered/edited in IA Presenter. The lower pane is both a Notes display window and an editing window. Tap in the lower pane to start editing a Speaker Note. The editing functionality is the same as for Notes Page view.

[Page 148](#) ATI Presentation Pack Trigger If the Trigger mode is selected, the slide show will advance according to the mode you set using the Tools > Set Up Show... command or Set Up Show icon. For example, if you have specified to advance the slides manually, they will advance each time you tap on the screen.

[Page 149](#) ATI Presentation Pack Pen Width Tapping Pen Width opens a submenu of available pen widths to use for your Ink annotation when in Pen mode. Select a thickness settings as the new pen width to be used for Ink strokes on the LCD screen (and projection to VGA output, if desired).

[Page 150](#) ATI Presentation Pack Blank When you select Blank, your LCD screen will become completely black, and the black screen will also be projected to your VGA screen. (After you have selected Blank, the command name changes to Restore. Tap Restore when you are ready to return to the slide that was previously displayed.) Using the Blank Option with Pen Mode: When the Blank option is active and IA Presenter is in Pen mode, you can...

[Page 151: Vga Slide Show](#)

VGA Slide Show VGA Slide Show mode operates almost identically to the Slide Show mode, except for the following operational differences: ■ You should use the VGA Output tab in the Tools > Options... command to set VGA output-related options. You can also elect to have IA Presenter perform dithering for your slide if you project your slide to an external VGA/video device with less color capability (such as only 256 colors available).

[Page 152: Controlling Transition Effects](#)

Controlling Transition Effects Any transition effects that were assigned in your original PowerPoint file will be retained when the IA Presenter Converter converts it to an .iap file on your Pocket PC. However, IA Presenter also furnishes many attractive transition effects that can be assigned to the .iap file.

[Page 153: Ia Screen Mirror](#)

IA Screen Mirror IA Screen Mirror projects an exact emulation of your mobile device's screen contents (LCD display) onto a connected external VGA output device or television monitor via the Composite video or S-video terminals. It allows you to project and display multiple LCD screens on the VGA screen simultaneously, "freeze"...

[Page 154: Copyright And Contact Information](#)

Copyright and Contact Information ® and IMAGEON ® Microsoft , MS-Windows and Windows CE™ is a trademark, of Microsoft Corporation in the United States and other countries. ® IA Album , IA Presenter of IA Style, Inc., and Information In Action™ is a trademark of IA Style, Inc.

[Page 155: Chapter 11 Optional Functions](#)

Launching an Application From the Home , Programs, and then Home to display the Home screen. You can also launch the Home by pressing the Toshiba Pocket PC Home button. Tap to select Paste or Add.

[Page 156: About Running](#)

Also, you can launch an application by moving the cursor button or scroller to select and pressing the center of the cursor button to confirm. You can add tabs up to a maximum of 10 kinds and icons up to 18 in a tab.

[Page 157: Display Icon List](#)

Display Icon List The following list shows the tabs and icons for the initial setup. Tabs Running Main Programs Games Moving an Application Icon into Another Tab The moved icon is placed next to the last icon on the tab screen. You cannot move an icon into a tab which already contains 18 icons.

[Page 158: Deleting An Icon](#)

If the Application file is not designated, or if the Application name is not entered, you cannot add a new icon. You cannot launch the icon added from the storage card, if the same card is not inserted in the Toshiba Pocket PC. User's Manual Optional Functions Tap to designate a folder you want to browse.

[Page 159: Tab Setting](#)

Tab Setting You can set to add, delete or rename the tab on the Tab Settings screen. You can also set to display a desired bitmap image on your screen background. To add a tab: Tap Tools and then Tab Settings to display the Tab Settings screen. Tap Tab Settings and then New to display a box to enter the new tab name.

[Page 160: Home Help](#)

To change a background: Tap Tools and then Tab Settings to display the Tab Settings screen. Select the tab of which background you want to change. Tap Browse to display the Browse dialog screen. Tap the desired bitmap file from the list to return to the Tab Settings screen.

[Page 161](#) (2). Launching applications When an icon on the tab screen is tapped, the application or associated file registered at the icon is launched. ■ Applications can also be launched by selecting them with the cursor button then pressing on the center of the cursor button. (3). Switching the icon display Tap on the View menu to display the current display

settings.

[Page 162](#) 4. Browse Dialog Tap the Folder box to select the folder to be browsed. Tap the Type box to select the type of file to be browsed. The list of the files of the specified type and in the specified folder appears on the screen.

[Page 163](#) 4. Adding tabs Select Tab Settings from the Tools menu. The Tab Settings screen appears. Tap the New button. An input screen appears. Input the name you want to give the tab (up to 10 characters) into the New tab box. Tap the OK button.

[Page 164: How To Make A Backup](#)

How to Make a Backup You can make a backup of the Toshiba Pocket PC data to the SD/CF card. If you have backed up your data on the SD/CF card, you can restore that data in your Toshiba Pocket PC. You can also delete backup file data from the SD/CF card.

[Page 165: Making A Backup](#)

Making a Backup Insert a CF Card or a SD Memory Card. Tap Start, Programs, and then DataBackup to display the DataBackup screen. Set a Custom Name, if you want. Select and tap Card or Card 2. Tap Backup to display the Prompt message screen. Tap OK.

[Page 166: Carrying Out Restore Operation](#)

To restore is to overwrite the backed up data from the storage card onto the main memory of your Toshiba Pocket PC. If the same file name exists in the main memory of your Toshiba Pocket PC, the file data is replaced with the backup data from the storage card.

[Page 167: Data Backup Help](#)

Data Backup Help The backup function allows you to back up the data from the main unit on storage cards. The backed up data can be restored and deleted. Before performing the backup or restore operation, check that there is enough space in the main unit's memory and on the storage card.

[Page 168](#) (4).Deleting a backup file Select DataBackup from Programs in the Start menu. Once the backup screen appears, tap the Restore tab. Tap Card or Card 2 to work. Select a backup file from the Restored Files list. Tap the Delete button. A message screen asking you to confirm that you want to delete the backup file appears.

[Page 169: Chapter 12 Additional Information](#)

TOSHIBA Pocket PC e740 Additional Information Troubleshooting Check the following guide for the possible cause of a problem and how to correct it. Symptom Cause Even if the power The battery power is button is pressed the exhausted. power does not turn on.

[Page 170](#) The screen is dark. The screen is hard to see. Cannot connect to your computer. ActiveSync does not function when your Toshiba Pocket PC is connected to your computer with a cradle or USB cable. Cannot access the Internet. User's Manual...

[Page 171](#) Symptom Following message is displayed: "Not Enough Battery Power. There is not enough battery power to use USB Device" Following message is displayed: "USB OVER CURRENT DETECT USB device is turned off. Please disconnect USB device." Symptom Cannot connect to the network The host computer cannot wirelessly connect with my...

[Page 172: Resetting](#)

Resetting Reset is equal to "Restarting" of a computer. Reset your Pocket PC when a button or tapping the screen does not respond. When your Toshiba Pocket PC is reset, all data that was not stored during operation will be deleted.

[Page 173: Initializing](#)

Initializing When you initialize your Toshiba Pocket PC, it returns to the status when it was purchased. When you initialize your Pocket PC, all data stored in the memory is deleted. Your Pocket PC's initially installed programs are not deleted.

[Page 174](#) Interfaces CF card slot SD card slot Infrared port Stereo headphone jack Cradle

connection port USB Host Interface 12Mbps USB Host interface Analog RGB output D-SUB, 15-pin VGA Output, 640X480, 16bit, AC adaptor Although the display is manufactured using an extremely high order of technology, there may be a case that some dots do not light or always light.

[Page 175: Appendix A Faq About Wireless Lan](#)

TOSHIBA Pocket PC e740 FAQ about Wireless LAN A. Compatibility A1: Should I use equipment with the same brand as the IEEE802.11b WLAN Adaptor's to enable the wireless communication? This is not necessary. IEEE802.11b WLAN Adaptor is Wi-Fi certified which means that it will work well with different branded equipment as long as the equipment is also Wi-Fi certified.

[Page 176](#) B2: How can I connect my Pocket PC to the usable Wireless Network? Please click Start > Settings > System > Wireless LAN Utility > Scan to view Scan Page where you can find the usable Wireless Network. If you cannot see all the networks you are expecting, please click "Rescan"...

[Page 177](#) B4: What is 802.11 Ad Hoc Network? What should I do to form an 802.11 Ad Hoc Network? 802.11 Ad Hoc Mode is used to create a peer-to-peer connection without an Access Point. The SSID must be the same among stations to enable the wireless communication within the local area network.

[Page 178](#) Set your Pocket PC as 802.11 Ad Hoc Mode and choose the same SSID to join the 802.11 Ad Hoc Network (choose the DHCP to get the IP assigned). Check and make sure the Wireless LAN Adaptor in the 802.11 Ad Hoc Network have the same IP group.

[Page 179](#) C2: How do I wirelessly browse the Internet? If your network uses DHCP (Dynamic Host Configuration Protocol), an IP address and DNS (or WINS) will be assigned automatically. On your Pocket PC, simply click Start > Setting > Connections > Network Adaptors >...

[Page 180](#) FAQ about Wireless LAN D. Settings D1: What is SSID? What should I set in the SSID field? SSID stands for Service Set Identification, which is the ID to form the Wireless Network. You can set up to 32 characters in the SSID field. For the Infrastructure Mode, you should set the SSID the same as the Access Point been connected with.

[Page 181](#) E. Security E1: What is WEP? WEP stands for Wired Equivalent Privacy, a security service, used to prevent the unauthorized access to your wireless network. E2: How many WEP security service modes does my Wireless LAN support? WEP stands for Wired Equivalent Privacy that is the security service for the Wireless Network.

[Page 182](#) F3: How does the data transmission rate work? IEEE802.11b WLAN Adaptor allows you to choose one of the six data rate options: Fixed 1Mbps, Fixed 2Mbps, Fixed 5.5Mbps, Fixed 11 Mbps, Auto Select 1 or 2 Mbps, and Fully Auto. The farther the distance between two communicating devices, the slower the data rate should be used.