



# Memory Stick/Memory Stick Pro - Toshiba PORTABLE PERSONAL COMPUTER L500 User Manual

Toshiba personal computer user manual



 
1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188





•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks





## SD/SDHC memory card, miniSD/microSD Card

For further information, please refer to Chapter 8,

Problem

SD/SDHC memory  
card, miniSD/microSD

Card error occurs

You cannot write to an  
SD/SDHC memory  
card

You cannot read a file

## Memory Stick/Memory Stick PRO

---

For further information, please refer to Chapter 8,

Problem

Memory Stick/Memory

Stick PRO error

occurs

You cannot write to an

Memory Stick/Memory

Stick PRO

You cannot read a file

**User's Manual**

Procedure

Remove the SD/SDHC memory card, miniSD/microSD Card from the computer and then reinsert it in order to ensure it is firmly connected.

If the problem persists, then you should refer to the documentation supplied with your SD/SDHC memory card, miniSD/microSD Card for further information.

Remove the SD/SDHC memory card from the computer and check to ensure that it is not write protected.

Check to ensure the required file is actually on the SD/SDHC memory card, miniSD/microSD Card that is inserted into the computer.

If you are still unable to resolve the problem, contact your reseller, dealer or service provider.

Procedure

Remove the Memory Stick/Memory Stick PRO from the computer and then reinsert it in order to ensure it is firmly connected.

If the problem persists, then you should refer to the documentation supplied with your Memory Stick/Memory Stick PRO for further information.

Remove the Memory Stick/Memory Stick PRO

from the computer and check to ensure that it is not write protected.

Check to ensure the required file is actually on the Memory Stick/Memory Stick PRO that is inserted into the computer.

If you are still unable to resolve the problem, contact your reseller, dealer or service provider.

**L500/L505/L500D/L505D**

*Optional*

*Devices.*

*Optional*

*Devices.*

**9-11**

[Table of Contents](#)



[Previous Page](#)  
[Next Page](#)

1

...

142

143

144

145

Quick Links:

[Equipment Checklist](#)

[Features](#)

[Left Side](#)

## Chapters

[Table of Contents](#) 12

[Pointing Device](#) 186

Related Manuals for Toshiba PORTABLE PERSONAL COMPUTER L500

[Laptop Toshiba L500-ST2521 User Manual](#)

L500-st2521 user's guide (234 pages)

[Laptop Toshiba Satellite L505 Manual Del Usuario](#)

User guide 2 (231 pages)

[Laptop Toshiba Satellite L550 series User Manual](#)

(218 pages)

[Laptop Toshiba Satellite L500 User Manual](#)

(214 pages)

[Laptop Toshiba Satellite L505-GS5035 User Manual](#)

Portable personal computer (192 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite I500 series reference guide (56 pages)

[Laptop Toshiba Satellite L500D Maintenance Manual](#)

(246 pages)

[Laptop Toshiba Satellite L550-ST5707 Resource Manual](#)

Toshiba satellite I550-st5707: reference guide (60 pages)

[Laptop Toshiba Satellite L505D-S5986 Specifications](#)

Toshiba satellite I505d-s5986: specifications (4 pages)

[Laptop Toshiba Satellite L505D-S5994 Specifications](#)

Toshiba satellite I505d-s5994: specifications (4 pages)

[Laptop Toshiba Satellite A505-S5993 Specifications](#)

Toshiba satellite a505-s5993: specifications (4 pages)

[Laptop Toshiba PSLU0U-0MX035 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite L505-ES5015 Specifications](#)

Toshiba satellite I505-es5015: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5997 Specifications](#)

Toshiba satellite I505-s5997: specifications (4 pages)

[Laptop Toshiba L505-SP6015L Product Specification](#)

Toshiba laptop user manual (3 pages)

[Laptop Toshiba SATELLITE L505-S6951 User Manual](#)

Toshiba laptop user manual (3 pages)

## Related Content for Toshiba PORTABLE PERSONAL COMPUTER L500

[Satellite L630 Series Memory Cards:secure Digital \(Sd\), Secure Digital High Capacity \(Sdhc\), Secure Digital Extended Capacity \(Sdxc\), Memory Stick \(Ms\), Memory Stick Pro \(Ms Pro\) And Multimediacard \(Mmc\)](#)

[Toshiba Satellite L630 Series](#)

[Qosmio G30 Memory Stick/Memory Stick Pro](#)

[Toshiba Qosmio G30](#)

[Satellite P500 Sd/Sdhc/Mmc/Memory Stick / Memory Stick Pro/Xd Memory Cards](#)

[TOSHIBA Satellite P500](#)

[P300 Sd/Sdhc/Mmc/Memory Stick/Memory Stick Pro/Xd Memory Cards](#)

[Toshiba P300](#)

[Satellite A350 Series Memory Stick/Memory Stick Pro/Memory Stick](#)

[Pro Duo](#)

[Toshiba Satellite A350 Series](#)

[PORTÉGÉ M500 Memory Stick/Memory Stick Pro](#)

[Toshiba PORTÉGÉ M500](#)

[P500 Sd/Sdhc/Mmc/Memory Stick / Memory Stick Pro/Xd Memory Cards](#)

[TOSHIBA P500](#)

[Qosmio E10 Memory Stick/Memory Stick Pro](#)

[TOSHIBA Qosmio E10](#)

This manual is also suitable for:

[L505dL500dL505Satellite a505-s5993Satellite I505-es5015Satellite I505-s5997](#) ... [Show all](#)