

Usb Mouse - Toshiba PORTABLE PERSONAL COMPUTER L500 User Manual

Toshiba personal computer user manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



L500/L505/L500D/L505D

USB mouse

Problem

On-screen pointer
does not respond to
mouse operation

Double-clicking does
not work

The mouse pointer
moves too fast or too

slow

The mouse pointer moves erratically

9-14

Procedure

In this instance the system might be busy. Try moving the mouse again after waiting a short while. Check to make sure the touch pad isn't enabled.

Remove the mouse from the computer and then reconnect it to a free USB port it in order to ensure it is firmly attached.

In this instance, you should initially try changing the double-click speed setting within the Mouse Control utility.

1. To access this utility, click Start -> Control Panel -> Hardware and Sound -> Mouse icon.
2. Within the Mouse Properties window, click the Buttons tab.
3. Set the double-click speed as required and click OK.

In this instance, you should initially try changing the speed setting within the Mouse Control utility.

1. To access this utility, click Start -> Control Panel -> Hardware and Sound -> Mouse icon.
2. Within the Mouse Properties window, click the Pointer Options tab.
3. Set the pointer speed as required and click OK.

The elements of the mouse responsible for detecting movement might be dirty - please refer to the documentation supplied with the mouse for instructions on how to clean it.

If you are still unable to resolve the problem,

contact your reseller, dealer or service provider.

User's Manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

145

146

147

148

Quick Links:

[Equipment Checklist](#)

[Features](#)

[Left Side](#)

Chapters

[Table of Contents](#) 12

[Pointing Device](#) 186

Related Manuals for Toshiba PORTABLE PERSONAL COMPUTER L500

[Laptop Toshiba L500-ST2521 User Manual](#)

L500-st2521 user's guide (234 pages)

[Laptop Toshiba Satellite L505 Manual Del Usuario](#)

User guide 2 (231 pages)

[Laptop Toshiba Satellite L550 series User Manual](#)

(218 pages)

[Laptop Toshiba Satellite L500 User Manual](#)

(214 pages)

[Laptop Toshiba Satellite L505-GS5035 User Manual](#)

Portable personal computer (192 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite I500 series reference guide (56 pages)

[Laptop Toshiba Satellite L500D Maintenance Manual](#)

(246 pages)

[Laptop Toshiba Satellite L550-ST5707 Resource Manual](#)

Toshiba satellite I550-st5707: reference guide (60 pages)

[Laptop Toshiba Satellite L505D-S5986 Specifications](#)

Toshiba satellite I505d-s5986: specifications (4 pages)

[Laptop Toshiba Satellite L505D-S5994 Specifications](#)

Toshiba satellite I505d-s5994: specifications (4 pages)

[Laptop Toshiba Satellite A505-S5993 Specifications](#)

Toshiba satellite a505-s5993: specifications (4 pages)

[Laptop Toshiba PSLU0U-0MX035 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite L505-ES5015 Specifications](#)

Toshiba satellite I505-es5015: specifications (4 pages)

[Laptop Toshiba Satellite L505-S5997 Specifications](#)

Toshiba satellite I505-s5997: specifications (4 pages)

[Laptop Toshiba L505-SP6015L Product Specification](#)

Toshiba laptop user manual (3 pages)

[Laptop Toshiba SATELLITE L505-S6951 User Manual](#)

Toshiba laptop user manual (3 pages)

Related Content for Toshiba PORTABLE PERSONAL COMPUTER L500

[Satellite L500 Usb Mouse](#)

Toshiba Satellite L500

[Satellite Pro R50-B Series Usb Mouse](#)

Toshiba Satellite Pro R50-B Series

[SATELLITE CLICK 10 LX0W-C Usb Mouse](#)

Toshiba SATELLITE CLICK 10 LX0W-C

[Z30-B Usb Mouse](#)

Toshiba Z30-B

[C70-B Usb Mouse](#)

Toshiba C70-B

[R30-C Usb Mouse](#)

Toshiba R30-C

[C70-C Usb Mouse](#)

Toshiba C70-C
[L9W-B Usb Mouse](#)
Toshiba L9W-B

This manual is also suitable for:

[L505dL500dL505Satellite a505-s5993Satellite I505-es5015Satellite I505-s5997](#) ... [Show all](#)