



Toshiba SD-P1850SN Owner's Manual

Toshiba portable dvd player owner's manual sd-p1850sn

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72

--	--

•

•

Bookmarks

--

Quick Links

[1 Power Connection](#)


[2 Playing a Disc](#)

[3 Using the Battery Pack](#)

[4 Specifications](#)

[Download this manual](#)

See also: [Service Manual](#)

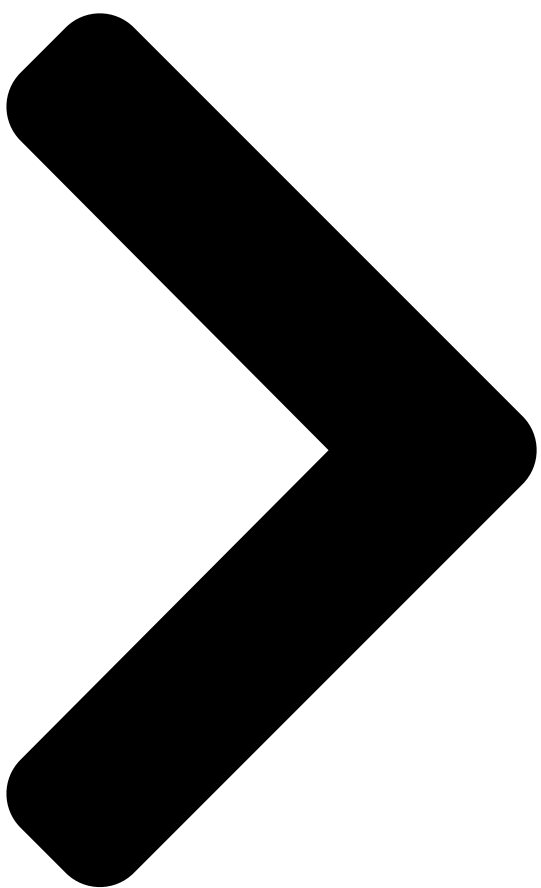

DIGITAL VIDEO

PORTABLE DVD PLAYER

TOSHIBA
SD-P1850SN

OWNER'S MANUAL

© 2006 TOSHIBA CORPORATION

N

PM0025696010

Introduction



Basic playback

Advanced

playback
Function setup

TOSHIBA

Connections

Others

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-P1850SN

[Portable DVD Player Toshiba SD-P1850SN Service Manual](#)

Toshiba portable dvd player service manual (27 pages)

[Portable DVD Player Toshiba SD-P1850 - Portable DVD Player Specifications](#)

Printable spec sheet (2 pages)

[Portable DVD Player Toshiba SD-P1800 Specification Sheet](#)

Toshiba portable dvd player specification sheet (2 pages)

[Portable DVD Player Toshiba SD-P1800 Service Manual](#)

(23 pages)

[Portable DVD Player Toshiba SD-P1880SE Owner's Manual](#)

Toshiba portable dvd player user manual (72 pages)

[Portable DVD Player Toshiba SD-P1750SN Owner's Manual](#)

Sd-p1750sn user's guide (84 pages)

[Portable DVD Player Toshiba SD-P1500 Owner's Manual](#)

Toshiba dvd player sd-p1500 owner's manual (68 pages)

[Portable DVD Player Toshiba SD-P1500 Service Manual](#)

(11 pages)

[Portable DVD Player Toshiba SD-P1600 Owner's Manual](#)

Toshiba dvd player sd-p1600 owner's manual (72 pages)

[Portable DVD Player Toshiba SD-P1400 Owner's Manual](#)

Toshiba dvd player sd-p1400 owner's manual (72 pages)

[Portable DVD Player Toshiba sd-p1400 Owner's Manual](#)

(69 pages)

[Portable DVD Player Toshiba SD-P1900 Owner's Manual](#)

Sd-p1900 user's guide (84 pages)

[Portable DVD Player Toshiba SD-P1700SN Owner's Manual](#)

Sd-p1700sn user's guide (72 pages)

[Portable DVD Player Toshiba SD-P1700SN Service Manual](#)

(25 pages)

[Portable DVD Player Toshiba SD-P1707SR Owner's Manual](#)

Toshiba portable dvd player user manual (76 pages)

[Portable DVD Player Toshiba SD-P1900SR Owner's Manual](#)

Toshiba portable dvd player owner's manual (76 pages)

Summary of Contents for Toshiba SD-P1850SN

[Page 1](#) DIGITAL VIDEO PORTABLE DVD PLAYER SD-P1850SN OWNER'S MANUAL © 2006
TOSHIBA CORPORATION PM0025696010 Introduction Basic playback Advanced playback
Function setup Connections Others...

[Page 2: Introduction](#)

Operation with non-compliant peripherals or peripherals not recommended by Toshiba is likely to result in interference to radio and TV reception. Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the

user's authority to operate the equipment.

Page 3 In the spaces provided below, record the Model and Serial No. located on the bottom of your DVD player. Model No. Serial No. Retain this information for future reference. Location of the required label...

Page 4: Important Safety Instructions

Introduction IMPORTANT SAFETY INSTRUCTIONS CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE. This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard.

Page 5 Take the battery pack to an authorized Toshiba service provider. f) Keep the battery pack away from heat or fire. g) Never dispose of used battery packs with other ordinary solid wastes, since they contain toxic substances.

Page 6 Introduction IMPORTANT SAFETY INSTRUCTIONS e) If you do not use the remote control for a long period of time, remove the battery to avoid possible damage from battery corrosion. 30. After unpacking coin-shaped batteries, store them in poly bags, etc. separately one by one when unused.

Page 7: Precautions

Precautions Notes on handling Do not shock the LCD monitor. It may cause unit damage and malfunction. Do not use the player in a place subject to vibration. Neglecting this may cause malfunction of the player or damage to the disc. Do not leave the player in a vehicle.

Page 8: Notes And Information

Introduction Notes and Information Structure of disc contents Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. VIDEO CDs/audio CDs are divided into tracks. DVD video disc Title 1 Chapter 1 Chapter 2 Chapter 1 VIDEO CD/Audio CD Track 1 Track 2...

Page 9: Notes On Region Numbers

- Depending on the data recording method or the disc status, playback on this player may not be possible, even if the disc is labeled as above. Toshiba cannot assure that all discs bearing the DVD or CD logos will operate as expected.

Page 10 Saving data • It is recommended that you back up your memory card data. Toshiba is not liable for any damage caused by the use of any memory card with this DVD player. Toshiba will not compensate for any lost data or recording(s) caused by the use of such cards.

Page 11: Table Of Contents

Table of Contents Introduction SAFETY PRECAUTIONS ... 2 IMPORTANT SAFETY INSTRUCTIONS ... 4 Precautions ... 7 Notes and Information ... 8 Notes on region numbers ... 9 Identification of Controls ... 12 Main unit ... 12 Side view ... 13 Front view ...

Page 12: Identification Of Controls

Introduction Identification of Controls See the page in for details. Main unit Press the open switch and lift the LCD monitor up. Disc cover Remote sensor POWER/CHG (Power/Charge) indicator 18 60 Open switch MODE button TOP MENU button Direction buttons PLAY button SKIP buttons Disc cover OPEN button...

Page 13: Side View

Side view Power switch Volume control AV IN jack DC IN 12V jack AV OUT jack Headphone jack 1 54 55 Headphone jack 2 BITSTREAM/PCM jack 58 59 Front view Memory card slot...

Page 14: Remote Control

Introduction Identification of Controls (continued) The instructions in this manual describe the functions of the remote control. See the page in Remote control MENU button (see below) MODE button DISPLAY button TOP MENU button 24 28 SUBTITLE button AUDIO button PAUSE/STEP

button STOP button REV button...

[Page 15: Loading The Remote Control Battery](#)

Loading the remote control battery Gently insert a fingernail in groove 1 and pull out the holder in direction 2 . Backside Take care not to break your fingernail. Place a coin-shaped battery (CR2025) with the side up on the holder. Keep the holder horizontal so that the battery does not fall through.

[Page 16: Power Connection](#)

Introduction Power Connection Connect the supplied AC adapter to power the player. For mobile use, the battery pack (supplied) is also available. When using the battery pack, follow the instructions on page CAUTION • Do not connect the power plug to a power outlet other than that indicated on the label, as this can result in a risk of fire or electric shock.

[Page 17: Basic Playback](#)

About this manual Aside from the section “Playing a Disc”, explanations of operations only include illustrations of the corresponding buttons on the remote control. The buttons sharing the same name on the main unit can also be used in an identical manner. Basic playback Begin your operation.

[Page 18: Playing A Disc](#)

Basic playback Playing a Disc This section shows you the basics on how to play a disc. indicates a reference page of this manual. See the page in for details. DVD-V Basic playback Preparations

- Connect the AC adapter or the battery pack player.

[Page 19: Start Playback](#)

This type of damage is not covered by your Toshiba Warranty. To avoid this, be sure to press the STOP button once the movie is completed. NOTICE Never operate the player in a moving vehicle.

[Page 20](#) Basic playback Playing a Disc (continued) Basic playback (continued) To change an on-screen language 1 Press SETUP during stop. The following on-screen display appears. 2 Press to select “ (LANGUAGE MENU)”, then press ENTER. 3 Press to select “OSD Menu”, then press ENTER.

[Page 21](#) About the screen saver If 20 minutes elapse while the power is on and there is no disc in the player or while the disc is stopped, the screen saver is automatically displayed (when “Screen Saver” is set to “On”).

[Page 22: Variable Speed Playback](#)

Basic playback Variable Speed Playback You can play discs at various speeds, and resume playback from the location where you stopped playback. DVD-V Playing in fast reverse or fast forward directions Press REV or FWD on the remote control during playback. REV: Fast reverse playback FWD: Fast forward playback Each time you press the REV or FWD...

[Page 23: Playing In Slow-Motion](#)

DVD-V Playing in slow-motion Press SLOW while pressing SHIFT during playback. Each time you press the SLOW button, the slow-motion speed changes. If you press the SLOW during playback, you can view the picture in reverse slow-motion. (Only when using a DVD video disc.) Each time you press the SLOW button, the slow-motion speed...

[Page 24: Locating A Specific Title, Chapter, Or Track](#)

Basic playback Locating a Specific Title, Chapter, or Track Normally, DVD video discs are divided into titles, and the titles are sub-divided into chapters. Contents of VIDEO CDs and audio CDs are divided into tracks. You can quickly locate any specific title, chapter, or track. DVD video disc Title 1 Chapter 1...

[Page 25: Directly Accessing A Specific Location](#)

Directly Accessing a Specific Location You can access a specific location by entering its corresponding time (hours, minutes, seconds). DVD-V Entering the time counter of the desired

location Press T several times. The display changes each time this button is pressed.

[Page 26: Playing Mp3/Wma Audio Or Divx](#)

There are many different types of recordable disc formats (including CD-R containing MP3/WMA or DivX in this area is still maturing, Toshiba cannot guarantee that all genre of recordable discs will produce optimal playback quality. The technical criteria set out in this owner's manual are meant as a guide only.

[Page 27: Viewing Jpeg Files](#)

Viewing JPEG Files You can play JPEG files that have been recorded on a CD-R or memory card on this player. Viewing JPEG Files Preparation Prepare a compatible disc or memory card that contains JPEG files you want to view Insert a CD or memory card that contains JPEG files into the player.

[Page 28](#) Basic playback Viewing JPEG Files (continued) Viewing JPEG Files (continued) To rotate a picture Press during playback. : Rotate counterclockwise (by 90°). : Rotate clockwise (by 90°). To zoom in a picture Press ZOOM during playback. You will enter the zoom mode. If you press in the zoom in mode, the zoom point will be shifted.

[Page 29](#) • Be sure to stop playing the disc before changing the mode. JPEG files compatibility Discs and pixels whose compatibility with this unit has been confirmed by TOSHIBA are as follows. Kodak Picture CD JPEG disc compatibility with this unit is limited as follows: •...

[Page 31: Advanced Playback](#)

Advanced playback Customizing the performance of your player. Repeat Play Playing in a Favorite Order Playing in Random Order Zooming a Picture Selecting the Sound Enhancement (E.A.M.) Selecting a Camera Angle Selecting Subtitles Selecting a Language On-screen Display Mode Adjusting the Picture...

[Page 32: Repeat Play](#)

Advanced playback Repeat Play You can play a specific title, chapter, track, or segment repeatedly. (Title repeat, chapter/track repeat, A-B repeat) DVD-V Repeating a title, chapter, or track Press REPEAT. Each time you press the REPEAT button, the repeat mode changes as follows.

[Page 33: Playing In A Favorite Order](#)

Playing in a Favorite Order You can combine your favorite titles, chapters, or tracks and play them in the order you determine. You can program up to 12 selections into the memory. (Memory playback) DVD-V Setting titles, chapters, or tracks in a favorite order Press MEMORY.

[Page 34: Playing In Random Order](#)

Advanced playback Playing in Random Order You can play chapters or tracks in random order. (Random playback) DVD-V Playing chapters or tracks in random order Press RANDOM. Each time you press the RANDOM button, the random mode changes as follows. Shuffle Off Shuffle Off Resumes normal...

[Page 35: Zooming A Picture](#)

Zooming a Picture You can magnify areas within a picture. DVD-V Zooming a picture During normal, slow, still, fast reverse or fast forward playback, press ZOOM. The player enters the zoom playback mode, and the zoom icon appears. e.g. The picture is enlarged to twice the size.

[Page 36: Selecting The Sound Enhancement \(E.a.m.*\)](#)

Advanced playback Selecting the Sound Enhancement (E.A.M.*) You can easily select a preferred audio enhancement. *E.A.M.: Enhanced Audio Mode DVD-V Selecting the sound enhancement Press E.A.M. The sound enhancement menu appears. 3D Off Select the sound enhancement by pressing E.A.M. If you press E.A.M.

[Page 37: Selecting A Camera Angle](#)

Selecting a Camera Angle If a scene was recorded with multiple angles, you can easily change the camera angle of the scene you are viewing. DVD-V Changing the camera angle Press ANGLE while playing a scene recorded with multiple angles. While playing a scene recorded with

multiple angles, the angle icon (appears on the screen.

[Page 38: Selecting Subtitles](#)

Advanced playback Selecting Subtitles You can display subtitles on the screen and select a subtitle language from those included on the DVD video disc. Good evening! Bonsoir! ¡Buenas tardes! DVD-V Selecting a subtitle language Press SUBTITLE during playback. The current subtitle setting is displayed.

[Page 39: Selecting A Language](#)

Selecting a Language You can select a preferred language and sound recording system from those included on the disc. Good morning! Bonjour! DVD-V Selecting a playback audio setting Press AUDIO during playback. The current audio setting is displayed. e.g. D 2 ch ENG Press AUDIO while the audio setting is displayed on the screen.

[Page 40](#) Advanced playback Selecting a Language (continued) DVD-V Selecting a playback audio setting (continued) Output sound conversion table (sampling frequency/quantization bit) Sound recording system Discs Dolby Digital 48 kHz Linear 96 kHz video discs MPEG1, MPEG2 VIDEO CDs MPEG1 Linear PCM 44.1 kHz AUDIO CDs *PCM: down sampling PCM •...

[Page 41: On-Screen Display Mode](#)

On-screen Display Mode You can confirm the disc usage status and player operation information on the screen. DVD-V On-Screen Display Press DISPLAY while pressing SHIFT during playback. The following display appears. e.g. Title 1/3 Chapter4/13 Audio Subtitle Bitrate 6.912Mbps The screen displayed varies depending on the disc.

[Page 42](#) Advanced playback On-screen Display Mode (continued) DVD-V On-Screen Display (continued) When playing a VIDEO CD or audio CD Elapsed time of the current track Current track number e.g. 00:00:00 00:00:00 Track 1/11 Note This may not be displayed for some discs. Remained time of the current track...

[Page 43: Adjusting The Picture](#)

Adjusting the Picture You can easily select a preferred picture. DVD-V Adjusting the picture Press PICTURE. Alternatively press PICTURE on the main unit. (This function can only be set when you view pictures on the LCD of the player.) The picture setting display appears. Each time you press the button, the setup items changes as follows.

[Page 45: Function Setup](#)

Function setup You can change the default settings to customize performance to your preference. Customizing the Function Settings...

[Page 46: Customizing The Function Settings](#)

Function setup Customizing the Function Settings You can change the default settings to customize performance to your preference. DVD-V Setting procedure Press SETUP during stop. The following on-screen display appears. e.g. Press to select the setting you want to change, then press ENTER. (See the next page.) e.g.

[Page 47](#) Setting Setting TV MENU TV Shape LANGUAGE OSD Menu MENU Subtitle Audio DVD Menu DivX AUDIO MENU EQ Mode E.A.M. D.R.C. Digital Out OPERATION Parental MENU-1 Screen Saver Default OPERATION DivX registration MENU-2 Details Details To select a picture size according to the aspect DVD-V ratio of your TV.

[Page 48: Setting Details](#)

Function setup Customizing the Function Settings (continued) Setting details TV Shape 16:9 Widescreen TV Shape DVD-V 4:3 Normal: Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Either or both sides of the picture are cut off. 4:3 Letterbox: Select when a standard 4:3 TV is connected.

[Page 49](#) DivX DVD-V WesternEurope: To display subtitles in west European language. CentralEuropea: To display subtitles in Central European language. SlavonicCyrillic: To display subtitles in Slavonic Cyrillic language. Notes • Some DVD video discs may be set to display subtitles in a different language than you selected. A prior subtitle language may be

programmed on the disc.

[Page 50](#) Function setup Customizing the Function Settings (continued) Setting details Digital Out DVD-V Select the output sound format corresponding to your system connection. For details of sound recording systems, see Bitstream: Select when connected to an amplifier equipped with a Dolby Digital, DTS, MPEG1 or MPEG2 decoder.

[Page 51](#) To change your 5-digit security code 1) After selecting password, press the 9 button five times. The 5-digit security code is cleared. 2) Press the number buttons to create a new 5-digit security code. For details of PBC, see On : To use the menu when playing a PBC-featured VIDEO CD.

[Page 53: Connections](#)

Connections You can connect the player to a TV or audio system. Also, you can connect a battery pack to power the player. Connecting to a TV or audio system Connecting to Headphones Viewing Pictures From Connected Video Equipment Connecting to Audio Equipment Using the Battery Pack Using the automobile/vehicle adapter or power port...

[Page 54: Connecting To A Tv Or Audio System](#)

Connections Connecting to a TV or audio system Connect the player to your TV or audio system. For details of output sound, see Connecting to a TV • Make the following setting. On-screen display Select: "Analog 2ch" "Digital Out" Notes •...

[Page 55: Connecting To An Audio System](#)

Connecting to an audio system To AV OUT Audio/video cable (supplied) Notes • Refer to the owner's manual of the connected equipment as well. • When you connect the player to other equipment, be sure to turn off the power and unplug all of the equipment from the wall outlet before making any connections.

[Page 56: Connecting To Headphones](#)

Connections Connecting to Headphones You can listen to movies and music privately by connecting headphones. Headphones (not supplied) (headphone) jack Viewing Pictures From Connected Video Equipment You can use the LCD of this player to monitor pictures of video equipment connected via the AV IN jack. To select the external AV input mode, press the MODE button.

[Page 57: Connecting To Audio Equipment](#)

Connecting to Audio Equipment You can enjoy high quality dynamic sounds by connecting the player to audio equipment. • For connection to your TV, see "Connecting to a TV" • For details of output sound, see • This section uses the following reference marks. : Front speaker : Rear speaker : Sub woofer...

[Page 58: Connecting To An Amplifier Equipped With A Dolby Digital Decoder](#)

Connections Connecting to Audio Equipment (continued) Connecting to an amplifier equipped with a Dolby Digital decoder Dolby Digital Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home. You can enjoy motion picture and live concert DVD video discs with this dynamic realistic sound by connecting the player to a 6 channel amplifier equipped with a Dolby Digital decoder or Dolby Digital processor.

[Page 59: Connecting To An Amplifier Equipped With An Mpeg2 Audio Decoder](#)

Connecting to an amplifier equipped with an MPEG2 audio decoder MPEG2 sound You can enjoy motion picture and live concert DVD video discs with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor. Amplifier equipped with an MPEG2 audio decoder To digital audio input...

[Page 60: Using The Battery Pack](#)

Connections Using the Battery Pack WARNING • Do not use a battery pack other than one specified as it can result in a fire or damage to the unit. • Do not heat, open, or short-circuit the

battery pack. Do not throw the battery pack into a fire. Doing so may cause an explosion or a fire.

[Page 61](#) Detaching the battery pack 1 Turn the player off. 2 Disconnect the AC adapter and the power cord from the player. 3 Turn the player upside down. 4 Slide the battery pack's lock switch in the direction of the arrow , then slide the battery pack in the direction of the arrow 5 Attach the connector cover on the bottom of the...

[Page 62: Using The Automobile/Vehicle Adapter Or Power Port](#)

Connections Using the automobile/vehicle adapter or power port For use of the DVD player in a car, this adapter can power the DVD player from the cigarette lighter socket. **WARNING • NEVER** operate the DVD player or view a DVD Video while operating an automobile or other vehicle. Note: doing so is illegal in many jurisdictions.

[Page 63](#) Instructions for Use 1 Turn off the DVD player. 2 Insert the pin plug of the adapter into the DC IN 12V jack of the DVD player. The LED illuminates when powered. 3 Insert the plug of the adapter into the cigarette lighter socket or power port fully.

[Page 65: Others](#)

Others Before Calling Service Personnel Specifications Limited United States Warranty Digital Audio Video ("DAV") Product - Depot Repair Warranty...

[Page 66: Before Calling Service Personnel](#)

Others Before Calling Service Personnel Check the following guide for the possible cause of a problem before contacting service. Symptoms and correction Symptom Cause No power. • The AC adapter or power plug is disconnected. • The battery pack has been removed. •...

[Page 67](#) • The player's remote sensor is exposed to a strong light source such as direct sunlight or other illumination. For details on how to resolve a problem, refer to the Web site <http://www.tacp.toshiba.com>. If you are still unable to resolve the problem, call 1-800-631-3811. Correction •...

[Page 68: Specifications](#)

Others Specifications Player / Connectors / Liquid crystal display / Supplied accessories Player Power supply Mass External dimensions Signal system Laser Frequency range Operating conditions Connectors AV output (AV OUT) AV input (AV IN) Audio output (BITSTREAM/PCM) Headphone terminal Liquid crystal display Panel size Projection system Driving system...

[Page 69: Limited United States Warranty Digital Audio Video \("Dav"\) Product - Depot Repair Warranty](#)

Limited United States Warranty Digital Audio Video ("DAV") Product - Depot Repair Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DAV PRODUCT AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 70](#) Product to the Depot Warranty Repair Center specified by the TACP Consumer Solutions Center. For additional information, visit TACP's website: www.tacp.toshiba.com. ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THE LIMITED WARRANTIES SET FORTH ABOVE.

[Page 71](#) Toshiba of Canada Limited 191 McNabb Street Markham, Ontario L3R 8H2 - IMPORTANT - GARANTIE CANADIENNE GARANTIE NORMALE TYPE D'APPAREIL...

[Page 72](#) Printed in China...

This manual is also suitable for:

Sd-p1850Sd-1850