

TOSHIBA

Toshiba 1000 Series Installation Instructions

Toshiba power supply user manual

1
2
3
4

--

•

Bookmarks

--

Quick Links

[Download this manual](#) See also: [User Manual](#)



FOR AUTHORIZED SERVICE PERSONAL ONLY

TOSHIBA/HOUSTON INVERTER PLANT

DESIGN DATA

SUBJECT:

1000 Series UPS Options - Frequency Conversion

Cautions:

Any maintenance, additions, and/or changes that are to be done to this UPS should be

performed by a certified Toshiba trained repair technician authorized to service

Toshiba's 1000 Series UPS.

The followings are a list of minimum safety requirements that should be adhered to, and is not to be interpreted to be the only safety requirements to follow. Please follow

all Local, State, and Federal Safety Requirements.

- 1) Verify that the UPS is off and that the power cord or main power is disconnected from the power source. (Observe Lock-out/Tag-out procedures if applicable)
 - 2) Remove watches, rings, and/or other metal objects.
 - 3) Use insulated tools to prevent inadvertent shorts.
 - 4) Wear safety glasses, rubber gloves and boots.
 - 5) Do not lay tools or metal parts on top of the batteries.
 - 6) All connections must be made in accordance with National and Local Electric Codes.
- In no event will Toshiba Corporation be responsible or liable for either indirect or consequential damage or injury that may result from the modification of this unit.

Installation Instructions:

RELATED DATA FILE NO.

NO.

REVISION

D-UM0029 Page 1 of 4

Models: 1000 Series UPS

CAUTIONS

INSTALLATION INSTRUCTIONS

COPY

TO:

TO:

TO:

TO:

DATE

BY

TO:

&

DRAWN BY:

H. Huynh

CHECKED BY:

MTA

APPROVED BY:

DATE:

10/2005

10/2005

DATE:

ManualsLib.com

[Next Page](#)

1
2
3
4

Related Manuals for Toshiba 1000 Series

[Laptop Toshiba 1000-S157 User Manual](#)

1000-s157 user's guide (246 pages)

[Controller Toshiba V Series User Manual](#)

Integrated controller, loop controller (158 pages)

[Laptop TOSHIBA Satellite 1000 Series User Manual](#)

Toshiba satellite portable personal computer (126 pages)

[Laptop Toshiba Satellite 1000 User Manual](#)

Toshiba satellite 1000 notebook (126 pages)

[UPS Toshiba 1000 SERIES User Manual](#)

(64 pages)

[UPS Toshiba 1000 Series User Manual](#)

Reliability in motion single phase 1000/1200 va (60 pages)

[UPS Toshiba RELIABILITY IN MOTION 1000 Series User Manual](#)

Single phase 1000 va to 3000 va uos (54 pages)

[UPS Toshiba UT1A1A010C6 User Manual](#)

User guide (51 pages)

[UPS Toshiba 1000 SEREIS Brochure & Specs](#)

1000 series (2 pages)

[UPS Toshiba 1000 Series Specification](#)

Ups rack-mount 2u rail kit (2 pages)

[UPS Toshiba 1500 Series Operation Manual](#)

(32 pages)

[UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

[UPS Toshiba 1500 Series Operation Manual](#)

Single phase - .6/.8/1.0/1.2 kva; single phase - .6/.8/1.0 kva plus (32 pages)

[UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

[UPS Toshiba 1600XPi Series Installation And Operation Manual](#)

8-22kva battery cabinet (23 pages)

[UPS Toshiba 1400SE Series Operation Manual](#)

Single phase - .6/.8/1.0/1.2/1.5/2.0/2.4 kva, single phase - .6/.8/1.0/1.5 kva plus (41 pages)

Summary of Contents for Toshiba 1000 Series

[Page 1](#) 6) All connections must be made in accordance with National and Local Electric Codes. In no event will Toshiba Corporation be responsible or liable for either indirect or consequential damage or injury that may result from the modification of this unit.

[Page 2](#) TOSHIBA/HOUSTON INVERTER PLANT DESIGN DATA SUBJECT: 1000 Series UPS Options - Frequency Conversion Install "FlashH08" Flash Program There are two types of installation files for the Flash program. The one that is appropriate for you can be determined by first checking the "CPU Version" that is displayed on the LCD display in the front panel.

[Page 3](#) TOSHIBA/HOUSTON INVERTER PLANT DESIGN DATA SUBJECT: 1000 Series UPS Options - Frequency Conversion If you installed the B mask type, it should be labeled "B Mask Flash" in the title like the one shown below. 5. Click Load in the Menu bar to load the file (*.mot) that you want to reflash to the CPU.

[Page 4](#) FOR AUTHORIZED SERVICE PERSONAL ONLY TOSHIBA/HOUSTON INVERTER PLANT DESIGN DATA SUBJECT: 1000 Series UPS Options - Frequency Conversion Setup: 1. Make sure the UPS is off and the AC Line is on. The LCD screen should appear blank. 2. Press and hold the function button for 1 second and release the button to enter the front panel settings.