

TOSHIBA

Toshiba SD-V594SC Owner's Manual

Dvd video player & video cassette recorder

1

2

3

4

5

6

7

8

Table Of Contents

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76



•

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Connecting to a Tv](#)

[2 Duplicating a Video Tape](#)

[3 Troubleshooting](#)

[Download this manual](#)

See also: [Service Manual](#)



DVD VIDEO PLAYER & VIDEO CASSETTE RECORDER



SD-V594SC

TOSHIBA

OWNER'S MANUAL

©2006 Toshiba Corporation

This device does not tape-record copy protected DVD Video Discs.

2140301A-En_cov

1

Other functions
Basic playback
Function setup



Introduction

Connections

Basic setup

(VCR)

Playback

(VCR)

Recording

(VCR)

(VCR)

(DVD)

Advanced

playback

(DVD)

(DVD)

Others



TOSHIBA



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba SD-V594SC

[DVD VCR Combo Toshiba SD-V594SC Service Manual](#)

Dvd video player & video cassette recorder (134 pages)

[DVD Recorder Toshiba SD-V594SC Owners Manual](#)

(76 pages)

[DVD VCR Combo Toshiba SD-V594 Specifications](#)

Toshiba dvd/vcr combination product brochure (2 pages)

[DVD VCR Combo Toshiba SD-V593 Specification Sheet](#)

Toshiba dvd/vcr combination specification sheet (2 pages)

[DVD VCR Combo Toshiba SD-V593SU Owner's Manual](#)

Dvd video player & video cassette recorder (72 pages)

[DVD VCR Combo Toshiba SD-V592SU Owner's Manual](#)

Dvd video player & video cassette recorder (49 pages)

[DVD VCR Combo Toshiba SD-V592SU Owner's Manual](#)

Dvd video player & video cassette recorder (55 pages)

[DVD VCR Combo Toshiba SD-V592 Specifications](#)

Toshiba dvd/vcr combo product brochure (2 pages)

[DVD VCR Combo TOSHIBA SD-V55HTSU Owner's Manual](#)

Home theater system (50 pages)

[DVD VCR Combo Toshiba SD-V296 - DVD/VCR Owner's Manual](#)

Dvd video player / video cassette recorder (18 pages)

[DVD VCR Combo Toshiba SD-V395 Owner's Manual](#)

Dvd video player & video cassette recorder (19 pages)

[DVD VCR Combo Toshiba SD-V392SU Owner's Manual](#)

Dvd video player & video cassette recorder (80 pages)

[DVD VCR Combo Toshiba SD-V290-S-TU Owner's Manual](#)

Dvd video player & video cassette recorder (46 pages)

[DVD VCR Combo Toshiba SD-V393SU Owner's Manual](#)

Dvd video player & video cassette recorder (68 pages)

[DVD VCR Combo Toshiba SD-V295KU Owner's Manual](#)

Dvd video player & video cassette recorder (60 pages)

[DVD VCR Combo Toshiba SD-V394SC Owner's Manual](#)

Dvd video player & video cassette recorder (68 pages)

Summary of Contents for Toshiba SD-V594SC

[Page 1](#) DVD VIDEO PLAYER & VIDEO CASSETTE RECORDER SD-V594SC OWNER'S MANUAL
©2006 Toshiba Corporation This device does not tape-record copy protected DVD Video Discs.
2140301A-En_cov Introduction Connections Basic setup (VCR) Playback (VCR) Recording (VCR)
Other functions (VCR) Basic playback (DVD) Advanced...

[Page 2: Introduction](#)

Introduction SAFETY PRECAUTIONS CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-
SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, do not expose this appliance to rain or

moisture.

[Page 3: Important Safeguards](#)

IMPORTANT SAFEGUARDS 1. READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated. 2. RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference. 3. HEED WARNINGS All warnings on the unit and in the operating instructions should be adhered to. 4.

[Page 4](#) Introduction IMPORTANT SAFEGUARDS 13. LIGHTNING To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

[Page 5: Power Source](#)

IMPORTANT SAFEGUARDS 19. REPLACEMENT PARTS When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. 20.

[Page 6: Precautions](#)

Introduction Precautions Notes on handling When shipping the DVD/VCR, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packed at the factory. Do not use volatile liquids, such as insect spray, near the DVD/VCR.

[Page 7: Playable Discs](#)

Because of problems and errors that can occur during the creation of DVD and CD Software and/or the manufacture of DVD and CD discs, Toshiba cannot assure that the DVD player will successfully play every disc bearing DVD and CD logos. If you happen to...

[Page 8](#) Introduction Notes and Informations (Continued) Notes on region numbers The region number of this DVD/VCR is 1. If region numbers, which stand for their playable area, are printed on your DVD video disc and you do not find , disc playback will not be allowed by the player.

[Page 9: Table Of Contents](#)

Contents Introduction SAFETY PRECAUTIONS ... 2 IMPORTANT SAFEGUARDS ... 3 Power source ... 5 Precautions ... 6 Notes and Informations ... 7 Contents..9 Identification of controls ... 10 Multi brand remote control ... 14 Connections Antenna connections ... 16 Cable TV connections ...

[Page 10: Identification Of Controls](#)

Introduction Identification of controls See the page in for details. Front panel REC button ON/STANDBY button Cassette loading slot EJECT button CHANNEL buttons AUDIO (L/R)/VIDEO IN "# (LINE IN 2) jacks Rear panel DVD COAXIAL DIGITAL AUDIO OUT jack DVD S-VIDEO OUT jack HDMI OUT jack AC power cord DVD COMPONENT...

[Page 11: Display Window](#)

Display window Play indicator VCR indicator (VCR) Recording indicator (VCR) Track indicator (CD) Tape loaded indicator (VCR) Timer Recording indicator (VCR) VCR operation status Press CALL to display VCR operation status on the screen. To cancel the display, press CALL again. While watching TV DAY OF THE WEEK CLOCK...

[Page 12: Remote Control](#)

Introduction Identification of controls (Continued) The instructions in this manual describe the functions on the remote control. See the page in Remote control DVD/VCR button 13 * TV button 14 CALL button * DISPLAY button * CH button ZERO RETURN button JUMP button CM SKIP button ZOOM button...

[Page 13: Inserting Batteries](#)

Inserting batteries Open the battery compartment cover in the direction of the arrow. Caution: Never throw batteries into a fire. Notes: • Be sure to use AAA size batteries. • Dispose of batteries in a designated disposal area. • Batteries should always be disposed of with the

environment in mind. Always dispose of batteries in accordance with applicable laws and regulations.

[Page 14: Multi Brand Remote Control](#)

This remote control can be compatible with various brands of TV/ ® Cable box/DSS satellite receiver by setting their control codes. The TOSHIBA code has initially been set to control TOSHIBA TVs. Setting TV control codes Press TV to set the remote control operating your TV.

[Page 15: Table Of Cable Box Brand Codes](#)

- If you replace the remote control's batteries, set the brand code again. 2I40301A-En_p14-17 ® satellite Table of Cable box brand codes Brand name of Brand Code your cable box Toshiba satellite receiver. Anvision 13, 20, 21, 22, 23, 24, 25, 26, 58, 62, 84 Archer 29, 42, 44,...

[Page 16: Connections](#)

Connections Antenna connections If you are using an antenna system, follow these instructions. If you are a Cable TV subscriber, skip ahead to page for the proper connections. Antenna to DVD/VCR connection The DVD/VCR must be connected "between" the antenna and the TV. First, disconnect the antenna from the TV and connect it to the DVD/VCR.

[Page 17](#) DVD/VCR to TV connection After you have connected the antenna to the DVD/VCR, you must connect the DVD/VCR to the TV. Below are 3 common methods of connecting your DVD/VCR to a TV. Find the type of TV you are using and follow the connection diagram.

[Page 18: Cable Tv Connections](#)

Connections Cable TV connections Many cable companies offer services permitting reception of extra channels including pay or subscription channels. This DVD/VCR has an extended tuning range and can be tuned to most cable channels without using a cable company supplied converter box, except for those premium channels which are intentionally scrambled. If you subscribe to a premium channel which is scrambled, you must have a descrambler box for proper reception.

[Page 19](#) IMPORTANT: Make sure the TV/CABLE menu option is set to the "CABLE" mode. This DVD/VCR cannot receive scrambled programs since it does not contain a descrambler. In order to receive scrambled programs, your existing descrambler must be used. Descrambler boxes are available from cable companies. Consult your local cable company for more information concerning connection to their descrambler equipment.

[Page 20: Connecting To A Tv](#)

Connections Connecting to a TV Connect the DVD/VCR to your TV. Note: This method transports VHS and DVD-video signals. For enhanced DVD-video performance, we recommend you to connect the S-video or ColorStream Basic connection Signal flow To wall outlet • Make sure following setting. Select: On-screen display "Digital Out"...

[Page 21](#) S-video output An S-Video connection is superior to Video (Yellow) output. Use this method for DVD playback when the connected television has S- Video input, and does not have component video inputs. Component video outputs PROGRESSIVE outputs Some TVs or monitors are equipped with component video inputs that are capable of reproducing a progressively scanned video signal.

[Page 22](#) Connections Connecting to a TV (Continued) About HDMI HDMI (High Definition Multimedia Interface) supports both video and audio on a single digital connection for use with DVD players, DTV, set-top boxes, and other AV devices. HDMI was developed to provide the technologies of High Bandwidth Digital Content Protection (HDCP) as well as Digital Visual Interface (DVI) in one specification.

[Page 23](#) The content of the output for each output jack are as shown in the following table and differ depending on User settings/operation. USER setting/operation HDMI Mode Output Output VCR/DVD Setting Interlace Progressive 480p 720p Interlace 1080i 480p 720p Progressive 1080i Interlace Progressive 480p...

[Page 24: Connecting To An Audio Equipment](#)

Connections Connecting to an audio equipment You can enjoy high quality dynamic sounds of

DVD video discs or audio CDs by connecting the DVD/VCR to optional audio equipment. For connection to your TV, see "Connecting to a TV" Connecting to an amplifier equipped with a Dolby Digital Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home.

[Page 25](#) Warning When playing DTS-encoded discs (DVD video discs and audio CDs), excessive noise may be output from the analog stereo jacks. To avoid possible damage to the audio system, you should take proper precautions when the ANALOG AUDIO OUT (L/ R) jacks of the DVD/VCR are connected to an amplification system.

[Page 26: Connecting To A Usb Mass Storage](#)

Connections Connecting to a USB Mass Storage This unit can be used to read JPEG, WMA, MP3 and DivX accepts USB Mass Storage Class. For devices that are compatible with the unit's USB port, please refer to page Connecting to a USB Mass Storage Signal flow USB Mass Storage Notes:...

[Page 27: Basic Setup \(Vcr\)](#)

Basic setup (VCR) Setting the video channel When a TV is connected with the 75 ohm coaxial cable only. To view playback of a recorded tape or DVD disc, or to watch a program selected by the VCR's channel selector, the TV must be set to channel 3 or 4 (video channel).

[Page 28: Setting The Language](#)

Basic setup (VCR) Setting the language You can choose from three different languages (English, French and Spanish) for the on-screen display. Setting the language Preparation: • Turn ON the TV and select to the corresponding video input. • Press DVD/VCR to operate the DVD/VCR. • ...

[Page 29: Clock Setting](#)

Clock setting The AUTO CLOCK function will automatically set the built-in clock (Month, Day, Year and Time) when the DVD/VCR is connected to an Antenna or Cable system and it is turned off. The DVD/VCR searches for a station in your area containing the necessary AUTO CLOCK setting signals.

[Page 30](#) Basic setup (VCR) Clock setting (Continued) To set STANDARD TIME In the rare event that you live within broadcast range of two stations in two different time zones, the DVD/VCR may recognize the wrong station for the AUTO CLOCK setting. To correct the situation: Press VCR MENU.

[Page 31](#) If the AUTO CLOCK process did not set the date and time correctly, you must set them manually for timer recording and DAYLIGHT SAVING TIME. Manual clock setting EXAMPLE: Setting the clock to "8:30 AM" October, 28 (SAT), 2006. Press VCR MENU. Press SET + or -...

[Page 32: Tuner Setting](#)

Basic setup (VCR) Tuner setting This DVD/VCR is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the DVD/VCR's memory. In addition to normal VHF and UHF channels, this DVD/VCR can receive up to 113 Cable TV channels.

[Page 33](#) To ADD/DELETE channels Repeat the step 1 on page . Then press SET + or - to select the "ADD/DELETE" and press ENTER. To Add or Delete channels 1) Press Direct channel selection buttons (0-9) or SET +/- to select a channel number you want to add or delete.

[Page 34: Playback \(Vcr\)](#)

Playback (VCR) Loading and unloading a cassette tape Use only video cassette tapes marked Loading Push the center of the tape until it is automatically inserted. Automatic power ON When you insert a cassette tape, the DVD/VCR power will turn ON automatically. Automatic playback When loading a cassette tape without an erase prevention tab, playback will start automatically.

[Page 35: Cassette Tape Playback](#)

Cassette tape playback To play a prerecorded tape. Playback Preparation: • Turn ON the TV and select the corresponding video input. • Press DVD/VCR to operate the DVD/VCR. • Press DVD/VCR SELECT to select the VCR mode. (The VCR indicator will light). Load a prerecorded

tape (When loading a cassette tape without the erase prevention tab, playback will start automatically).

[Page 36: Special Playback](#)

Playback (VCR) Special playback Picture search Reverse picture search function Press REV once or twice during playback. Forward picture search function Press FWD once or twice during playback. To return to playback, press PLAY. SPEED SEARCH TIMES PICTURE SEARCH SPEED TAPE SPEED PRESS ONCE SP (Standard Play)

[Page 37: Convenience Function](#)

Convenience function Repeat playback The entire video tape will play until its end. The tape will automatically rewind to the beginning and the playback will be repeated. Press VCR MENU. Press SET + or - to select "AUTO REPEAT". TIMER REC SET AUTO REPEAT CH SETUP SYSTEM SETUP...

[Page 38](#) Playback (VCR) Convenience function (Continued) Clock/counter display Press CLOCK/COUNTER. The clock and tape counter alternate with each other in the display window. COUNTER CLOCK Press DVD/VCR SELECT. The DVD mode and the VCR mode alternate with each other in the display. DVD mode VCR mode Notes:...

[Page 39: Recording \(Vcr\) Recording A Tv Program](#)

Recording (VCR) Recording a TV program Recording and viewing the same TV program. Recording a TV program Preparation: • Turn ON the TV and select to the corresponding video input. • Press DVD/VCR to operate the DVD/VCR. • Press DVD/VCR SELECT to select the VCR mode. (The VCR indicator will light.) Load a cassette tape with the erase prevention tab intact.

[Page 40: To Stop Recording](#)

Recording (VCR) Recording a TV program (Continued) To stop recording Press STOP to stop recording. " " will appear on screen for about 4 seconds. To stop recording temporarily Press PAUSE/STILL to avoid recording unwanted material. Press again to continue the recording. "...

[Page 41: One-Touch Timer Recording \(Otr\)](#)

One-touch Timer Recording (OTR) The One-touch Timer Recording feature provides a simple and convenient way to make a timed recording. One-touch Timer Recording (OTR) Preparation: • Turn ON the TV and select to the corresponding video input. • Press DVD/VCR to operate the DVD/VCR. • ...

[Page 42: Timer Recording](#)

Recording (VCR) Timer recording Timer recording can be programmed on-screen with the remote control. The built-in timer allows automatic unattended recording of up to 8 programs within 1 month. Timer recording Preparation: • Press DVD/VCR to operate the DVD/VCR. • Press DVD/VCR SELECT to select the VCR mode. • ...

[Page 43](#) Setting procedure To set daily/weekly timer Weekly (e.g. WKL-TU: each Tuesday) or daily (e.g. MO- SA: Monday to Saturday) Timer recording Follow the procedure of timer recording on page step 3, press SET + or - repeatedly until the desired setting appears.

[Page 44: Other Functions \(Vcr\)](#)

Other functions (VCR) Other functions (VCR) Stereo recording and playback/ Second Audio Program (SAP) Stereo recording and playback The VHS Hi-Fi audio system permits high fidelity recording of MTS STEREO TV broadcasts. When a MTS STEREO broadcast is received, "STEREO" will appear on the screen for about 4 seconds and the program can be viewed or recorded in stereo.

[Page 45: Duplicating A Video Tape](#)

Duplicating a video tape If you connect the DVD/VCR to another VCR or Camcorder, you can duplicate a previously recorded tape. Make all connections before turning on the power. Duplicating a video tape Preparation: • Turn ON the TV and select the corresponding video input.

[Page 46: Recording A Dvd/Cd Disc](#)

Other functions (VCR) Recording a DVD/CD disc You can record disc material in DVD, Video CD, Audio CD, etc. onto a Video tape with this DVD/VCR. Duplicating a DVD or CD disc Preparation: • Turn ON the TV and select the corresponding video input.

[Page 47: Basic Playback \(Dvd\)](#)

Basic playback (DVD) Basic playback (DVD) Playing a disc This section shows you the basics on how to play a disc. CAUTION Keep your fingers well clear of the disc tray as it is closing. Neglecting to do so may cause serious personal injury.

[Page 48](#) Basic playback (DVD) POWER STOP PLAY PAUSE/STILL DVD/VCR SELECT OPEN/CLOSE Basic playback To pause playback (still mode) Press PAUSE/STILL during playback. To resume normal playback, press PLAY. • The sound is muted during still mode. To stop playback Press STOP. To remove the disc Press OPEN/CLOSE.

[Page 49](#) Playing a disc (Continued) You can play discs at various speeds. Playing in fast reverse or fast forward directions Press REV or FWD during playback. REV: Fast reverse playback FWD: Fast forward playback Each time you press REV or FWD, the playback speed changes.

[Page 50: Advanced Playback \(Dvd\)](#)

Advanced playback (DVD) Advanced playback (DVD) Zooming/Locating desired scene Zooming This unit will allow you to zoom in on the frame image. You can then make selections by switching the position of the frame. Press ZOOM during playback. The center part of the image will be zoomed in.

[Page 51: Marking Desired Scenes](#)

Marking desired scenes The unit stores the points that you want to watch again up to 3 points. You can resume playback from each scene. Marking the scenes Press MARKER during playback. Marker1 Marker2 Marker3 Select the blank Marker using C or D. Then press ENTER at the desired scene.

[Page 52: Repeat Playback](#)

Advanced playback (DVD) Repeat playback/A-B Repeat playback Repeat playback Press PLAYMODE during playback or stop mode. [DVD] Press ENTER to select "Chapter" or "Title". Repeat The unit automatically starts repeat playback after finishing the current title or chapter. [Video CD] Press D D D D to select "Repeat".

[Page 53: Program Playback](#)

Program playback/Random playback You can arrange the playback order of tracks or files on the disc. And the unit can also select tracks or files at random and playback them. These feature works for Video CD. For Audio CD and MP3/WMA CD, please see "Random playback (CD/USB)"...

[Page 54: Changing Angles](#)

Advanced playback (DVD) Changing angles/Title selection/DVD menu Changing angles When playing back a disc recorded with multi-angle facility, you can change the angle that you are viewing the scene from. Press ANGLE during playback. The current angle will appear. Title selection Two or more titles are recorded on some discs.

[Page 55: Changing Soundtrack Language](#)

Changing soundtrack language/ Setting surround sound Changing soundtrack language You can select the language when you play a multilingual disc. Press AUDIO during playback. The current soundtrack language will appear. 1/2 Eng Dolby Digital Press AUDIO repeatedly until the desired language is selected.

[Page 56: Subtitles](#)

Advanced playback (DVD) Subtitles/To turn off the PBC Subtitles When playing back a disc recorded with subtitles, you can select the subtitle language or turn the subtitle off. Press SUBTITLE repeatedly during playback until your desired language appears. To turn off the

subtitle, press SUBTITLE until "Off"...

[Page 57: Mp3/Wma/Jpeg/Divx And Audio Cd Operation](#)

The technical criteria set forth in this owner's manual are meant only as a guide. Use of CD-RW for MP3 files is not recommended. You must obtain any required permission from copyright owners to download or use copyrighted content. Toshiba cannot and does not grant such permission. © MP3/WMA/JPEG/DivX Limitations on MP3/WMA/JPEG/DivX •...

[Page 58](#) Advanced playback (DVD) MP3/WMA/JPEG/DivX CD operation (Continued) Loading media [MP3/WMA/JPEG/DivX ® CD, Audio CD] Place a MP3/WMA/JPEG/DivX CD onto the disc tray, then press OPEN/CLOSE. [USB Mass Storage] Connect USB Mass Storage to the USB port on the front of the unit (see page Press DVD/USB to display the media selection window.

[Page 59](#) JPEG playback In the file browser, press C/D to select the desired JPEG file. To display a thumbnail list, press DVD MENU. Press B/A or C/D to select the desired file. (To return to a file browser, press TOP MENU.) /Picture-01.JPG Picture-01 Picture-02...

[Page 60](#) Advanced playback (DVD) MP3/WMA/JPEG/DivX CD operation (Continued) © DivX playback Press C/D to select desired DivX /Movie-01.DIVX When PLAY has been pressed after displaying the file browser, playback begins automatically starting from the first file. In this case, if the first file is a JPEG file, the first JPEG file is played back.

[Page 61](#) Repeat playback (CD/USB) In the file browser, press B/A or C/D to select "Repeat" during stop mode. Folder-1 Folder-2 MP3-1 MP3-2 MP3-3 Press ENTER to select "Track" or "All". Folder-1 Folder-2 MP3-1 MP3-2 MP3 3 Press PLAY. The unit automatically starts repeat playback after finishing the current track.

[Page 62](#) Advanced playback (DVD) MP3/WMA/JPEG/DivX CD operation (Continued) Program playback (CD/USB) In the file browser, press B/A or C/D to select "Edit Mode", then press ENTER. Folder-1 Folder-2 MP3-1 MP3-2 MP3 3 When "Edit Mode" is black color, you can mark the files which you want to add into Program list.

[Page 63: Function Setup \(Dvd\)](#)

Function setup (DVD) Customizing the function settings You can change the default settings to customize performance to your preference. Setting procedure Press SETUP during stop mode. The following on-screen display appears. Parental Menu E.B.L. TV Screen Subtitle QSound Display Audio Output Picture Mode JPEG Interval...

[Page 64](#) Function setup (DVD) Customizing the function settings (Continued) Setting details Option Section Menu Subtitle Audio E.B.L. TV Screen Display Picture Mode JPEG Interval Screen Saver QSound Digital Out Parental Password HD Jpeg Output DivX(R) VOD 2140301A-En_p60-69 Details To select the language of "Menu", "Subtitle" and "Audio"...

[Page 65](#) Parental Menu E.B.L. QSound Subtitle TV Screen Output Display Audio Picture Mode JPEG Interval Screen Saver Menu, Subtitle, Audio You can select the language of "Menu", "Subtitle" and "Audio" if more than one languages are recorded onto the disc. English, Francais, Espanol: The selected language will be heard or seen.

[Page 66](#) Function setup (DVD) Customizing the function settings (Continued) Setting details Display On screen display can be switched on or off when you press the buttons. Off: On screen displays do not appear when you press any buttons. On: On screen displays appear when you press the buttons (factory setting).

[Page 67](#) Parental E.B.L. Menu Subtitle TV Screen QSound Set Password Digital out Display Audio Output Picture Mode DivX(R) VOD JPEG Interval Screen Saver DRC (Dynamic Range Control) enables you to control the dynamic range so as to achieve a suitable sound for your equipment.

[Page 68](#) Function setup (DVD) Customizing the function settings (Continued) Setting details Menu Parental E.B.L. Subtitle QSound TV Screen Password HD Jpeg Display Audio Picture Mode Output JPEG Interval DivX(R) VOD Screen Saver Parental control setting Some discs are specified not suitable for children. Such discs can be limited not to play back with the unit.

[Page 69](#) Output You can select the video output signal of the DVD video player to the TV from "Interlace" or "Progressive". Interlace: Select when connecting to a composite TV or a TV equipped with component video inputs but progressive scan is not compatible. Progressive: Select when connecting to a TV equipped with component video inputs and progressive...

[Page 70: Temporary Disabling Of Rating Level By Dvd Disc](#)

Function setup (DVD) Function setup (DVD) Temporary disabling of rating level by DVD disc Depending on the DVD disc, the disc may try to temporarily cancel the rating level that you have set. It is up to you to decide whether to cancel the rating level or not. Temporary disabling of rating level by DVD disc Load a DVD disc and press PLAY or OPEN/ "%...

[Page 71: Others](#)

Others Language code list Enter the appropriate code number for the initial settings "Menu", "Subtitle" and/or "Audio" Language Name Code Language Name Code Abkhazian 1112 Fiji Afar 1111 Finnish Afrikaans 1116 French Albanian 2927 Frisian Amharic 1123 Galician Arabic 1128 Georgian Armenian 1835...

[Page 72: Troubleshooting](#)

Others Troubleshooting Before calling a service technician, please check the following table for a possible cause of the symptoms and some solutions. Symptoms DVD/VCR DVD/VCR does not operate. No picture. No sound. The remote control does not function. No Cable TV reception. TV recording does not work.

[Page 73: Specifications](#)

Specifications General Power supply Power consumption Weight Dimensions Tuner Antenna input/output RF channel output Color system Video head Audio track Hi-Fi frequency response Hi-Fi dynamic range FWD/REV time at 25°C (77°F) Applicable disc Frequency range S/N ratio Harmonic distortion Wow and flutter Operating conditions Input/Output DVD/VCR...

[Page 74: Canadian Warranty Information](#)

Toshiba of Canada Limited 191 McNabb Street Markham, Ontario L3R 8H2 2I40301A-En_p70-BACK - IMPORTANT - GARANTIE CANADIENNE GARANTIE NORMALE TYPE D'APPAREIL...

[Page 75](#) Memo 2I40301A-En_p70-BACK 21/3/06, 9:46 AM...

[Page 76](#) ColorStream and ColorStream Pro are registered trademarks of Toshiba America Consumer Products, L.L.C. Printed in Thailand J2I40301A SH 06/03 2I40301A-En_p70-BACK 21/3/06, 9:46 AM...

This manual is also suitable for:

Sd-v594