



# Speakerphone - Toshiba DK User Manual

Includes lcd, add-on module, and direct station selection console

 


1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163



•

[Table of Contents](#)



•

## Bookmarks







**To call a saved telephone number**



➤ **To call a saved telephone number**

Access a [DN] or CO line, then press

automatically dials the saved [number].

➤ Access a [DN] or CO line, then press **Save Last Number**

automatically dials the “saved” number.

## **Speakerphone**

All digital telephone users can answer internal calls handsfree (on-hook), but only users with a speakerphone can make and receive calls without lifting the handset.

Any

All digital telephone users can answer internal calls handsfree

digital telephone model with an "S" in the model name is equipped with a speakerphone.



**To change from speakerphone to handset**



- Access a [DN] or CO line, then press **Save Last Number**. Lift the handset. automatically dials the "saved" number.



**To change from handset to speakerphone**

1. While on a call, press

and hold

2. Return the handset

on-hook.

3. Release

All digital telephone users can answer internal calls handsfree. Users with a speakerphone can make and receive calls without a digital telephone model with an "S" in the model name is equipped with a speakerphone.

# Speakerphone



➤ **To change from speakerphone to handset**

**To make a call (on-hook dialing)**

1. With the handset on-

hook, access a CO

line or press a [DN].

- Lift the handset.

➤ **To change from handset to speakerphone**

2. Dial a telephone number.

- 1. While on a call, press and hold **Spkr.**

**Strata DK Digital Telephone 10/01**

- 2. Return the handset on-hook.

You hear dial tone and the Line or [DN] LED flashes green (in-use).

- 3. Release **Spkr.**

You hear ringback tone (or busy tone, if busy).

➤ **To make a call (on-hook dialing)**

**Features**

*Speakerphone*

. The system

- 1. With the handset on-hook, access a CO line or press a [DN].

You hear dial tone and the Line green (in-use).

[Previous Page](#)  
[Next Page](#)

1  
...  
78  
79  
80  
**81**  
82  
83  
84  
85

## Related Manuals for Toshiba DK

[Telephone Toshiba STRATA DK14 Installation And Maintenance Manual](#)

(724 pages)

[Telephone Toshiba strata DK8 Installation Instructions Manual](#)

(584 pages)

[Telephone Toshiba Strata DK40 Installation & Maintenance Manual](#)

(360 pages)

[Telephone System Toshiba Strata DK 16 Installation And Maintenance Manual](#)

Toshiba digital key telephone systems installation and maintenance manual (321 pages)

[Telephone System Toshiba Strata DK Admin User Manual](#)

Digital business telephone systems release 4 (178 pages)

[IP Phone Toshiba Strata DK 2000-series User Manual](#)

Toshiba digital telephone user guide (164 pages)

[IP Phone Toshiba CT User Manual](#)

Includes lcd, add-on module, and direct station selection console (136 pages)

[Handsets Toshiba Strata AirLink Integrated Wireless Handset User Manual](#)

Toshiba integrated wireless handset user guide (131 pages)

[Telephone Toshiba DKT3010-SD - Digital Phone User Manual](#)

Strata ctx digital business telephone systems dkt/ipt telephone (114 pages)

[Telephone Toshiba DKT3000 Series User Manual](#)

Strata ctx digital business telephone systems (106 pages)

[IP Phone Toshiba Strata DK280 User Manual](#)

(79 pages)

[Telephone System Toshiba Strata DK14 Installation And Maintenance Manual](#)

Digital business telephone solutions (46 pages)

[IP Phone Toshiba Strata DK280 User Manual](#)

Toshiba digital key telephone systems user guide (43 pages)

[IP Phone Toshiba STRATA DK280 User Manual](#)

(43 pages)

[Telephone System Toshiba Strata DK424 Competitive Notes](#)

Digital business telephone system (8 pages)

[Software Toshiba Strata DK424 Quick Reference Manual](#)

For strata dk424 digital business telephone systems (8 pages)

## Related Content for Toshiba DK

[IP EDGE Speakerphone/Microphone Sensitivity Adjustment](#)



Toshiba IP EDGE  
[DKT3210-SD - Digital Phone - Charcoal Switching Between Handset  
And Speakerphone](#)

Toshiba DKT3210-SD - Digital Phone - Charcoal  
[Strata DK 2000-series Speakerphone](#)

Toshiba Strata DK 2000-series  
[Strata CT DKT2510-FS Speakerphone](#)

Toshiba Strata CT DKT2510-FS  
[DKT3000/2000 Switching Between Handset And Speakerphone](#)

Toshiba DKT3000/2000  
[CT Speakerphone](#)

Toshiba CT  
[Strata CIX IP5000-UG-VB Speakerphone/Microphone Sensitivity  
Adjustment](#)

Toshiba Strata CIX IP5000-UG-VB  
[STRATA CTX DKT3000 Switching Between Handset And Speakerphone](#)

Toshiba STRATA CTX DKT3000

This manual is also suitable for:

[Strata dk](#)[Strata dkt2010-s](#)[Strata dkt2020-sd](#)[Strata dkt2020-fdsp](#)[Strata dkt2001](#)[Strata dkt2010-sd](#) ... [Show all](#)