

Making A Call; Hot Dialing; Spkr Button; Handset - Toshiba DKT User Manual

Strata ctx dkt/ipt telephone

1

2

3

4

Table Of Contents

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116



-

[Table of Contents](#)

•

Bookmarks



Making a Call

There are three ways to originate a call from your digital telephone:

Making a Call Hot Dialing

There are three ways to originate a call from your digital telephone:

1. To make a call using Hot Dialing, dial the number.

When you start to dial, the extension button, Spkr and Mic LEDs light. Digits

display as they are dialed. Call progress tones (Ringback Tone, Busy Tone, etc.)

play through the speaker.

1. To make a call using Hot Dialing, dial the number.

2. When connected, you can continue speakerphone operation or lift the handset.

and

When you start to dial, the extension button, Spkr and Mic
display as they are dialed. Call progress tones (Ringback T

continue the conversation.

Spkr Button

1. To make a call, press

Making a Call

A line may be automatically selected or you can manually choose a line. Your extension or There are three ways to originate a call from your digital telep plays through the speaker. The Spkr and Mic LEDs light.

2. Dial the number

Hot Dialing

Digits display as they are dialed. Call progress tones (Ringback Tone, Busy Tone, etc.) play through the speaker.

1. To make a call using Hot Dialing, dial the number.

3. When connected you can continue to use the speakerphone or lift the handset; and display as they are dialed. Call progress tones (Ringback T continue the conversation through the speaker.

Handset

2. When connected, you can continue speakerphone operation continue the conversation.

1. To make a call, lift the handset, then dial the number.

Spkr Button

A line may be automatically selected or you can manually choose a line. Dial tone plays through the handset. The Spkr and Mic LEDs do not light.

1. To make a call, press Spkr

Digits display as they are dialed. Call progress tones (Ringback Tone, Busy Tone, etc.) are heard through the handset. A line may be automatically selected or you can manually

2. When connected, you can continue to use the speakerphone or lift the handset; and extension or line button lights (depending on system prog speakerphone by plays through the speaker. The Spkr and Mic LEDs light. holding down 2. Dial the number.

Strata CTX DKT/IPT Telephone

Digits display as they are dialed. Call progress tones (Ring etc.) play through the speaker.

button lights (depending on system programming). Dial tone and replacing the handset. 3. When connected, you can continue to use the speakerphon continue the conversation.

10/03

The Basics

Handset

9 1. To make a call, lift the handset, then dial the number

[Previous Page](#)
[Next Page](#)

1
...
20
21
22
23
24
25
26
27

Quick Links:

[User Guide](#)

[Message Waiting](#)

[Volume Control](#)

Related Manuals for Toshiba DKT

[Telephone Toshiba Strata CTX28 Programming Manual](#)

(592 pages)

[Telephone Toshiba CTX100-S Programming Manual](#)

Strata ctx digital business telephone systems (580 pages)

[Telephone Toshiba STRATA CIX User Manual](#)

lpt/dkt telephone (179 pages)

[Telephone Toshiba CIX User Manual](#)

Strata cix and ctx ipt/dkt telephone (141 pages)

[Telephone System TOSHIBA STRATA CTX User Manual](#)

Dkt/ipt telephone with digital business telephone systems (139 pages)

[IP Phone Toshiba 2000 series User Manual](#)

2000-series digital telephones for strata dk systems (134 pages)

[Telephone Toshiba DKT3010-SD - Digital Phone User Manual](#)

Strata ctx digital business telephone systems dkt/ipt telephone (114 pages)

[Telephone Toshiba DKT3000 Series User Manual](#)

Strata ctx digital business telephone systems (106 pages)

[IP Phone Toshiba DKT3000/2000 User Manual](#)

Dkt3000/2000-series digital business telephone systems (104 pages)

[Telephone System Toshiba Strata CTX100 General Description Manual](#)

Digital business telephone system (100 pages)

[Telephone Toshiba DKT3001/2001 User Manual](#)

Strata ctx digital single line telephone (67 pages)

[IP Phone Toshiba DKT2001 Technical Bulletin](#)

Digital single line telephone i&m and programming updates (6 pages)

[Telephone Toshiba CTX100 Quick Reference Manual](#)

(4 pages)

[Voicemail Toshiba CTX100 Quick Reference](#)

(3 pages)

[Telephone Toshiba CTX100 User Manual](#)

Toshiba telephone user manual (3 pages)

[Toshiba 3000 Series, 2000 Series - DKT / IPT Business Telephone Quick Reference Guide with Button Codes](#)

(article)

Related Content for Toshiba DKT

[DP5022F-SD Making A Call](#)

Toshiba DP5022F-SD

[3000 series Making A Call](#)

Toshiba 3000 series

[DKT3000 Series Making A Call](#)

Toshiba DKT3000 Series

[DP5000-Series Making A Call](#)

Toshiba DP5000-Series

[IP4100 Series Making A Call From A Speed Dial Number](#)

Toshiba IP4100 Series

[IP5000 Series Making A Call](#)

Toshiba IP5000 Series

[Strata CIX IP5000-Series Making A Call](#)

Toshiba Strata CIX IP5000-Series

[Strata CIX DP-5000 series Making A Call](#)

Toshiba Strata CIX DP-5000 series

This manual is also suitable for:

[IptStrata](#) [dkt3020-sStrata](#) [dkt3020-sdStrata](#) [dkt3010-sStrata](#) [ipt1020-sdStrata](#) [dkt3010-sd](#) ... [Show all](#)