



# System Features; Direct Inward System Access (Disa) Security Code - Toshiba Strata DP5000-UG-VC User Manual

Toshiba telephone user guide



1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

15

 
16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142



•

[Table of Contents](#)



•

## Bookmarks





# System Features

The following are system features that require Administrator setup using the DP5000-

## System Features

series telephone. For eManager programming refer to the *Strata CIX Programming Manual, Volume 1*.

### Direct Inward System Access (DISA) Security Code

The Direct Inward System Access feature is used when calling into your system from the outside. This feature is available on certain CO lines and from the built-in Auto

The Direct Inward System Access feature is used when calling

Attendant. Assignments are made by the system programmer. CO lines can be DISA

lines in the Day, Day 2, or Night mode, or any combination of these modes.

If a caller enters the system via a DISA line or built-in Auto Attendant, the caller can

# System Features

then access another line to place an outgoing call through the system, in which case

the outgoing line call is charged as a call made from the CIX system. To prevent unauthorized outgoing calls through the system using the DISA feature, enter a

DISA

security code as shown in the following steps.

## Direct Inward System Access (DISA) Sec

CAUTION!

The Direct Inward System Access feature is used when calling the outside. This feature is available on certain CO lines and for lines in the Day, Day 2, or Night mode, or any combination of

1. Press DN + DISA Security Access Code (see note). A confirmation tone is heard.

2. Dial the existing DISA security code (1-15 digits).

3. Press #, confirmation tone is heard and display

4. Enter the new DISA security code as shown in the following steps.

shows Data Programmed.

5. Lift handset off-hook and on-hook to end session.

**CAUTION! Whenever the built-in Auto Attendant is installed, the DISA security code should be used (and changed periodically) to prevent unauthorized access of outgoing CO lines via the Auto Attendant DISA access feature.**

DISA access feature.

10/10

### ➤ To change the DISA security code

1. Press DN + DISA Security Access Code (see note). A confirmation tone is heard and display

2. Dial the existing DISA security code (1-15 digits).

3. Press #, confirmation tone is heard.

4. Enter the new DISA security code + #, confirmation tone is

99

[Previous Page](#)  
[Next Page](#)

1

...

114

115

116

117

Quick Links:

[Dp5000-Series Telephone Overview](#)

## Related Manuals for Toshiba Strata DP5000-UG-VC

[Telephone System Toshiba Strata CIX40 General Description Manual](#)

(206 pages)

[Telephone Toshiba CTX IPT/DKT User Manual](#)

Strata cix and ctx ipt/dkt telephone (171 pages)

[Telephone Toshiba STRATA CIX DKT User Manual](#)

Strata cix and ctx ipt/dkt telephone (151 pages)

[Telephone Toshiba DP5000-Series User Manual](#)



Strata cix telephone (142 pages)

[Telephone Toshiba Strata CIX DP-5000 series User Manual](#)

(138 pages)

[Computer Hardware Toshiba Strata CIX40 User Manual](#)

Voice processing system (96 pages)

[Server Toshiba Strata CIX40 R5.2 Software - R1 ~ R3 Hardware Installation And Maintenance Manual](#)

R5.2 software - r1 ~ r3 hardware (82 pages)

[Telephone Toshiba STRATA DP5000 Quick Reference Manual](#)

Business telephones (13 pages)

[Voicemail Toshiba CIX40 User Manual](#)

Phone & voicemail (13 pages)

[IP Phone Toshiba iES16 Brochure](#)

Ip communication solutions (12 pages)

[Telephone Toshiba DP 5000 Series Quick Reference Manual](#)

(10 pages)

[Telephone Toshiba DP5000 Series Quick Reference Manual](#)

Featurephone (9 pages)

[Telephone Toshiba DP5000 Series Quick Reference Manual](#)

(7 pages)

[IP Phone Toshiba DP5000 Series Brochure](#)

Toshiba telephone user manual (4 pages)

[Voicemail Toshiba CIX40 Quick Start Manual](#)

Toshiba answering machine user manual (2 pages)

[IP Phone Toshiba Strata CIX100 Specifications](#)

Toshiba ip business telephone specifications (2 pages)

## Related Content for Toshiba Strata DP5000-UG-VC

[Strata CIX Turnkey System](#)

Toshiba Strata CIX

[CTX100-S System Timer](#)

Toshiba CTX100-S

[STRATA DK14 Features Capacities](#)

Toshiba STRATA DK14

[STRATA CTX100 System Capacities](#)

Toshiba STRATA CTX100

[Strata DK14 How To Program A Strata Dk System](#)

Toshiba Strata DK14

[Strata DK24 System Description](#)

Toshiba Strata DK24

[Strata DK 2000 Series Chapter 2 - Features](#)

Toshiba Strata DK 2000 Series

[Strata DK Centrex Features](#)

toshiba Strata DK

This manual is also suitable for:

[Strata dp5000 series](#)[Strata cix1200](#)[Strata cix670](#)[Strata cix200](#)[Strata cix100](#)[Strata cix100-s](#) ... [Show all](#)