

TOSHIBA

Toshiba 14DLV75 Owner's Manual

14-inch diagonal lcd tv/dvd combination

1
2
3
4
5
6
7
8
Table Of Contents
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

Quick Links

[1 Antenna Connections](#)

[2 Power Source](#)

[3 Specifications](#)

[Download this manual](#)



DIGITAL VIDEO

14-inch Diagonal LCD TV/DVD

*
—
—



COMBINATION

TOSHIBA 14DLV75



©2005 Toshiba Corporation

Before operating the unit, please read this manual thoroughly.

*Screen size is approximate.

J5N00621A [E] (Cover)

1

Advanced playback

14/01/2005, 7:42 PM

Introduction

Connections

Basic setup

TV operation

Basic playback

Function setup

Others



TOSHIBA



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 14DLV75

[TV DVD Combo Toshiba 14DLV75 Service Manual](#)

14-inch lcd tv/dvd combination (116 pages)

[TV DVD Combo Toshiba 14DVL75 Owner's Manual](#)

14-inch diagonal lcd tv/dvd combination (54 pages)

[TV DVD Combo Toshiba 19LV610U Owner's Manual](#)

19/22/26-inch class lcd tv/dvd combination (76 pages)

[TV DVD Combo Toshiba 19LV611U Owner's Manual](#)

19/22/26-inch class lcd tv/dvd combination (88 pages)

[TV DVD Combo Toshiba 17HLV85 Owner's Manual](#)

Lcd tv/dvd (66 pages)

[TV DVD Combo Toshiba 15LV505 Service Manual](#)

15-inch diagonal lcd tv/dvd combination (100 pages)

[TV DVD Combo Toshiba 15LV505 Owner's Manual](#)

15-inch diagonal lcd tv/dvd combination (68 pages)

[TV DVD Combo Toshiba 15LV505 Owner's Manual](#)

15-inch diagonal lcd tv/dvd combination (72 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch diagonal lcd tv/dvd combination (81 pages)

[TV DVD Combo Toshiba 19HLV87 Owner's Manual](#)

19-inch diagonal lcd tv/dvd combination (85 pages)

[TV DVD Combo Toshiba 19LV610U-T Owner's Manual](#)

19-, 22-, 26-inch class lcd tv/dvd combination (80 pages)

[TV DVD Combo Toshiba 19DV713B Owner's Manual](#)

Lcd tv/dvd combination (89 pages)

[TV DVD Combo Toshiba 19DV733G Owner's Manual](#)

Lcd tv/dvd combination (92 pages)

[TV DVD Combo Toshiba 15DLV77C Service Manual](#)

15-inch diagonal lcd tv/dvd combination (103 pages)

[TV DVD Combo toshiba 19DV550P Service Manual](#)

19-inch diagonal lcd tv/dvd combination (76 pages)

[TV DVD Combo Toshiba 15SLDT3R Service Manual](#)

15-in, 19-in, 22-in, 26-in class lcd tv/dvd combination (87 pages)

Summary of Contents for Toshiba 14DLV75

[Page 1](#) DIGITAL VIDEO 14-inch Diagonal LCD TV/DVD COMBINATION 14DLV75 OWNER'S MANUAL ©2005 Toshiba Corporation Before operating the unit, please read this manual thoroughly. *Screen size is approximate. J5N00621A [E] (Cover) Introduction Connections Basic setup TV operation Basic playback Advanced playback Function setup...

[Page 2: Introduction](#)

Introduction IMPORTANT SAFEGUARDS CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR

MOISTURE.

[Page 3](#) **IMPORTANT SAFEGUARDS** 1. READ INSTRUCTIONS All the safety and operating instructions should be read before the unit is operated. 2. RETAIN INSTRUCTIONS The safety and operating instructions should be retained for future reference. 3. HEED WARNINGS All warnings on the unit and in the operating instructions should be adhered to. 4.

[Page 4](#) Introduction **IMPORTANT SAFEGUARDS** 13. LIGHTNING To protect your unit from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the unit due to lightning and power line surges.

[Page 5](#) 19. REPLACEMENT PARTS When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards. 20.

[Page 6: Precautions](#)

Introduction Precautions Notes on handling I Do not shock the LCD panel. It may cause unit damage and malfunction. I When shipping the unit, the original shipping carton and packing materials come in handy. For maximum protection, repack the unit as it was originally packed at the factory.

[Page 7: Notes On Discs](#)

Notes on discs On handling discs Do not touch the playback side of the disc. For example, handle the disc so that it is shown in figure below. Do not attach paper or tape to discs. DO NOT On cleaning discs Fingerprints and dust on the disc cause picture and sound deterioration.

[Page 8: Playable Discs](#)

Because of problems and errors that can occur during the creation of DVD software and/or the manufacture of DVD discs, Toshiba cannot guarantee that the DVD player contained in the unit will play every feature of every DVD bearing the DVD logo. As one of the creators of DVD...

[Page 9: Table Of Contents](#)

Contents Introduction **IMPORTANT SAFEGUARDS** ... 2 Precautions ... 6 Notes on discs ... 7 Contents ... 9 Identification of controls ... 10 Connections Antenna connections ... 14 Cable TV connections ... 15 Connecting to optional equipment ... 16 Power source ... 20 Basic setup Setting the language ...

[Page 10: Identification Of Controls](#)

Introduction Identification of controls See the page in for details. POWER button VOLUME (CHANNEL (4/3) buttons Front Remote sensor J5N00621A [E] (P08-13) EJECT () button) buttons SKIP () buttons STOP () button PLAY () button POWER indicator 14/01/2005, 7:43 PM...

[Page 11](#) Side Left Side PHONES jack VIDEO IN/AUDIO IN (L/R) (LINE 2 IN) jacks Rear COAXIAL DIGITAL AUDIO OUT jack J5N00621A [E] (P08-13) Adjusting the angle of the base Approx. 15 Right Side Disc slot COMPONENT VIDEO IN Antenna jack (Y, P DC input jack S-VIDEO (LINE 1 IN) jack VIDEO IN/AUDIO IN (L/R) (LINE 1 IN) jacks...

[Page 12: Remote Control](#)

Introduction Identification of controls (continued) Remote control The instructions in this manual describe the function on the remote control. See the page in EJECT button TV/DVD button Direct channel selection buttons (0-9) Numbered buttons (0-9) RECALL button JUMP button INPUT SELECT button PLAY MODE button GAME button TOP MENU button...

[Page 13: Inserting Batteries](#)

Inserting batteries Open the battery compartment cover in the direction of the arrow. Operation

- Aim the remote control at the remote sensor and press control buttons to operate.
- Operate the remote control within 30° angle on either side of the remote sensor, up to a distance of approx. 5 meters.

[Page 14: Connections](#)

Connections Antenna connections If you are using an indoor or outdoor antenna, follow the instructions below that correspond to your antenna system. If you are using a cable TV service (CABLE), see page 15 for Cable TV connections. Combination VHF/UHF antenna (Single 75 ohm cable or 300 ohm twin-lead wire) Antenna jack 75 ohm coaxial cable...

[Page 15: Cable Tv Connections](#)

Cable TV connections This TV/DVD has an extended tuning range and can tune most cable channels without using a Cable TV converter box. Some cable companies offer "premium pay channels" in which the signal is scrambled. Descrambling these signals for normal viewing requires the use of a descrambler device which is generally provided by the cable company.

[Page 16: Connecting To Optional Equipment](#)

Connections Connecting to optional equipment You can enjoy VCR, camcorder or TV game with connection to external input. Using the audio/video inputs Press INPUT SELECT repeatedly to select the desired mode. "LINE1", "LINE2", "GAME", "COMPONENT" or TV channel will display on the screen for 4 seconds. TV Channel LINE 1 (Rear lower left)

Page 17 Note: When the S-VIDEO cable and the standard video cable are connected at the same time, the S-video cable takes precedence. Connecting an optional equipment with ColorStream Your TV/DVD is capable of using ColorStream video compatible DVD player, such as a Toshiba DVD player with ColorStream quality and performance. Ex. DVD player with Component video...

Page 18 **Connections** Connecting to optional equipment (continued) You can enjoy high quality dynamic sounds by connecting the TV/DVD to optional audio equipment. Connecting to an amplifier equipped with a Dolby Digital decoder Dolby Digital Dolby Digital is the surround sound technology used in theaters showing the latest movies, and is now available to reproduce this realistic effect in the home.

Page 19 Connecting to an amplifier equipped with an MPEG audio decoder MPEG2 sound You can enjoy motion picture and live concert DVD video discs encoded via the MPEG2 recording system with dynamic realistic sound by connecting an amplifier equipped with an MPEG2 audio decoder or MPEG2 audio processor. Amplifier equipped with an MPEG2 audio decoder To COAXIAL...

[Page 20: Power Source](#)

Connections Power source Power connection To DC input jack AC adapter (supplied) J5N00621A [E] (P14-25) TO USE AC POWER 1. Connect the AC cord to the AC adapter. 2. Connect the AC adapter plug into the TV/DVD's DC input jack. 3.

[Page 21: Basic Setup](#)

Basic setup Setting the language This TV/DVD can display the on screen language in English, Spanish or French in the TV mode. Select the language you prefer first, then proceed with the other menu options. Setting the language To turn on the TV/DVD, press POWER. The Power indicator on the front of the main unit will light.

[Page 22: To Memorize Channels](#)

Basic setup To memorize channels This TV/DVD is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the TV/DVD's memory.

[Page 23: Tv Operation](#)

TV operation TV operation TV operation To turn on the TV/DVD, press POWER. The Power indicator on the front of the main unit will light. Adjust the volume level by pressing VOL + or -. The volume level will be indicated on the screen by green bars.

Page 24 TV operation TV operation (continued) TV operation I CHANNEL UP/DOWN Press and release CH + or -. The channel automatically stops at the next channel set into memory. For proper operation, before selecting channels, they should be set into the memory. See page 22

“To memorize channels”.

[Page 25: Closed Captions](#)

Closed captions WHAT IS CLOSED CAPTIONING? This television has the capability to decode and display closed captioned television programs. Closed captioning will display text on the screen for hearing impaired viewers or it will translate and display text in another language.

[Page 26: Setting The V-Chip](#)

TV operation Setting the V-Chip An age limitation can be set to forbid children to see and hear violent scenes or pictures for adults, etc. The TV/DVD corresponds to “TV RATING” and “MOVIE RATING”. To use the V-Chip function, you must register a password. Notes: •...

[Page 27](#) To set the V-Chip Repeat steps 1 ~ 3 in “To register password” as left page, then press CHIP SET”, then press V-CHIP V-CHIP SET CHANGE PASSWORD Press to select “TV RATING”, then press to display the desired setting. After setting, press ENTER. : TV RATING is not set TV-Y : All children TV-Y7 : 7 years old and above...

[Page 28: Picture Control Adjustment](#)

TV operation Picture control adjustment/ Adjusting the picture preference Picture controls are factory preset but you can adjust them individually as follows: And also you can select four picture modes—Standard, Sports, Movie, and Memory—as described in the following table: Picture control adjustment Press MENU, then press option.

[Page 29: Selecting The Color Temperature](#)

Selecting the color temperature Selecting the color temperature Press MENU, then press option. PICTURE AUDIO PICTURE PREFERENCE COLOR TEMPERATURE Press to select “COLOR TEMPERATURE”, then press PICTURE AUDIO PICTURE PREFERENCE COLOR TEMPERATURE // MENU Press to select the desired color mode, then press ENTER.

[Page 30: Sound Control Adjustment](#)

TV operation Sound control adjustment/ Stereo and Second Audio Program (SAP) Sound controls are factory preset but you can adjust them individually as follows: The TV/DVD is equipped with a feature known as multi-channel TV sound or MTS. MTS broadcasts greatly enhance TV viewing by bringing you programs with high fidelity stereo sound.

[Page 31: Basic Playback](#)

Basic playback Playing a disc This section shows you the basics on how to play a disc. CAUTION Keep your fingers well clear of the disc slot when disc is loading or unloading. Neglecting to do so may cause serious personal injury.

[Page 32](#) Basic playback Playing a disc (continued) To obtain a higher quality picture Occasionally, some picture noise may appear on the TV screen while playing a DVD video disc because the high resolution pictures on these discs include a lot of information. In such case, you may reduce the SHARPNESS with the Picture control adjustment menu (see page 28).

[Page 33](#) Playing in fast reverse or fast forward directions Press REV or FWD during playback. REV: Fast reverse playback FWD: Fast forward playback Each time you press REV or FWD button, the playback speed changes. Playing frame by frame Press PAUSE during still playback. Each time you press PAUSE, the picture advances one frame.

[Page 34: Advanced Playback](#)

Advanced playback Zooming/Locating desired scene Zooming This unit will allow you to zoom in on the frame image. You can then make selections by switching the position of the frame. Press ZOOM during playback. The center part of the image will be zoomed in.

[Page 35: Repeat Playback](#)

Repeat playback/A-B Repeat playback Repeat playback Press PLAY MODE during playback or stop mode. [DVD] Press or ENTER once or twice to select “Chapter” or “Title”. The unit automatically starts repeat playback after finishing the current title or chapter. Repeat /Enter/Play Mode [Audio CD, Video CD] Press...

[Page 36: Program Playback](#)

Advanced playback Program playback/Random playback You can arrange the playback order of tracks or files on the disc. And also the unit selects tracks or files at random and playback them. These feature works for Audio CD, Video CD and MP3/WMA/JPEG CD. Program playback Press PLAY MODE in the stop mode.

[Page 37: Changing Angles](#)

Changing angles/Title selection/DVD menu Changing angles When playing back a disc recorded with multi-angle facility, you can change the angle that you are viewing the scene from. Press ANGLE during playback. The current angle will appear. Title selection Two or more titles are recorded on some discs. If the title menu is recorded on the disc, you can select the desired title. Press TOP MENU during playback.

[Page 38: Changing Soundtrack Language](#)

Advanced playback Changing soundtrack language/ Subtitles Changing soundtrack language You can select the language when you play a multilingual disc. Press AUDIO during playback. The current soundtrack language will appear. Press AUDIO repeatedly until the desired language is selected. •...

[Page 39: Karaoke Playback](#)

Karaoke playback/Disc status/ To turn off the PBC Karaoke playback You can turn the vocal on or off recorded on the DVD KARAOKE. During DVD KARAOKE disc playback, press AUDIO. The KARAOKE symbol (1/8 Eng Dolby Digital • If you play non-Karaoke disc, the KARAOKE symbol () does not appear.

[Page 40: Mp3/Wma/Jpeg Cd Operation](#)

Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3/WMA files). Given the fact that technology in this area is still maturing, Toshiba cannot guarantee that all genre of recordable discs will produce optimal playback quality. The technical criteria set out in this owner's manual are meant as a guide only.

[Page 41](#) MP3/WMA CD playback Load a disc on which MP3 or WMA files have been recorded in the disc slot. A file menu screen will appear on the screen. Press or ENTER to select folder. CD-R Pops Japan Bay Bridge CLOSE MY EYES DIVE TO BLUE Honey BLUE EYES...

[Page 42: Jpeg Cd Playback](#)

Advanced playback MP3/WMA/JPEG CD operation (continued) You can select your desired JPEG file on the file menu and picture menu. The selected JPEG file is automatically adjusted to the TV screen. (When the aspect ratio of the JPEG file is different to the TV screen, the black bar will appear at the top and bottom, or the both sides of the TV screen.

[Page 43: Function Setup](#)

Function setup Customizing the function settings You can change the default settings of the DVD mode to customize performance to your preference. Setting procedure Press SETUP during stop mode. The following on-screen display appears. Language Picture Press to select the desired section, then press or ENTER.

[Page 44](#) Function setup Setting details Language Language Picture Menu Subtitle Audio Menu, Subtitle, Audio You can select the language of "Menu", "Subtitle" and "Audio" if more than one languages are recorded onto the disc. English, Francais, Espanol: The selected language will be heard or seen. Other: Other language can be selected (see the "Language code list"...

[Page 45](#) Setting details Sound Language Picture DRC (Dynamic Range Control) enables you to control the dynamic range so as to achieve a suitable sound for your equipment. On: Loud sound such as explosion or similar is toned down slightly when played back. This makes it suitable for when it is connected to a stereo.

[Page 46: Temporary Disabling Of Rating Level By Dvd Disc](#)

Function setup Temporary disabling of rating level by DVD disc Depending on the DVD disc, the

disc may try to temporarily cancel the rating level that you have set. It is up to you to decide whether to cancel the rating level or not. Load a DVD disc.

[Page 47: Others](#)

Others Language code list Enter the appropriate code number for the initial settings "Menu", "Subtitle" and/or "Audio" Language Name Code Language Name Code Abkhazian 1112 Fiji Afar 1111 Finnish Afrikaans 1116 French Albanian 2927 Frisian Amharic 1123 Galician Arabic 1128 Georgian Armenian 1835...

[Page 48: Troubleshooting](#)

Others Troubleshooting Use the following check list for troubleshooting when you have problems with your unit. Consult your local dealer or service outlet if problems persist. Be sure all connections are properly made when using with other units. SYMPTOMS POWER TV/DVD does not operate.

[Page 49](#) SYMPTOMS Playback doesn't start. No picture. No sound. Picture is distorted during fast reverse/forward playback. Stopping playback, search, slow-motion play, repeat play, or program play, etc. cannot be performed. No on-screen display. The unit or remote operation key is not functioning. Playback does not start when the title is selected.

[Page 50: Reception Disturbances](#)

Others Reception disturbances Most types of television interference can be remedied by adjusting the height and position of the VHF/UHF antenna. Outdoor antennas are recommended for best results. The most common types of television interference are shown below. If one of these symptoms appear when the TV/DVD is connected to a Cable TV system, the disturbance may be caused by the local Cable TV company broadcast.

[Page 51: Specifications](#)

Specifications General Power supply Power consumption Weight Dimensions Operating temperature Operating humidity Television LCD panel Display method Number of pixels Tuner type Receiving channels Antenna input Speaker Audio output power DVD/CD Player Signal system Applicable disc Pickup Input/Output S-Video input Component video input Video input Audio input...

[Page 52: Limited United States Warranty](#)

Limited United States Warranty LCD TV/DVD Combination—Repair Warranty Toshiba America Consumer Products, L.L.C. ("TACP") makes the following limited warranties to original consumers in the United States. THESE LIMITED WARRANTIES EXTEND TO THE ORIGINAL CONSUMER PURCHASER OR ANY PERSON RECEIVING THIS DVD PLAYER AS A GIFT FROM THE ORIGINAL CONSUMER PURCHASER AND TO NO OTHER PURCHASER OR TRANSFEREE.

[Page 53](#) LCD TV/DVD Product to and from the Service Station. For additional information, visit TACP's web site: www.tacp.toshiba.com ALL WARRANTIES IMPLIED BY THE LAW OF ANY STATE OF THE U.S.A., INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND...

[Page 54](#) ® ColorStream is registered trademark of Toshiba America Consumer Products, L.L.C. Printed in Thailand J5N00621A [E] (P52-Back) 14/01/2005, 7:43 PM...