

Specifications; Accessories - Toshiba W-706 Owner's Manual

Hi-fi vhs sqpb video cassette recorder

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49

•

[Table of Contents](#)

•

Bookmarks



Specifications

Power supply:

Power consumption:

External dimensions:

Mass:

Channels received:

Antenna input/output terminals:

Signal system:

× ×

Recording/Playback system:

Cassette:

Tape speed:

Video recording/playback time:

Fast forward time:

High speed rewind time:

Video input:

Video output:

Audio input:

Audio output:

Audio frequency range (Hi-Fi):

Audio dynamic range (Hi-Fi):

× ×

Utilization conditions:

Accessories

Antenna cable 1

Remote control 1

Ω

Batteries (AAA) 2

Designs and specifications are subject to change without notice.

120 V AC, 60 Hz

19 W

430

96.5

281 mm (W.H.D.)

3.8 kg

VHF: Channels 2-13

UHF: Channels 14-69

CATV: Channels 1-125

UHF/VHF: 75

Ω

F type connector

Standard NTSC

Ω

Recording: VHS format (SP, SLP)

Playback: VHS format (SP, LP, SLP)

Video cassette with

SLP: 11.1 mm/s, SP: 33.4 mm/s

SLP: 480 minutes, SP: 160 minutes (When T-160 video cassette is used.)

Within approx. 80 s (When T-120 video cassette is used.)

o o

Within approx. 54 s (when T-120 video cassette is used.)

1 V (p-p), 75 , unbalanced, negative sync., pin jack



ManualsLib.com

1 V (p-p), 75 Ω , unbalanced, negative sync., pin
jack

Line input: 308 mV (rms), more than 47 k Ω , pin
jack

Line output: 308 mV (rms), less than 4.7 k Ω , pin
jack

20 Hz - 20 kHz

90 dB

Temperature: 5 C to 40 C

Humidity: less than RH 80%

× ×

mark

4 7

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
44
45
46
47
48
49

Quick Links:

[How to Use the Remote Control](#)
[Specifications](#)

Related Manuals for Toshiba W-706

[DVD Recorder Toshiba W808 Service Manual](#)

Dvd+vhs (149 pages)

[VCR Toshiba W-804 Owner's Manual](#)

Hi-fi video cassette recorder (52 pages)

[VCR Toshiba W-705 Owner's Manual](#)

Hi-fi vhs video cassette recorder (42 pages)

[VCR Toshiba W-701 Owner's Manual](#)

Hi-fi vhs sqpb video cassette recorder (42 pages)

[VCR Toshiba W-704 Service Manual](#)

Nc mechanical deck (139 pages)

[VCR Toshiba W-704 Owner's Manual](#)

Toshiba video cassette recorder w-704 owner's manual (49 pages)

[VCR Toshiba W-704C Owner's Manual](#)

Toshiba america consumer products, inc. video cassetterecorder owner's manual w-704c (48 pages)

[VCR Toshiba W-704C Service Manual](#)

(138 pages)

[VCR Toshiba W-707 Owner's Manual](#)

Toshiba video cassette recorder w-707 owner's manual (49 pages)

[VCR Toshiba W-707 Service Manual](#)

(138 pages)

[VCR Toshiba W-717 Owner's Manual](#)

Hi-fi vhs sqpb video cassette recorder (47 pages)

[VCR Toshiba W-727 Owner's Manual](#)

Hi-fi vhs sqpb video cassette recorder (46 pages)

[VCR Toshiba W-727 Service Manual](#)

(83 pages)

[VCR Toshiba W-714 Owner's Manual](#)

Hi-fi vhs (34 pages)

[VCR Toshiba W-422 Owner's Manual](#)

Hi-fi vhs sqpb video cassette recorder (35 pages)

[VCR Toshiba W607 Owner's Manual](#)

Toshiba w607: user guide (40 pages)

Related Content for Toshiba W-706

[Beta hi-fi V-S36 Specifications](#)

Toshiba Beta hi-fi V-S36

[V-S46 Specifications](#)

Toshiba V-S46

[W501 General Specifications](#)

Toshiba W501

[VE28 Product Specifications](#)

Toshiba VE28

[MV9DL2 General Specifications](#)

Toshiba MV9DL2

[M-V19H01 Specifications](#)

Toshiba M-V19H01

[rd-xv48dtkb Specifications](#)

toshiba rd-xv48dtkb

[w425 General Specifications](#)

Toshiba w425

This manual is also suitable for:

[W-808W-804](#)