



Toshiba AW-8570SM Owner's Manual

Fully automatic washing machine

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

• PAGE

1

OF 20 GO

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

| |
|--|
| |
|--|

Quick Links

[1 Description of Parts](#)

[2 How to Operate](#)

[3 Washing Process](#)

[4 Error Indication List](#)

[5 Troubleshooting](#)

[Download this manual](#)



FULLY AUTOMATIC
WASHING MACHINE

AW-8570SS

AW-8570SS TOSHIBA

Leading Innovation >>>

Thank you for purchasing TOSHIBA Fully Automatic

Thank you for purchasing TOSHIBA Fully Automatic
Washing Machine.

Washing Machine.

Please read this manual carefully in order to operate

Please read this manual carefully in order to operate
the machine properly.

the machine properly.
Sometimes you may find some water remaining in
Sometimes you may find some water remaining in
the drainage hose at your first operation. This is
the drainage hose at your first operation. This is
caused by the production-line test and nothing to
caused by the production-line test and nothing to
worry about.
worry about.



OWNER'S MANUAL **Leading Innovation >>>**

CONTENTS

| | |
|---|-------|
| WARNING | 2 |
| CAUTION | 3 |
| DESCRIPTION OF PARTS | 3 |
| DESCRIPTION AND OPERATION | |
| OF PANEL PARTS | 4 |
| CHILD PROOF MODE | 5 |
| HOW TO OPERATE | 6~7 |
| SUPER SPIN DRY | 8 |
| CUSTOM WASH CYCLES | 9 |
| PRESET MODE | 10 |
| WASHING PROCESS | 10 |
| LAUNDRY GUIDE | 11 |
| MAINTENANCE | 13 |
| INSTALLATION | 14~17 |
| BEFORE CALLING THE SERVICEMAN | 18~19 |
| HANDLING METHOD FOR EMERGENCY | 19 |
| SPECIFICATIONS | 19 |

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba AW-8570SM

[Washer Toshiba AW-7480EM Owner's Manual](#)

Fully automatic washing machine (16 pages)

[Washer Toshiba AW-G9930S Service Manual](#)

Fully automatic washing machine (52 pages)

[Washer Toshiba AW-B1100GM User Manual](#)

(20 pages)

[Washer Toshiba AW-G9930S/G1130S Service Manual](#)

Fully automatic washing machine (53 pages)

[Washer Toshiba AW-J800A-PH Owner's Manual](#)

(22 pages)

[Washer Toshiba AW-M731APH Owner's Manual](#)

Fully automatic washing machine (23 pages)

[Washer Toshiba AW-1170SM Owner's Manual](#)

Fully automatic washing machine (20 pages)

[Washer Toshiba AW-SD120SM Owner's Manual](#)

(36 pages)

[Washer Toshiba AW-SD150UBPE Owner's Manual](#)

Fully automatic washing machine (18 pages)

[Washer Toshiba AW-SD150SBA Service Manual](#)

Fully automatic washing machine (81 pages)

[Washer Toshiba AW-J800AH Owner's Manual](#)

Fully automatic (24 pages)

[Washer Toshiba AW-M1100PT Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Washer Toshiba AW-J800APH1 Owner's Manual](#)

Fully automatic washing machine (24 pages)

[Washer Toshiba AW-8450SBE Owner's Manual](#)

Fully automatic washing machine (6 pages)

[Washer Toshiba aw-dc series Owner's Manual](#)

Fully automatic washing machine (37 pages)

[Washer Toshiba AW-DC1000CM Owner's Manual](#)

Fully automatic washing machine (36 pages)

Summary of Contents for Toshiba AW-8570SM

[Page 1: Table Of Contents](#)

FULLY AUTOMATIC WASHING MACHINE AW-8570SS AW-8570SM Thank you for purchasing TOSHIBA Fully Automatic Thank you for purchasing TOSHIBA Fully Automatic Washing Machine. Washing Machine. Please read this manual carefully in order to operate Please read this manual carefully in order to operate the machine properly.

[Page 2: Warning](#)

WARNING WARNING: This indicates an important item where incorrect operation may lead to injury or death. Never attempt to touch laundry in the spin basket until the motion of the basket stops completely. Laundry in the basket may become wrapped around the hand, even when the

basket is only moving slowly.

[Page 3: Caution](#)

CAUTION: This indicates an important item where incorrect operation may lead to injury or material damage. Do not pull the cord when unplug the appliance. Hold the plug body to unplug. It can cause electrical shock or malfunctions that lead to injuries. Do not use water with temperatures over 50°C.

[Page 4: Description And Operation Of Panel Parts](#)

DESCRIPTION AND OPERATION OF PANEL PARTS CHILD PROOF MODE DISPLAY Check this to see if the CHILD PROOF mode is ON (lit) or warning (flashing). "PRESET" button You can set/reset the CHILD PROOF mode. You can set the time until washing finished.

[Page 5: Child Proof Mode](#)

CHILD PROOF MODE CHILD PROOF mode This model is equipped with CHILD PROOF mode. After this mode is set to ON, the washer will alarm you if the lid is opened during operation. If you find accident such as falling of child into wash tub, please take necessary safety action urgently.

[Page 6: How To Operate](#)

Preparation "REGULAR" "SOAK" "SPEED" "HEAVY" "DELICATE" "REGULAR" cycle Water level, water current and time are automatically selected according to the quantity and type of laundry detected automatically. Put the laundry evenly and confirmly. If it is not, the lower water level may be set. "SOAK"...

[Page 7](#) WASHING OF BLANKET Type and amount which may be washed. Single size (140 cm x 200 cm or less) 100% synthetic fiber type: Mayer, Tuft, Down cloth Weight: 3.0 kg or less All wool blankets and regular electric blankets should NEVER be washed. Washable electric blankets should be washed according to the washing instruction given in the user's manual that...

[Page 8: Super Spin Dry](#)

When you need to dry clothes or shorten their indoor drying time. The amount of laundry/once of spin Less than 1.5 kg Setting time for spinning You can manually set the time of spinning according to the following guide: If you would like to shorten the time of drying clothes in the room: 30 min If you would like to dry the synthetic clothes: 90 min...

[Page 9: Custom Wash Cycles](#)

CUSTOM WASH CYCLES You can select the operation that you want — such as spin only or rinsed water reuse. Turn the POWER on. Put the laundry in the basket and select your favorite cycle or water level. Set the custom wash cycle. WASH Regular washing RINSE...

[Page 10: Preset Mode](#)

TO SET/RESET PRESET MODE • Turn the POWER off when you want to delete memory. If you wish to change preset time, turn the POWER off. And then set to new preset time. TO CONFIRM PRESET TIME • Display preset time when you open the wash lid, or press PRESET button.

[Page 11: Laundry Guide](#)

LAUNDRY GUIDE Recommended detergent amount • Put the laundry in the washer basket, push the START button, rotate the pulsator without water to detect the laundry amount. Then it indicates the amount of detergent required. Example Put 1 spoon of the detergent. •...

[Page 12](#) Clean the lint collector after every use. How to remove Insert fingers deeply into the recess. By strongly holding down the collector, pull it toward you. How to replace Check the top and bottom of the collector. Then mount the bottom. Hold down the recess, press the collector against the collector mounting base until the shaft fits into position.

[Page 13: Cleaning The Tub](#)

Washing machine body and panel Before performing any maintenance on your washing machine, be sure to remove the electrical plug from its power source. The main body and control panel may be cleaned by wiping with a soft cloth soaked in water. (Hard-to-remove dirt may be cleaned by wiping with a soft cloth soaked in a mild detergent.) Caution: Never clean

the body or control panel with benzine, thinner, cleanser, or other chemical cleaners.

[Page 14](#) Choosing an installation location Install your washing machine in a level, stable place. • It is dangerous to place the washing machine in an unstable location since it may move during vibration. • It will increase the sound produced by the machine when it vibrates during use.

[Page 15: Installation](#)

Moving the hook When inserting the drainage hose into a wash pan or onto a drain pipe, the hook may be moved to facilitate the installation. When hooking the hose hook into the slot provided on the body of your washing machine, move the hook back to its initial position.

[Page 16](#) Attaching the water supply hose to the faucet If you attach the water supply hose completely, it may cause a water leakage. Faucet shape Wall-mounted faucets are best. Wall-mounted Square Movable shaped faucet faucet The distance is needed 1.6 cm or more Attaching the hose union Push the lock lever of the water supply hose.

[Page 17](#) If the filling water becomes not good The water inlet may be blocked by foreign objects. Remove the water supply hose and clean the filter with a brush. If you remove the water supply care- lessly, water may splash. Therefore, use the following procedure.

[Page 18: Troubleshooting](#)

BEFORE CALLING THE SERVICEMAN WHEN does not operate Is there a power outage? Is the circuit breaker or fuses cut off? Is the machine's plug properly inserted into an AC socket? Is the power switch ON? making noise Is there the inclination of the laundry? Is your washing machine installed on an inclined or uneven surface? Are there match sticks, hairpins or metal...

[Page 19: Handling Method For Emergency](#)

BEFORE CALLING THE SERVICEMAN The following are not malfunctions. When: The first time you use your washing machine, a small amount of water may drain out of the drainage hose. During operation the control panel gets warm. The pulsator rotates bit by bit. During washing and rinsing, lamps flickers.

[Page 20](#) MANUFACTURED BY TOSHIBA CONSUMER PRODUCTS (THAILAND) CO., LTD.
6248085701...

This manual is also suitable for:

Aw-8570ss

[Save PDF](#)