





## Whirlpool W10115773 Instruction Sheet

Backsplash kit (30"/36"/48" range or cooktop application)




1  
2

--

•

## Bookmarks

Available languages

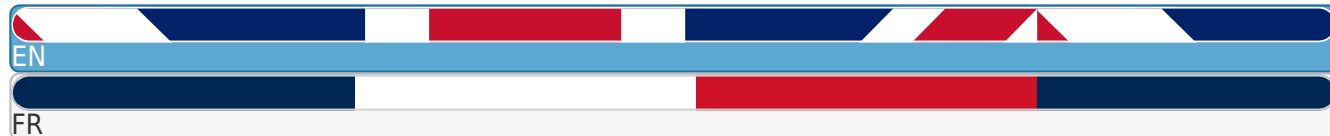

## Quick Links

[Download this manual](#)



# **for Backsplash Kit Installation (30"/36"/48" Range or Cooktop Application)**

1.

Assemble rear panel to backsplash using 7 of the 10 screws provide in kit.

2.

Position the rear panel against the inner flange of the backsplash as shown in Figure 1.

SCREWS  
(7 LOCATIONS)

3.

Install mounting screws (7) through the backsplash flange mounting holes into rear panel and tighten securely, set aside.



4.  
Remove the grates from range or cooktop.

5.  
Remove rear island trim from range or cooktop by removing three (3) screws from the rear of the appliance. Retain screws for future use. See Figure 2.

SCREWS (3)  
© Whirlpool Corporation 2009  
(All Rights Reserved)

# Instruction Sheet

## Kit Contains:

BACKSPLASH  
REAR PANEL  
(NOTE LOCATION)  
FIGURE 1  
ISLAND TRIM  
FIGURE 2

### (1) Backsplash

#### (1) Panel, Rear

(10) Screws, 8-18 x .375"



#### (1) Instruction Sheet

6.  
Position new backsplash assembly where the island trim was previously removed. Align holes in rear of range or cooktop with backsplash assembly and secure using the three (3) screws removed in step 5. See Figure 3.

7.  
Install the three (3) additional screws provided with kit to the front side of the backsplash assembly and tighten securely. See Figure 4.

8.  
Reinstall the grates onto the range or cooktop.

1  
FIGURE 3  
SCREWS (3)  
FIGURE 4

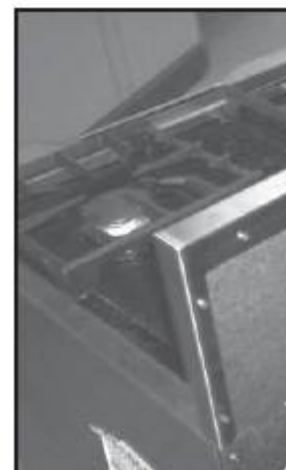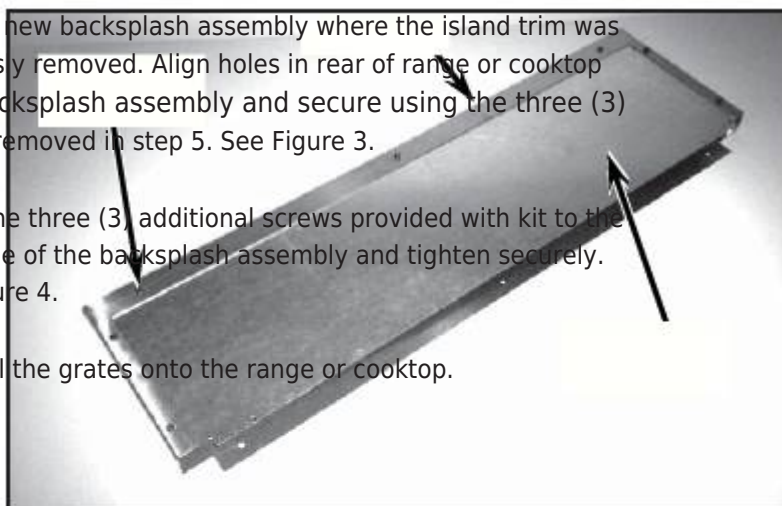

Instruction Sheet W10257618A 3/09  
SCREWS (3)

[Next Page](#)

1

2

## Summary of Contents for Whirlpool W10115773

[Page 1](#) (3) screws from the rear of the appliance. Retain screws for future use. See Figure 2.  
SCREWS (3) SCREWS (3) ISLAND TRIM FIGURE 4 Reinstall the grates onto the range or cooktop.

FIGURE 2 © Whirlpool Corporation 2009 Instruction Sheet W10257618A 3/09 (All Rights Reserved)

[Page 2](#) Conserver les vis pour usage futur. Voir Figure 2. VIS (3) VIS (3) GARNITURE D'ÎLOT  
FIGURE 4 Réinstaller les grilles sur la cuisinière ou table de cuisson. FIGURE 2 © Whirlpool Corporation 2009 Fiche d'instructions W10257618A 3/09 (Tous droits réservés)