



Asus RP-AC1900 Quick Start Manual

Dual-band wireless repeater

1
2

--

•

Bookmarks

--

[Download this manual](#)

Quick Links





RP-AC1900

Dual-Band Wireless Repeater


Press the Pair button on your RP-AC1900 for more than two (2) seconds until the power LED starts to blink.

For more information, please refer to the Setup Methods on the back.

3 METHOD Web Support

Connect
ASUS_RP_XX
ASUS_RP_XX_5G
Disconnect your Ethernet (wired) connection from your computer.
Click the Wi-Fi icon on the taskbar and connect to RP-AC1900's network:
ASUS_RP_XX
or
ASUS_RP_XX_5G


Configure
Tick
Same with Parent AP SSID/Password
to
copy the router/AP's SSID and password for your extended network. You could also set a unique SSID and pass word for your extended network by typing in the text box. When done, click Apply.

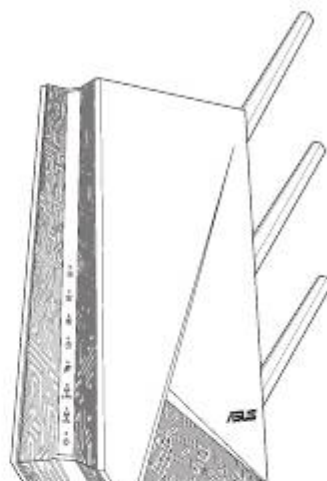

Hardware Explanations

- 1 Plug the adapter into the DCIN port, and press the Pair button.
- 2 The Power, 2.4GHz and 5GHz LEDs will light up.

Button Explanations

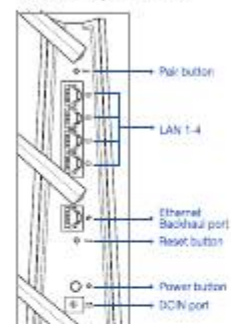

LED Explanations



Extend

On a web browser, enter <http://repeater.asus.com>.
Set a unique repeater name and password.
Select the existing network to extend.



1
2

Related Manuals for Asus RP-AC1900

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (176 pages)

[Repeater Asus RP-AC68U Quick Start Manual](#)

Dual-band wireless repeater (68 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (147 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (21 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band (180 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (156 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (52 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (7 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (212 pages)

[Repeater Asus RP-AC87 Quick Start Manual](#)

Dual-band wireless repeater (173 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless ac1200 repeater (2 pages)

[Repeater Asus RP-AC55 Quick Start Manual](#)

Wireless-ac1200 dual-band repeater for easy setup (3 pages)

[Repeater Asus RP-AC51 Quick Start Manual](#)

Wi-fi ac repeater (2 pages)

[Repeater Asus RP-AX56 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

[Repeater Asus RP-AC53 Quick Start Manual](#)

Dual-band wireless repeater (2 pages)

[Repeater Asus RP-AC66 Quick Start Manual](#)

Dual-band wireless-ac1750 repeater (2 pages)

Summary of Contents for Asus RP-AC1900

[Page 1](#) ASUS_RP_XX ASUS_RP_XX_5G Disconnect your Ethernet (wired) connection from your computer. Press the Pair button on your RP-AC1900 for Click the Wi-Fi icon on the taskbar more than two (2) seconds until the power and connect to RP-AC1900's network: LED starts to blink.

[Page 2](#) RP-AC1900 RP-AC1900 the RP-AC1900 when RP-AC1900 RP-AC1900 RP-AC1900 RP-AC1900 RP-AC1900 Router and RP-AC1900 at best place. routers and nodes (Ethernet backhaul)? Speci cations: DC Power adapter DC Output: +19V with max 1.75A current Operating Temperature 0~40°C Storage 0~70°C and RP-AC1900...