

Whirlpool W11 CM145 Instructions For Use Manual

```
2
3
4
5
6
7
8
9
Table Of Contents
10
11
12
13
14
15
16
```

18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			

Table of Contents






Quick Links

- 1 Installation
- 2 Descale
- 3 Troubleshooting

Download this manual



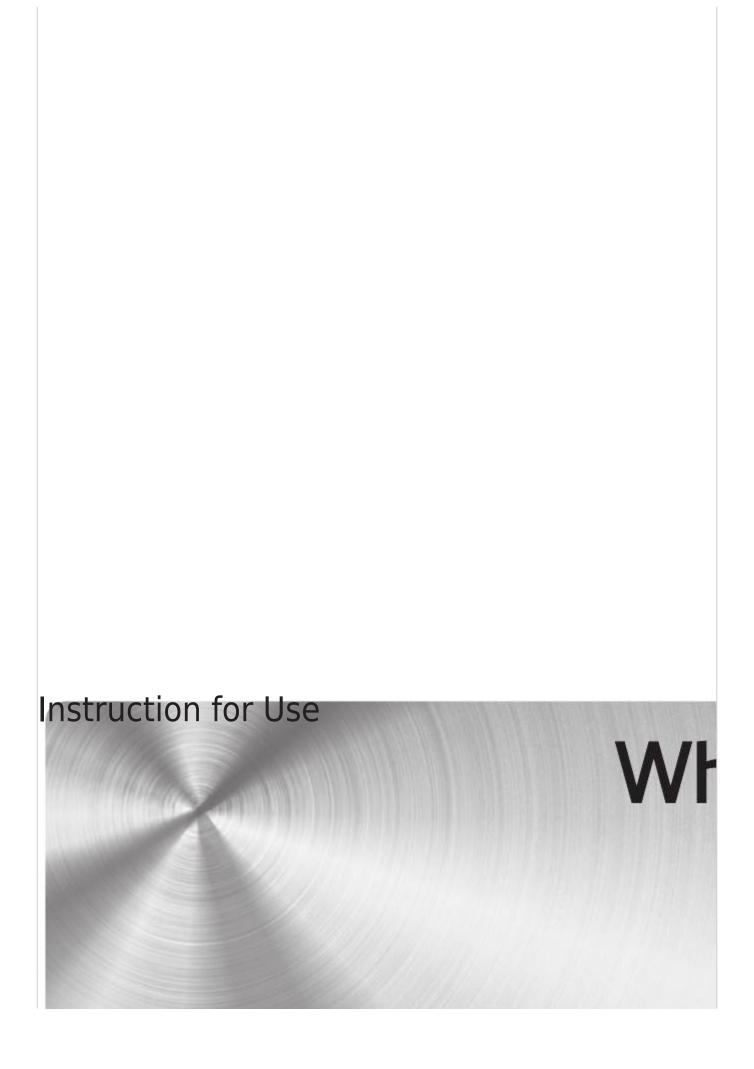



Troubleshooting

INTRODUCTION 15
TROUBLESHOOTING 32

Related Manuals for Whirlpool W11 CM145

Coffee Maker Whirlpool ACE 102 IX Instructions For Use Manual

Fully-automatic 'bean to cup' built-in coffee machine, ace 102 ix (298 pages)

Coffee Maker Whirlpool ACE 010 IX Installation

Semi-automatic mini built-in coffee machine, ace 010 ix (4 pages)

Coffee Maker Whirlpool ACE 100 IX Instructions For Use Manual

Fully-automatic 'bean to cup' in-column coffee machine, ace 100 ix (18 pages)

Coffee Maker Whirlpool ACE 102 IX Instructions For Use Manual

(43 pages)

Coffee Maker Whirlpool ACE 010 IX Instructions For Use Manual

Semi-automatic mini built-in coffee machine, ace 010 ix (17 pages)

Coffee Maker Whirlpool ACE 010 Installation, Quick Start

(17 pages)

Coffee Maker Whirlpool 400011239758 Instructions For Use Manual

(36 pages)

Summary of Contents for Whirlpool W11 CM145

Page 1 Instruction for Use...

Page 3 FIG. 1 FIG. 2 x 28 FIG. 2A...

Page 4 FIG. 3 FIG. 5 FIG. 4 FIG. 6 FIG. 7...

Page 5 A16 A21 A13 A18...

Page 6 00:00 AROMA PROFILE 1 QUANTITY LATTE COFFEE CAPPUCCINO ESPRESSO MACCHIATO...

Page 10: Table Of Contents

Page 11: Safety Instructions

Keep them nearby for ance and power cord away from children future reference. These instructions are under 8 years of age. also available on docs.whirlpool.eu WARNING: Accessible parts may become These instructions and the appliance itself hot during use, young children should be provide important safety warnings, to be kept away.

Page 12: Installation

This appliance is Not intended to be used make sure the appliance does not damage in similar application such as: staff kitchen the power cable - risk of fire or electrical areas in shops,

offices and other working shock. Only activate the appliance when environments;...

Page 13: Cleaning And Maintenance

WARNING: Avoid any spillage on the con- SAFEGUARDING THE ENVIRONMENT Disposal of packaging materials nector and plug. The packaging material is 100% recyclable and is marked with the recycle symbol(). The various parts of the packaging Cleaning and maintenance must therefore be disposed of responsibility and in full compli- WARNING: Ensure that the appliance ance with local authority regulations governing waste disposal.

Page 14: Built-In Installation

BUILT-IN INSTALLATION Verify the minimum measurements required for correct instal- lation of the appliance. The coffee machine must be installed in a column and the column must be firmly fixed to the wall with commercially available brackets. • Kitchen furniture in direct contact with the appliance must be heat resistant (65°C min).

Page 15: Introduction

INTRODUCTION Description of the homepage (main screen) (page 6 - B) Letters in brackets: menu to customise the beverages settings The letters in brackets refer to the legend in the Description of: appliance settings menu the appliance. B3. Selected aroma B4.

Page 16: Turning The Appliance On

TURNING THE APPLIANCE OFF 2. SELECT LANGUAGE: press (B10) or (B8) until the Whenever the coffee machine is turned off after being used to flag corresponding to the required language appears on the make coffee, it performs an automatic rinse cycle. display (B), then press the flag;...

Page 17: Beverages Settings

• After cleaning, it is normal for the grounds container (A4) to To enable this function, the time must already be set correctly contain water. (see section "Set time"). To enable auto-start, proceed as follows: Beverages settings 1. Press (B2) to enter the menu;...

Page 18: Coffee Temperature

To disable or enable "Energy Saving", proceed as follows: Cup light 1. Press (B2) to enter the menu; This function enables or disables the cup lights (A18). The lights 2. Press (B10) or (B8) until ENERGY SAVING ap- come on each time coffee beverages or hot milk is delivered and pears on the display (B);...

Page 19: Making Coffee

4. Press to go back to the homepage. 4. Press (B10) or (B8) until the required coffee is displayed; MAKING COFFEE 5. Then select your required coffee from the homepage: Selecting the coffee aroma • ESPRESSO Select the required aroma from the homepage by press- •...

Page 20: Adjusting The Coffee Mill

3. Make sure the funnel (A21) is not blocked, then add one (see section "Delivering hot water"; level measure of pre-ground coffee (fig. 14). • increase the coffee temperature in the settings menu (see 4. Place a cup under the coffee spouts (A13). section "Coffee temperature").

Page 21: Making Cappuccinos And Milk-Based Coffees Auto- Matically

Making cappuccinos and milk-based coffees auto- 2. Place a cup or other recipient under the frothed milk spout (fig. 20); matically 3. Turn the froth adjustment dial (D1) to CLEAN (fig. 21). 1. Fill the milk container (D) and attach it as described above. CLEANING MILK CONTAINER UNDERWAY PLACE A RECIPIENT 2.

Page 22: Tips For Using Steam To Froth Milk

2. Fill a container with the liquid to be heated or frothed and beverage is active. You can select "MY" beverages for each immerse the hot water/steam spout in the liquid; of the 6 profiles; 2. From the homepage, press (B1);...

Page 23: Cleaning

3. Empty the grounds container (A4) and clean thoroughly to (B11), press (B10) or (B8) until the required profile is remove all residues left on the bottom. This can be done displayed, then press on the profile. using the spatula on the brush (C3) provided. •...

Page 24: Cleaning The Infuser

Cleaning the infuser milk frother connector hole. 7. Check that the intake tube and spout are not clogged with The infuser must be cleaned at least once a month. milk residues. The infuser (A5) must not be removed when the appliance is on. 8.

Page 25: Setting Water Hardness

Descaling is complete. WARNING • If the descaling cycle is not completed correctly (e.g. no Hot water containing acid flows out of the hot water/steam electricity) we recommend repeating the cycle; spout. Take care to avoid contact with splashes of this solution. •...

Page 26: Technical Data

3. To change the level selected, press the symbol itself until the required level is displayed (Level 1 = soft water; Level 4 = very hard water); Press to go back to the homepage. The machine is now reprogrammed with the new water hard- ness setting.

Page 27: Displayed Messages

DISPLAYED MESSAGES DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY FILL TANK WITH FRESH Insufficient water in the tank (A12). Fill the tank with drinking water and/or insert it WATER correctly, pushing it as far as it will go until it clicks into place. INSERT WATER TANK The tank (A12) is not correctly in place.

Page 28 DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY ADD PRE-GROUND COFFEE The "pre-ground coffee" function has been Place pre-ground coffee in the funnel (fig. 14) and MAXIMUM ONE MEASURE selected without placing any pre-ground repeat delivery coffee in the funnel (A21). The pre-ground coffee funnel (A21) is Empty the funnel with the help of the brush (C3) as clogged.

<u>Page 29</u> DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY SELECT A MILDER TASTE OR Too much coffee has been used. Select a milder taste by pressing AROMA (B6) or REDUCE PRE-GROUND COFFEE reduce the quantity of pre-ground coffee (maximum QUANTITY 1 measure). INSERT WATER SPOUT The hot water spout (C4) is not inserted or Insert the water spout as far as it will go.

<u>Page 30</u> DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY PRESS OK TO START CLEANING The milk container has been inserted To proceed with the CLEAN function, press PROCESS OR TURN MILK FROTH with the froth adjustment dial (D1) in the or turn the froth adjustment dial to one of the milk ADJUSTMENT DIAL CLEAN position.

<u>Page 31</u> DISPLAYED MESSAGE POSSIBLE CAUSE REMEDY The appliance needs descaling. The descaling procedure described in section "Des- cale" needs to be performed and/or the filter needs replacing or removing as described in section "Water softener filter". The tubes inside the milk container (D) Turn the froth adjustment dial (D1) to CLEAN (fig.

Page 32: Troubleshooting

TROUBLESHOOTING Below is a list of some of the possible malfunctions. If the problem cannot be resolved as described, contact Customer Services. PROBLEM POSSIBLE CAUSE REMEDY The coffee is not hot. The cups were not preheated. Warm the cups by rinsing them with hot water (Please note! you can use the hot water function).

<u>Page 33</u> PROBLEM POSSIBLE CAUSE REMEDY The milk contains large bubbles and The milk is not cold enough or is not Use skimmed or semi-skimmed milk at refriger- squirts out of the milk spout (D5) or semi-skimmed or skimmed. ator temperature (about 5° C). If the result is not there is little froth as you wished, try changing brand of milk.

 need for energy AMERICANO Origin USA, UK...

Page 36 400011239758...