



# Sound System; Floppy Diskettes - Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual

Vizio mouse user manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

 
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217  
218



219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240



•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks





## Floppy diskettes

---

*The USB floppy diskette drive is available only as an option.*

1. Store your floppy diskettes in the container they came in to protect them and keep them clean. If a floppy diskette becomes dirty, clean it with a soft, lightly dampened cloth - do not use cleaning fluid.
2. Never open the shutter or touch the magnetic surface of your floppy diskette - doing this could permanently damage it and lose data.
3. Always handle floppy diskettes with care to prevent the loss of stored data.
4. Always apply the floppy diskette label in the correct location and never

apply a new label on top of an existing one - in this instance the label could come loose and damage the floppy diskette drive.

5. Never use a pencil for writing on a floppy diskette label as the dust from the pencil lead could cause a system malfunction if it found its way onto the computer's components. In this instance, always use a felt-tipped pen and write the label first before applying it to the floppy diskette.

6. Never put a floppy diskette in a location where water or other liquid may make contact with it, or where it is excessively damp - either of these conditions could cause data loss.

7. Never use a wet or damp floppy diskette - this could damage the floppy diskette drive or other devices within the computer.

8. Data may be lost if the floppy diskette is twisted, bent, or exposed to direct sunlight, extreme heat or cold.

9. Do not place heavy objects on your floppy diskettes.

10. Do not eat, smoke, or use items such as erasers near your floppy diskettes as foreign particles inside the jacket of the floppy diskette can damage the magnetic surface.

11. Magnetic energy can destroy the data on your floppy diskettes. In view of this you should keep your floppy diskettes away from speakers, radios, televisions and other sources of magnetic fields.

## Sound System

This section describes some of the audio control functions.

### Volume Mixer

The Volume Mixer utility lets you control the audio volume for playback of devices and applications under Windows.

To launch the Volume Mixer utility, right click on the speaker icon on the Taskbar, and select Open Volume Mixer from the sub menu.

To adjust the volume level of speakers or headphones, move the Speakers slider.

To adjust the volume level of an application that you are using, move the slider for the corresponding application.

### User's Manual

TECRA A10/S10/M10/SatellitePro S300

4-29



[Previous Page](#)  
[Next Page](#)

1

...

116

117

118

119

Quick Links:

[Hardware](#)

## Chapters

[User's Manual 2](#)

[Memory Stick/Moving the Computer 239](#)

Related Manuals for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300

# TECRA S10

[Laptop Toshiba TECRA M10 Maintenance Manual](#)

(475 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba A10-S3501 User Manual](#)

A10-s3501 user's guide (252 pages)

[Laptop Toshiba M10-S3401 User Manual](#)

M10-s3401 user's guide (252 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba Tecra M10-S1001 Resource Manual](#)

Toshiba tecra m10-s1001: reference guide (56 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Camcorder Toshiba S10 User Manual](#)

Camileo (47 pages)

[Laptop Toshiba Tecra A10-S3553 Specifications](#)

Toshiba tecra a10-s3553: specifications (5 pages)

[Laptop Toshiba Tecra M10-S3401 Specifications](#)

Toshiba tecra m10-s3401: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Projector Toshiba TLP-S10 Specifications](#)

1,200 ansi-lumens 2.1 kg eco mode (2 pages)

## Related Content for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10

[PT930 Sound System](#)

Toshiba PT930

[Satellite Pro R50-D Series Sound System And Video Mode](#)

Toshiba Satellite Pro R50-D Series

[Satellite Pro L70-B Series Sound System Problems](#)

Toshiba Satellite Pro L70-B Series

[Satellite Radius 12 P20W-C Sound System And Video Mode](#)

Toshiba Satellite Radius 12 P20W-C

[PORTEGE Z30-E Sound System And Video Mode](#)

Toshiba PORTEGE Z30-E

[L70-B Sound System And Video Mode](#)

Toshiba L70-B

[PORTEGE R30-A Series Sound System And Video Mode](#)

Toshiba PORTEGE R30-A Series

[Satellite P75-A Sound System And Video Mode](#)

Toshiba Satellite P75-A

This manual is also suitable for:

[Satellite pro s300-ez1511](#)[Satellite pro s300-ez1512](#)[Satellite pro s300-ez1514](#)[Satellite pro s300-ez2501](#)[Satellite pro s300-ez2502](#)[Satellite pro s300-ez2521](#) ... [Show all](#)