

Lan; Wireless Communication Switch - Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual

Vizio mouse user manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Product Support:

The latest information regarding operating system support, language support or available upgrades can be found on our web site

<http://www.toshiba-europe.com/computers/tnt/bluetooth.htm>

<http://www.pcsupport.toshiba.com>

Wireless communication switch

You can enable or disable Wireless communication functions, with the on/off switch. No transmissions are sent or received when the switch is off. Slide the switch forward to turn it on and backward to turn it off.

Wireless communication Indicator

The wireless communication indicator shows the status of the computer's wireless communication functions.

Indicator status

Indicator off

Indicator glows

If you used the Taskbar to disable the wireless LAN, restart the computer or perform the following procedure to re-enable it: Start -> Control Panel -> System and Maintenance -> System -> Device Manager -> Network adapters and right click the wireless device then choose enable.

LAN

The computer has built-in support for Ethernet LAN (10 megabits per second, 10BASE-T), Fast Ethernet LAN (100 megabits per second, 100BASE-TX) and Gigabit Ethernet LAN (1000 megabits per second, 1000BASE-T).

This section describes how to connect/disconnect to a LAN.

Do not install or remove a memory module while Wake-up on LAN is enabled.

The Wake-up on LAN function consumes power even when the system is off. Leave the AC adaptor connected while using this feature.

The Link speed (10/100/1000 megabits per second) changes automatically depending on the network conditions (connected device, cable or noise and so on).

User's Manual

TECRA A10/S10/M10/SatellitePro S300

in the United States.

Indication

The wireless communication switch is off -
no wireless functionality is available.

Wireless communication switch is on. Except for the stopped device by the software switch, all the wireless-communications functions can output a radio wave.

in Europe or

4-37

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
124
125
126
127

Quick Links:

[Hardware](#)

Chapters

[User's Manual 2](#)

[Memory Stick/Moving the Computer 239](#)

Related Manuals for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300

TECRA S10

[Laptop Toshiba TECRA M10 Maintenance Manual](#)

(475 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba A10-S3501 User Manual](#)

A10-s3501 user's guide (252 pages)

[Laptop Toshiba M10-S3401 User Manual](#)

M10-s3401 user's guide (252 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba Tecra M10-S1001 Resource Manual](#)

Toshiba tecra m10-s1001: reference guide (56 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Camcorder Toshiba S10 User Manual](#)

Camileo (47 pages)

[Laptop Toshiba Tecra A10-S3553 Specifications](#)

Toshiba tecra a10-s3553: specifications (5 pages)

[Laptop Toshiba Tecra M10-S3401 Specifications](#)

Toshiba tecra m10-s3401: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Projector Toshiba TLP-S10 Specifications](#)

1,200 ansi-lumens 2.1 kg eco mode (2 pages)

Related Content for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10

[PORTEGE Z30-E Lan](#)

Toshiba PORTEGE Z30-E

[L70-B Lan](#)

Toshiba L70-B

[PORTEGE R30-A Series Lan](#)

Toshiba PORTEGE R30-A Series

[Satellite P75-A Lan](#)

Toshiba Satellite P75-A

[Satellite L855 Series Lan](#)

Toshiba Satellite L855 Series

[L50t Lan](#)

Toshiba L50t

[Satellite L850 Series Lan](#)

Toshiba Satellite L850 Series

[PORTEGE R30-D Series Lan](#)

Toshiba PORTEGE R30-D Series

This manual is also suitable for:

[Satellite pro s300-ez1511](#)[Satellite pro s300-ez1512](#)[Satellite pro s300-ez1514](#)[Satellite pro s300-ez2501](#)[Satellite pro s300-ez2502](#)[Satellite pro s300-ez2521](#) ... [Show all](#)