



# Charging The Batteries - Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual

Vizio mouse user manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68

 
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117  
118

119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167  
168

169  
170  
171  
172  
173  
174  
175  
176  
177  
178  
179  
180  
181  
182  
183  
184  
185  
186  
187  
188  
189  
190  
191  
192  
193  
194  
195  
196  
197  
198  
199  
200  
201  
202  
203  
204  
205  
206  
207  
208  
209  
210  
211  
212  
213  
214  
215  
216  
217  
218



219  
220  
221  
222  
223  
224  
225  
226  
227  
228  
229  
230  
231  
232  
233  
234  
235  
236  
237  
238  
239  
240



•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks





*The battery pack, Extended Battery Pack and High Capacity Battery Pack are lithium ion batteries, which can explode if not replaced, used, handled or disposed of properly. Dispose of the battery as required by local ordinances or regulations. Use only batteries recommended by TOSHIBA as replacements.*



*The computer's RTC battery is a Ni-MH battery and should be replaced only by your dealer or by a TOSHIBA service representative. The battery can explode if not properly replaced, used, handled or disposed. Dispose of the battery as required by local ordinances or regulations.*

*Charge the battery pack only in an ambient temperature between 5 and*

35 degrees Celsius. Otherwise, the electrolyte solution might leak, battery pack performance might deteriorate and the battery life might be shortened.



Never install or remove the battery pack without first turning off the power and disconnecting the AC adaptor. Never remove the battery pack while the computer is in Sleep Mode. Data could be lost.

When the High Capacity Battery Pack is connected to the computer, do not hold on only to the High Capacity Battery Pack when lifting the computer up. The High Capacity Battery Pack may separate from the computer, causing it to fall and cause injuries.

Never remove the battery pack while the Wake-up on LAN function is enabled. Data will be lost. Before you remove a battery pack, disable the Wake-up on LAN function.

## Charging the batteries

When the power in the battery pack becomes low, the Battery indicator will flash orange to indicate that only a few minutes of battery power remain. If you continue to use the computer while the Battery indicator flashes, the computer will enable Hibernation Mode so that you do not lose any data, and automatically turn itself off.

You must recharge a battery pack when it becomes discharged.

### Procedures

To recharge a battery pack while it is installed in the computer, connect the AC adaptor to the DC IN 15V jack and plug the other end into a working outlet - the Battery indicator will glow orange while the battery is being charged.

Use only the computer connected to an AC power source or optional TOSHIBA Battery charger to charge the battery pack. Never attempt to charge the battery pack with any other charger.

### Time

Refer to User Information Guide about Charging time.

User's Manual

TECRA A10/S10/M10/SatellitePro S300

6-5



[Previous Page](#)  
[Next Page](#)

1

...

146

147

148

149

Quick Links:

[Hardware](#)

## Chapters

[User's Manual 2](#)

[Memory Stick/Moving the Computer 239](#)

Related Manuals for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300

# TECRA S10

[Laptop Toshiba TECRA M10 Maintenance Manual](#)

(475 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba A10-S3501 User Manual](#)

A10-s3501 user's guide (252 pages)

[Laptop Toshiba M10-S3401 User Manual](#)

M10-s3401 user's guide (252 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba Tecra M10-S1001 Resource Manual](#)

Toshiba tecra m10-s1001: reference guide (56 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Camcorder Toshiba S10 User Manual](#)

Camileo (47 pages)

[Laptop Toshiba Tecra A10-S3553 Specifications](#)

Toshiba tecra a10-s3553: specifications (5 pages)

[Laptop Toshiba Tecra M10-S3401 Specifications](#)

Toshiba tecra m10-s3401: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Projector Toshiba TLP-S10 Specifications](#)

1,200 ansi-lumens 2.1 kg eco mode (2 pages)

## Related Content for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10

[AC100 Charging The Batteries](#)

Toshiba AC100

[Satellite NB10 Charging Batteries](#)

Toshiba Satellite NB10

[Satellite C50-C Charging The Batteries](#)

Toshiba Satellite C50-C

[Satellite A205 Series Charging Batteries](#)

Toshiba Satellite A205 Series

[SATELLITE R850 Charging The Batteries](#)

Toshiba SATELLITE R850

[NB500 Charging The Batteries](#)

Toshiba NB500

[Satellite L630 Series Charging The Batteries](#)

Toshiba Satellite L630 Series

[Satellite Charging Batteries](#)

Toshiba Satellite

This manual is also suitable for:

[Satellite pro s300-ez1511](#)[Satellite pro s300-ez1512](#)[Satellite pro s300-ez1514](#)[Satellite pro s300-ez2501](#)[Satellite pro s300-ez2502](#)[Satellite pro s300-ez2521](#) ... [Show all](#)