

Chapter 7 Hw Setup; Accessing Hw Setup; Hw Setup Window - Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual

Vizio mouse user manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



HW Setup

This chapter explains how to use the TOSHIBA HW Setup program to configure your computer, and provides information on settings for various functions.

Accessing HW Setup

To run the HW Setup program, click Start -> All Programs -> TOSHIBA -> Utilities -> HWSetup.

HW Setup window

The HW Setup window contains a number of tabs (General, Display, Boot Priority, Keyboard, CPU, LAN, Device Config and USB) to allow specific functions of the computer to be configured.

In addition there are also three buttons: OK, Cancel and Apply.

OK

Cancel

Apply

[User's Manual](#)

[TECRA A10/S10/M10/SatellitePro S300](#)

Accepts your changes and closes the HW Setup window.

Closes the window without accepting your changes.

Accepts all your changes without closing the HW Setup window.

Chapter 7

7-1

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

156

157

158

159

Quick Links:

[Hardware](#)

Chapters

[User's Manual 2](#)

[Memory Stick/Moving the Computer 239](#)

Related Manuals for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300

TECRA S10

[Laptop Toshiba TECRA M10 Maintenance Manual](#)

(475 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba A10-S3501 User Manual](#)

A10-s3501 user's guide (252 pages)

[Laptop Toshiba M10-S3401 User Manual](#)

M10-s3401 user's guide (252 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba Tecra M10-S1001 Resource Manual](#)

Toshiba tecra m10-s1001: reference guide (56 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Camcorder Toshiba S10 User Manual](#)

Camileo (47 pages)

[Laptop Toshiba Tecra A10-S3553 Specifications](#)

Toshiba tecra a10-s3553: specifications (5 pages)

[Laptop Toshiba Tecra M10-S3401 Specifications](#)

Toshiba tecra m10-s3401: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Projector Toshiba TLP-S10 Specifications](#)

1,200 ansi-lumens 2.1 kg eco mode (2 pages)

Related Content for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10

[Satellite L635 Series Chapter 7 Hw Setup And Passwords](#)

[Toshiba Satellite L635 Series](#)

[Satellite C660 Series Chapter 7 Hw Setup](#)

[Toshiba Satellite C660 Series](#)

[Satellite Pro L450 Series Chapter 7 Hw Setup And Passwords](#)

[Toshiba Satellite Pro L450 Series](#)

[Satellite L650D Series Chapter 7 Hw Setup](#)

Toshiba Satellite L650D Series

[Satellite Pro A300D Series Chapter 7 Hw Setup And Passwords](#)

Toshiba Satellite Pro A300D Series

[Portege 2010 Hw Setup](#)

TOSHIBA Portege 2010

[Satellite A500 series Chapter 7 Hw Setup And Passwords](#)

Toshiba Satellite A500 series

[SATELLITE R850 Hw Setup](#)

Toshiba SATELLITE R850

This manual is also suitable for:

[Satellite pro s300-ez1511](#)[Satellite pro s300-ez1512](#)[Satellite pro s300-ez1514](#)[Satellite pro s300-ez2501](#)[Satellite pro s300-ez2502](#)[Satellite pro s300-ez2521](#) ... [Show all](#)