

Bridge Media Slot - Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10 User Manual

Vizio mouse user manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

 
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118

119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168

169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218

219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



Removing a Smart Card

To remove a Smart Card, follow the steps as detailed below:

1. Open the Safely Remove Hardware icon on the Windows Taskbar.

Before removing the Smart Card, confirm that the Smart Card is not working with any program or system.

Be careful not to bend the Smart Card while removing it from the computer.



2. Point to Smart Card and click the left Touch Pad control button.

3. Grasp the Smart Card and remove it.

Bridge media slot

The computer is equipped with a Bridge media slot that can accommodate some kinds of memory media with various memory capacities so that you can easily transfer data from devices, such as digital cameras and Personal Digital Assistants.

Keep foreign objects out of the Bridge media slot. Never allow metal objects, such as screws, staples and paper clips, to enter the computer or Keyboard. Foreign metal objects can create a short circuit, which can cause computer damage and fire, possibly resulting in serious injury.

Memory Stick Duo is not compatible with the Bridge media slot. Do not insert Memory Stick Duo into the slot or you may not be able to remove it. Data may be lost or damaged if you use any memory media other than those supported.


User's Manual

TECRA A10/S10/M10/SatellitePro S300

Figure 3-4 Removing a Smart Card

Smart Card

3-19

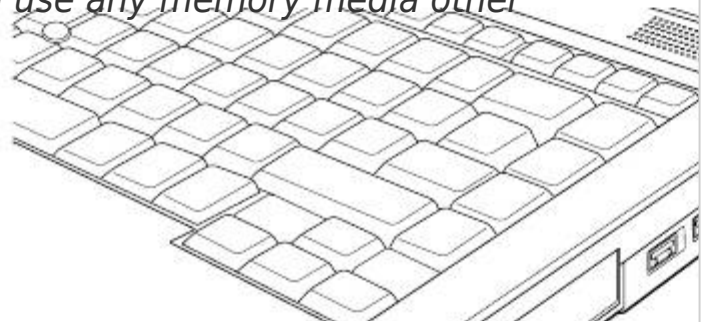

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
68
69
70
71
72
73
74
75

Quick Links:

[Hardware](#)

Chapters

[User's Manual 2](#)

[Memory Stick/Moving the Computer 239](#)

Related Manuals for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300

TECRA S10

[Laptop Toshiba TECRA M10 Maintenance Manual](#)

(475 pages)

[Laptop Toshiba Satellite Pro S300 Maintenance Manual](#)

(464 pages)

[Laptop Toshiba A10-S3501 User Manual](#)

A10-s3501 user's guide (252 pages)

[Laptop Toshiba M10-S3401 User Manual](#)

M10-s3401 user's guide (252 pages)

[Laptop Toshiba S300-EZ1511 User Manual](#)

S300-ez1511 user's guide (251 pages)

[Laptop Toshiba S300 EZ1514 - Satellite Pro - Core 2 Duo 2.1 GHz User Manual](#)

Toshiba user's guide for satellite s300/s300m (windows vista) (242 pages)

[Laptop Toshiba Tecra M10-S1001 Resource Manual](#)

Toshiba tecra m10-s1001: reference guide (56 pages)

[Laptop Toshiba SATELLITEPRO S300 User Manual](#)

Toshiba laptop user manual (56 pages)

[Camcorder Toshiba S10 User Manual](#)

Camileo (47 pages)

[Laptop Toshiba Tecra A10-S3553 Specifications](#)

Toshiba tecra a10-s3553: specifications (5 pages)

[Laptop Toshiba Tecra M10-S3401 Specifications](#)

Toshiba tecra m10-s3401: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1511 Specifications](#)

Toshiba satellite pro s300-ez1511: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1512 Specifications](#)

Toshiba satellite pro s300-ez1512: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ1513 Specifications](#)

Toshiba satellite pro s300-ez1513: specifications (5 pages)

[Laptop Toshiba Satellite Pro S300-EZ2502 Specifications](#)

Toshiba satellite pro s300-ez2502: specifications (5 pages)

[Projector Toshiba TLP-S10 Specifications](#)

1,200 ansi-lumens 2.1 kg eco mode (2 pages)

Related Content for Toshiba TECRA A10/S10/M10/SATELLITEPRO S300 TECRA S10

[Satellite A665 Series Bridge Media Slot Troubleshooting](#)

Toshiba Satellite A665 Series

[NB100 Series Using The Bridge Media Adapter Slot](#)

Toshiba NB100 Series

[PORTEGE M400 Bridge Media Slot Troubleshooting](#)

Toshiba PORTEGE M400

[Satellite L670D Bridge Media Slot Troubleshooting](#)

Toshiba Satellite L670D

[Satellite SERIES Bridge Media Slot Troubleshooting](#)

Toshiba Satellite SERIES

[Satellite A500 series Bridge Media Slot](#)

Toshiba Satellite A500 series

[Satellite A205 Series Using The Bridge Media Adapter Slot](#)

Toshiba Satellite A205 Series

[M645-S4080 Bridge Media Slot Troubleshooting](#)

Toshiba M645-S4080

This manual is also suitable for:

[Satellite pro s300-ez1511](#)[Satellite pro s300-ez1512](#)[Satellite pro s300-ez1514](#)[Satellite pro s300-ez2501](#)[Satellite pro s300-ez2502](#)[Satellite pro s300-ez2521](#) ... [Show all](#)