

Whirlpool VS1405 User Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18


19
20
21
22
23
24
25
26
27
28

•

Bookmarks

[Download this manual](#)

Quick Links

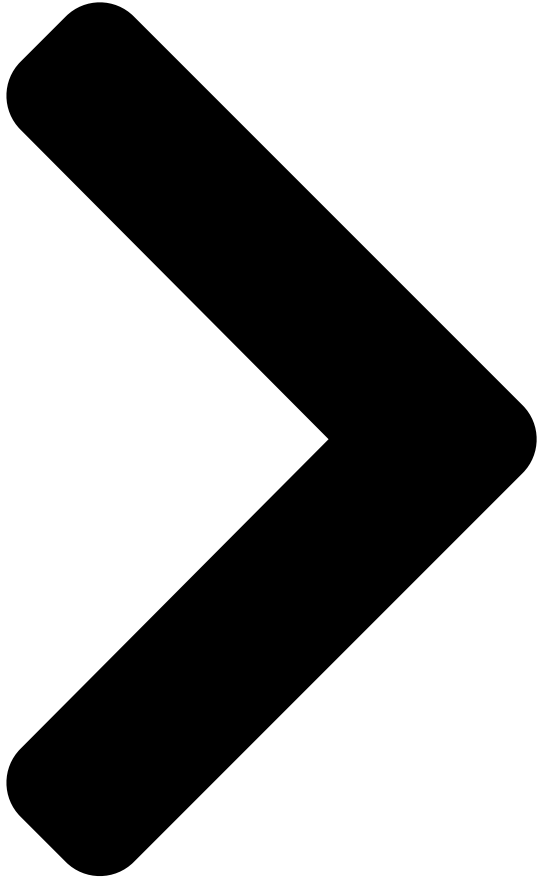

VS1405



Table of Contents

[Next Page](#)

1
2
3
4
5

... ..

Page 11

Page 12 2)

Page 13

Page 14 VS1405 VACUUM CLEANER User Manual...

Page 15: Safety Precautions

SAFETY PRECAUTIONS When using an electrical appliance, basic precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE
WARNING : To reduce the risk of fire, electric shock, or injury: 1. Do not pick up detergent, kerosene, blizzard, needle, ash, wet dust, dirty water and match, etc.

Page 16 19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Page 17: Parts Name

PARTS NAME 1.ON/OFF button 2. Button to release the handle 3. Button to release the handy vacuum cleaner 4. On/off button on handy vacuum cleaner 5. Button to release the dust clip (indicator) 6. Button to release the brush 7. Electrical Rolling Brush 8.

Page 18 TO USE 1 ASSEMBLING VACUUM CLEANER • Handheld vacuum cleaner and stick body connection Stick body Handy Vacuum Cleaner Button to release the handy vacuum cleaner Air inlet • Brush and body connection Stick body Button to release Hole to connect the brush with brush Connector of brush...

Page 19 • Handle bending and locking Button to release the handle • Handheld vacuum cleaner and 3-in-1 accessories connection Crevice nozzle Sofa brush...

Page 20 • 3-in-1 accessories connection Small brush Sofa brush 3 in 1 accessories Holder for accessories...

Page 21 2 ASSEMBLING CHARGING BODY • Assembly for the charging body • Connection between vacuum cleaner and charging body. Put the vacuum cleaner to the charging base after use. Don't leave it at the corner, avoid injury from falling down. The vacuum cleaner will stop working automatically if you put it to the charging base when the on/off button is "on".

Page 22 OPERATION FOR VACUUM CLEANER • Take the vacuum cleaner from charging base, push the on/off button to start and stop. The indicator On/off button turns light after start. • When use handy vacuum cleaner separately, push On/off button on/off button to start, and the indicator light is on; push it again, the vacuum cleaner stops working and Indicator the indicator light is off.

Page 23 OPERATION OF ELECTRICAL BRUSH • Works on short-haired carpet, hard floor or floor tile with electrical brush. Attention: It is not suggested to use on carpet. if it operates on

carpet for a long time, the roller brush will stop for protection purpose, it is normal case.

[Page 24: Cleaning And Maintenance](#)

CHARGING OF VACUUM CLEANER • Assemble the handy vacuum cleaner into the stick body, put back to charging base before charging. Connect the charger on socket, the indicator turns "red", it means that it is under charging. After charging 6-8 hours, the indicator turns from "red"...

[Page 25](#) (2) Hold the dust cup as shown in the right picture, so the dust will not drop onto the floor. Dust cup (3) Turn the cyclone cover as shown in the right picture, and clean the cyclone cone. Filter assembly (4) Take out the HEPA filter, and clean it.

[Page 26: Specifications](#)

Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the rating plate of the appliance. SPECIFICATIONS Model VS1405 Rated Voltage & Input Voltage: 100-240V~ 50/60Hz Rated Frequency Output Voltage: 14.4V dc...