



Whirlpool 3LG57OIXP Use & Care Manual

Automatic dryers

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	

--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links




AUTOMATIC DRYERS

Gas Model
3LG57OIXP

\ -93

aYe Ovens.
Trash Compactors.
Room Air
Condihoners.
Dehumidifiers,
Automatic
Washers.
Clothes
Dryers.
Freezers.
Refrigerator-Freezer

use & care guide

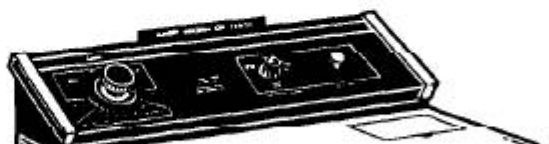

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 3LG570IXP

[Whirlpool 3LG5701XP Installation Instructions](#)

(5 pages)

[Dryer Whirlpool 3LE5700XK Use And Care Manual](#)

Whirlpool dryer use & care guide 3le5700xk, 3lg5701xk (9 pages)

[Dryer Whirlpool 3LG5706XP Use And Care Manual](#)

Automatic dryers (12 pages)

[Dryer Whirlpool 3LG5706XP Installation Instructions](#)

(5 pages)

[Dryer Whirlpool 3LER5436EQ0 Use & Care Manual](#)

Electric and gas timed dryers (32 pages)

[Dryer Whirlpool 3LCED9100WQ0 Installation Instructions Manual](#)

Commercial he dryer (48 pages)

[Dryer Whirlpool 3LCGD9100 Installation Instructions Manual](#)

Semi-pro he dryer original instructions (60 pages)

[Dryer Whirlpool 3LWED4900YW Manual](#)

(30 pages)

[Dryer Whirlpool 3LWED4800YQ Use And Care Manual](#)

Electric or gas dryer (52 pages)

[Dryer Whirlpool 3LWED5500 Installation Instructions Manual](#)

Electric or gas dryer (72 pages)

[Dryer Whirlpool 3LWED5500 Use And Care Manual](#)

(48 pages)

[Dryer Whirlpool 3LWED4705FW Use And Care Manual](#)

Electric or gas dryer (14 pages)

[Dryer Whirlpool 3LWED4705FW Use And Care Manual](#)

Electric or gas dryer (80 pages)

[Dryer Whirlpool 3LWED4830FW Installation Instructions Manual](#)

737 mm (29 inch) wide models - gas & electric (19 pages)

[Dryer Whirlpool 4KWED4915 Use And Care Manual](#)

Electric or gas dryer (76 pages)

[Dryer Whirlpool Atlantis 3LWED4815FW Installation Instructions Manual](#)

Dryer 737 mm 29" wide - gas & electric (132 pages)

Summary of Contents for Whirlpool 3LG570IXP

[Page 1](#) AUTOMATIC DRYERS Gas Model 3LG570IXP \ -93 Condihoners. aYe Ovens. Trash Compactors. Room Air Dehumldflers, Automatic Washers. Clothes Oryers. Freezers. Refrigerator-Freezer...

[Page 2: Table Of Contents](#)

STARTING YOUR DRYER..Dryer Cycles and Settings .. Cool Down Times ... DRYING TIPS..FLUFF AIR Setting TUMBLE PRESF Setting ... Mixed Loads Drying Times..01985 Whirlpool CENTER Remove the Con- START BUTTON sumer Buy Guide before using LINT SCREEN your dryer.

[Page 3: Your Responsibilities](#)

Your Responsibilities Read this "Use and Care Guide" your "Dryer Guide" carefully important use and safety information. You are personally responsible making sure that your dryer... is installed by a qualified installer. is properly maintained. is installed in an area protected from the weather.

[Page 4: Selecting A Cycle And Starting Your Dryer](#)

TYPE OF LOAD COTTONS - LINENS EXTRA HEAVY - Bedspreads, mattress pads, quilts. HEAVYWEIGHT FABRICS - Towels, jeans, corduroys, work clothes MEDIUMWEIGHT COTTONS - Sheets, pillowcases, cotton underwear, diapers LIGHTWEIGHT COTTONS - Batistes. oraandies. linaerie PERMANENT PRESS, SYNTHETICS AND BLENDS HEAVYWEIGHT FABRICS -Work clothes, jackets,...

[Page 5](#) Select a 1. CYCLE Turn the Control Knob either way to point to the cycle and setting want See page 6 for Information the cycles. Push the 3. ST,4RT Button The dryer will start tumbling when you push the START Button The Cycle Control Knob should...

[Page 6: Dryer Cycles And Settings](#)

Operating instructions Dryer cycles and settings The PERMANENT PRESS Cycle helps provide the special care that perma- nent press and synthetic fabrics need...a period of heated drying followed by a 10 minute cool down. The chart on page 4 suggests time and temperature settings...

[Page 7: Drying Tips](#)

Drying tips The dryer does not heat when the Temperature Selector is set on FLUFF AIR. This setting can be used to fluff bedding, plastic tablecloths, foam rubber pillows, stuffed toys, sneakers, etc. Turn the Temperature Selector FLUFF AIR. Turn the Control Knob to the number of minutes you want in the...

[Page 8: Lint Screen](#)

Lint screen Clean the lint screen before each increase drying time and may be a FIRE HAZARD. Open the lid and pull the lint screen straight out. Lint removal Lint can gather inside the dryer and create should be removed every 2 to 3 years, dryer...

[Page 9: Caring For Your Dryer](#)

Caring for your dryer Remove sharp objects from clothing before drying - pins, buckles, etc. Close metal zippers. Wipe off all spills with a damp,soft cloth. Spills allowed to remain dull or damage the finish. Non-colorfast items can stain the drum.

[Page 10: Assistance](#)

If you need service or assistance, we suggest you follow these steps: Before calling assistance.. Performance problems often result from little things you can find and fix yourself without tools of any kind. DRYER DOES NOT RUN: Is power supply cord plugged Is door closed...

[Page 11](#) Remember...Your service representative is trained in the repairing servicing of your WHIRLPOOL appliances He can help you maintain the quality originally built into your WHIRLPOOL appliance. So why not take the time, now, to look up his...

[Page 12: 01985 Whirlpool Corporation](#)

Whirlpool Making your world a little easier Part No. 696202 0 1985 Whirlpool Corporation natlc Washers, Clothes Dryers. Freezers, Refrigerator-Freezers. Home A /Appliances Printed in U.S.A. Ice Makers, Chshwashers, Built-In Ovens and Surlace Units, Ranges.

This manual is also suitable for:

3lg5701xp