



# Whirlpool LE5320XT, LE5530XS, LE5600XS, LE5650XM, LE5700XS, E5705XP, LE6055XS, LG5321XT, LG5531XS, LG5601XS, LG5651XM, LG5701XS, LG5706XP, Use And Care Manual

Large capacity automatic dryers



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16



•

[Table of Contents](#)

•

## Bookmarks

## Quick Links

[1 Table of Contents](#)

[2 Operating Instructions](#)

[3 Starting Your Dryer](#)

[4 Cleaning the Dryer](#)

[5 If You Need Service or Assistance](#)

[Download this manual](#)





# Use & Care Guide



Cycle control knob

Temperature selector

Start button

## LARGECAPACITYAUTOMATICDRYERS

LE5320XT LE5530XS LE5600XS LE5650XM LE5700XS

LE5705XP LE6055XS LG5321XT LG5531XS LG5601XS

LG5651XM LG5701XS LG5706XP LG6056XS

Cycle control knob

Temperature selector

# Use & Care Guide

## Table of Contents

[Next Page](#)

1  
2  
3  
4  
5

Related Manuals for Whirlpool LE5320XT, LE5530XS, LE5600XS,  
LE5650XM, LE5700XS, E5705XP, LE6055XS, LG5321XT, LG5531XS,  
LG5601XS, LG5651XM, LG5701XS, LG5706XP,

[Dryer Whirlpool LE5320XT Use And Care Manual](#)

Large capacity automatic dryers (12 pages)

[Ranges Whirlpool Gas Range User Manual](#)

(48 pages)

[Dryer Whirlpool GAS DRYER Installation Instructions Manual](#)

Gas dryer/canadian electric dryer (44 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

(44 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

(40 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

(36 pages)

[Ranges Whirlpool GAS RANGE Use & Care Manual](#)

(36 pages)

[Ranges WHIRLPOOL GAS RANGE Use & Care Manual](#)

Gas range (36 pages)

[Ranges Whirlpool ELECTRIC RANGE User Instructions](#)

Electric range (32 pages)

[Dryer Whirlpool Commercial Dryer Installation Instructions Manual](#)

Commercial dryer gas (120-volt, 60-hz) or electric (120/240-volt, 60-hz) (28 pages)

[Refrigerator Whirlpool Freezer Refrigerator Use And Care Manual](#)

22' to 25' no-frost top freezer refrigerator (24 pages)

[Dryer Whirlpool Electric Dryer Use And Care Manual](#)

Electric and gas dryers (23 pages)

[Ranges Whirlpool Electric Range User Manual](#)

Electric range aqualift self-cleaning technology (20 pages)

[Cooktop Whirlpool ELECTRIC COOKTOP Installation Instructions Manual](#)

Electric cooktop (12 pages)

[Dryer Whirlpool Electric Dryer Installation Instructions Manual](#)

Electric dryer (7 pages)

[Dryer Whirlpool Electric dryer Installation Instructions](#)

(5 pages)

Summary of Contents for Whirlpool LE5320XT, LE5530XS,  
LE5600XS, LE5650XM, LE5700XS, E5705XP, LE6055XS,  
LG5321XT, LG5531XS, LG5601XS, LG5651XM, LG5701XS,

# LG5706XP,

[Page 1](#) Use & Care Guide Cycle control knob Temperature selector Start button  
LARGE CAPACITY AUTOMATIC DRYERS LE5320XT LE5530XS LE5600XS LE5650XM LE5700XS  
LE5705XP LE6055XS LG5321XT LG5531XS LG5601XS LG5651XM LG5701XS LG5706XP  
LG6056XS...

## [Page 2: Table Of Contents](#)

You should wipe out the dryer drum with a damp cloth before using to remove dust from storing or shipping. Thank you for buying a Whirlpool appliance. Please complete and mail the Owner Registration Card provided with this product.

## [Page 3: Additional Safety Instructions](#)

Important Safety Instructions To reduce the risk of fire, electrical shock, or injury to persons when using your dryer, follow basic precautions. Read all instructions before using the dryer. NEVER dry items cleaned, washed, soaked in or spotted with wax, paint, gasoline or flammable fluids in the FIRE dryer.

## [Page 4: Operating Instructions](#)

Operating instructions Starting your dryer Be sure to refer to the chart below and the Dryer Guide for Proper sorting, loading and control setting information before starting your dryer. NOTE: Do not overdry. Overdrying can cause shrinkage, some fabrics. TYPE OF LOAD Cottons and linens EXTRA HEAVY-Bedsprads.

[Page 5](#) Select a cycle by turning the Cycle Control Knob either way. Stop when the indicator on the knob's outer ring points to the cycle and time you want. See pages 6-9 for further cycle information. 2. Set the Temperature Selector the desired temperature setting.

## [Page 6: The Regular Cycles](#)

Operating Instructions Continued Mom drying Urns L#r drying time The regular cycles The names of the regular cycles describe the types of loads they are designed to dry. Each cycle is followed 5 minute cool-down period. During the cool down, the load tumbles without heat.

## [Page 7: The Permanent Press Cycle](#)

PERMANENT PRESS The PERMANENT PRESS cycle helps provide the special care that permanent press and synthetic fabrics need. The cycle consists of a timed period of heated drying and a 10 minute cool-down period. During the cool down, the load tumbles without heat.

## [Page 8: Using Tumble Press](#)

Operating Instructions Continued All models (except LE5650XM, LG5651XM, LE5705XP, LG5706XP) Using TUMBLE PRESS The TUMBLE PRESS setting removes wrinkles from clothing that has been packed in a suitcase or closet, and from items not removed from the dryer at the end of a cycle. 1.

## [Page 9: Using Damp Dry](#)

models (except LESSOXW, LG5651XY, LE5705XP, LG5706XP) Model LE5650XM, LG5651XM, LE5705XP, LG5706XP Using UAMPDRY Use this setting to dry damp items that do not require an entire drying cycle, or to dry items to damp level. (Two examples are heavy cottons, such as jeans, which you do not want to...

## [Page 10: Cleaning The Lint Screen](#)

Caring For Your Dryer Product and Fabric Damage Hazard Do not run the dryer with the lint screen loose, damaged, blocked or missing. Doing so can cause overheating and damage to both the dryer and fabrics. Cleaning the lint screen The lint screen is located under a lid Clean it before on top of the dryer.

## [Page 11: Cleaning The Dryer](#)

Cleaning the dryer Electrical Shock and Personal Injury Hazard Turn off the electrical power before cleaning the interior. Make sure the dryer is cool. Failure to do so could result in

electrical shock or injury. Fire Hazard Use non-flammable cleaner. Failure to do so could result in an explosion.

### [Page 12: Lint Removal](#)

Caution For Your Dryer Continued Electric dryer with back panel removed Fuel Gas dryer with lower front access panel removed Lint removal Lint can gather inside the dryer and be a fuel for fire. It is recommended lint be removed every 2 to 3 years, or more often, depending on dryer usage.

[Page 13](#) To move the dryer to a new location, follow these steps: 1. Unplug the power supply cord or turn off the electrical service to the dryer. 2. Open the lint screen door. Remove the two screws in the lint screen area. 3. Open the top by pulling forward and up at each front corner (see view A). Rest the raised top against the wall behind the dryer (top 4).

### [Page 14: If You Need Service Or Assistance](#)

United States. To locate the authorized Whirlpool service company in your area, call our Consumer Assistance Center telephone number (see Step 2) or look in your telephone directory Yellow Pages...

[Page 15](#) If you need FSP replacement parts... FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. Replacement parts will fit right and work...

### [Page 16: Warranty](#)

C. Pickup and delivery. This product is designed to be repaired in the home. Damage to dryer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool. Limited repairs to parts or systems caused by unauthorized modifications to the appliance.

This manual is also suitable for:

[Lg5601xsLg5651xmLg5706xpLg5701xsLg6056xsLe5705xp](#) ... [Show all](#)