



Whirlpool LE6150XS Use And Care Manual

Customized series large capacity automatic dryers

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16



•

[Table of Contents](#)

•

Bookmarks

[Download this manual](#)

Quick Links



Use & Care Guide



Cycle control knob
and temperature
Start button
Lint screen
Dryer drum
loading door
Drum light
(not shown)

Use & Care Guide

CUSTOMIZED SERIES

LARGE CAPACITY AUTOMATIC DRYERS

LE6150XS LG6151XS



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool LE6150XS

[Dryer Whirlpool LE6100XS Use & Care Manual](#)

Customized series automatic dryers (16 pages)

[Dryer Whirlpool LE5320XT Use And Care Manual](#)

Large capacity automatic dryers (12 pages)

[Dryer Whirlpool LE5320XT, LE5530XS, LE5600XS, LE5650XM, LE5700XS, E5705XP, LE6055XS, LG5321XT, LG5531XS, LG5601XS, LG5651XM, LG5701XS, LG5706XP, Use And Care Manual](#)

Large capacity automatic dryers (16 pages)

[Dryer WHIRLPOOL LE6090XS Use & Care Manual](#)

Automatic dryers (12 pages)

[Dryer Whirlpool LE6090XT Use And Care Manual](#)

Large capacity automatic dryers (16 pages)

[Dryer Whirlpool LG6881XS Use And Care Manual](#)

Super capacity automatic dryers (16 pages)

[Dryer Whirlpool LE6098XS Use & Care Manual](#)

Automatic dryers (12 pages)

[Dryer Whirlpool LE6600XK Use And Care Manual](#)

Whirlpool front-load dryer use& care guide le6600xk, lg6601xk (8 pages)

[Dryer Whirlpool LG6606XP Use & Care Manual](#)

Estate series automatic dryers (12 pages)

[Dryer Whirlpool LE6600XS Use & Care Manual](#)

Estate series automatic dryers (12 pages)

[Dryer Whirlpool LE6660XP Use & Care Manual](#)

Estate series automatic dryers (17 pages)

[Dryer Whirlpool LE6800XS Use & Care Manual](#)

Automatic dryers (12 pages)

[Dryer Whirlpool LE6880XS Use & Care Manual](#)

Whirlpool use & care guide automatic dryers le6880xs (12 pages)

[Dryer Whirlpool LE6098XT Use & Care Manual](#)

Super capacity automatic dryers (16 pages)

[Dryer Whirlpool LE6055XSWO Parts List](#)

Whirlpool le6055xswo electric dryer parts list (9 pages)

[Dryer Whirlpool LG6811XS Use & Care Manual](#)

Automatic dryers (12 pages)

Summary of Contents for Whirlpool LE6150XS

[Page 1](#) Use & Care Guide Cycle control knob and temDerature CUSTOMIZED SERIES LARGE CAPACITY AUTOMATIC DRYERS LE6150XS LG6151XS Start button Lint screen Dryer drum ading door Drum light (not shown)

[Page 2: Table Of Contents](#)

You should wipe out the dryer drum with a damp cloth before using to remove dust from storing or shipping. Page Thank you for buying a Whirlpool appliance..3 Please complete and tration

Card provided with this product. Then complete the form below.

[Page 3: Important Safety Instructions](#)

Important Safety Instructions To reduce the risk of fire, electrical shock, or injury to persons when using your dryer, follow basic precautions, Read all instructions before using the dryer. NEVER dry items cleaned, washed, soaked in or spotted with wax, paint, gasoline or flammable fluids in the dryer.

[Page 4: Operating Instructions](#)

Operating Instructions Starting your dryer Be sure to refer to the chart below and the Dryer Guide for proper sorting, loading and control setting information before starting your dryer. NOTE: Do not overdry. Overdrying can cause shrinkage, static cling, and damage some fabrics. TYFEOFLOAD cottonsand- MTRAHEAVY-Be&qw&~...

[Page 5](#) 1. Select a cycle by turning the Cycle Control Knob either way. Stop when the indicator on the knob's outer ring points to the cycle and setting you want. See pages 6-7 for further cycle information. 2. Push the Start Button to start the dryer.

[Page 6: The Automatic Cycles](#)

Operating instructions Continued The automatic cycles The automatic cycles allow you to select the degree of dryness you prefer for the clothes being dried. The automatic DRY-MISER® control is a thermostat that senses the dryer air temperature. The dryer automatically shuts off when the selected dryness is reached.

[Page 7: Timed Drying](#)

TIMED DRYING Use the TIMED DRYING cycle for any load you want to dry by time. This cycle is designed for small loads, large bulky items or items to be fluffed or dusted. Turn the Cycle Control Knob to the number of minutes you want from 10 to 70.

[Page 8: Additional Dryer Features](#)

Additional Dryer Features '5' 'V' system Gentle Heat For better fabric care, the Gentle Heat system helps prevent overdrying. Drying temperatures are automatically reduced to a lower heat setting during the last few minutes of drying. Gentle Heat is followed by a cool-down period in all cycles to make your clothes easier to handle.

[Page 9: Caring For Your Dryer](#)

Caring For Your Dryer Do not run the dryer with the lint screen loose, damaged, blocked or missing. Doing so can cause overheating and damage to both the dryer and fabrics. Product and Fabric Damage Hazard Cleaning the lint screen The lint screen is located under a lid on top of the dryer.

[Page 10: Cleaning The Dryer](#)

For Your Dryer Caring Continued Cleaning the dryer Electrical Shock and Personal injury Hazard Turn off the electrical power before cleaning the interior. Make sure the dryer is cool. Failure to do so could result in electrical shock or injury. Fire Hazard non-flammable cleaner.

[Page 11: Lint Removal](#)

Heat etemont temtlnDr Eketttdryuwthbeckpmelremovad Gas dryer with lower front access panel removed Lint removal Lint can gather inside the dryer and be a fuel for fire. It is recommended the lint be removed every 2 to 3 years, or more often, depending on dryer usage.

[Page 12](#) Caring For Your Dryer Continued Remove screws before opening top View D If your dryer is gas and has a full front panel, remove front panel as follows: 1. Unplug the power supply cord or turn off the electrical power. Open lint screen lid. Remove two screws in lint screen area. 3.

[Page 13: Changing The Drum Light](#)

5. Replace the light bulb cover and lock in place by turning counterclockwise. 6. Reconnect power supply. Whirlpool offers you: Easy to read Control panel instructions. NOTE: The control

panel also includes Braille labels. aEasy to read Use and literature.

[Page 14: If You Need Service Or Assistance](#)

Is the exhaust duct or outside exhaust hood clogged? Clean if needed. See the Dryer Guide. 2. If you need assistance*... Call Whirlpool Consumer Assistance Center telephone number. Dial free from anywhere in the U.S.: and talk with one of our trained consultants.

[Page 15](#) Whirlpool appliance. To locate FSP replacement parts in your area, refer to Step 3 or call the Whirlpool Consumer Assistance Center number in Step 2. 5.If you are not satisfied with how the problem was solved*...

[Page 16: Whirlpool Automatic Dryer Warranty](#)

Whirlpool. E. Repairs to parts or systems caused by unauthorized modifications made to the appliance. WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you.

This manual is also suitable for:

[Lg6151xs](#)