



Whirlpool W10189310B Use & Care Manual

240-volt electric dryer

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20

--	--

•

-

Troubleshooting

•

Bookmarks

--

Quick Links

[1 Tools and Parts](#)

[2 Electrical Connection](#)

[3 Starting Your Dryer](#)

[4 Troubleshooting](#)

[Download this manual](#)



®

240-VOLT ELECTRIC DRYER

Use & Care Guide

For questions about features, operation/performance,
parts, accessories or service, call: 1-800-253-1301.
or visit our website at...www.whirlpool.com

Table of Contents 2

W10189310B



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool W10189310B

[Dryer Whirlpool 8565592B Use And Care Manual](#)

240-volt electric dryer (20 pages)

[Dryer Whirlpool W10100920C Specifications](#)

Dryer venting (8 pages)

[Dryer Whirlpool WED5500XW Instruction Manual](#)

Cabrio® high efficiency electric dryer with accudry™ drying system ventilation specification (8 pages)

[Dryer Whirlpool WED7500VW Installation Instructions](#)

Compact electric dryer with 11 cycles (2 pages)

[Dryer Whirlpool WED7500V Dimensions And Installation Information](#)

Whirlpool electric dryer specification sheet (1 page)

[Dryer Whirlpool W10184582A Installation Instructions Manual](#)

Commercial dryer – gas or electric (36 pages)

[Dryer Whirlpool W10184516A Installation Instructions Manual](#)

Commercial dryer – gas or electric (52 pages)

[Dryer Whirlpool W10184517ASP Installation Instructions Manual](#)

Commercial dryer – gas or electric (40 pages)

[Dryer Whirlpool Duet W10182361A Use And Care Manual](#)

Electronic electric dryer (28 pages)

[Dryer Whirlpool W10184516C Installation Instructions Manual](#)

Commercial dryer – gas or electric (52 pages)

[Dryer Whirlpool W10184516D Installation Instructions Manual](#)

Commercial dryer gas or electric (64 pages)

[Dryer Whirlpool W10184585B Installation Instructions Manual](#)

Commercial stacked dryer gas (120-volt, 60-hz) or electric (120/140-volt; 60-hz) (48 pages)

[Dryer Whirlpool W10150610A User Instructions](#)

Whirlpool dryer user instructions (8 pages)

[Dryer Whirlpool W10136970C Use & Care Manual](#)

Electronic gas dryer (52 pages)

[Dryer Whirlpool Cabrio W10151492A Use & Care Manual](#)

Fabric care system electric dryer (48 pages)

[Dryer Whirlpool Cabrio W10164159B Use & Care Manual](#)

Steam fabric care system electric dryer (56 pages)

Summary of Contents for Whirlpool W10189310B

[Page 1](#) ® 240-VOLT ELECTRIC DRYER Use & Care Guide For questions about features, operation/performance, parts, accessories or service, call: 1-800-253-1301. or visit our website at...www.whirlpool.com Table of Contents ... 2 W10189310B...

[Page 2: Table Of Contents](#)

DRYER SAFETY...3 INSTALLATION REQUIREMENTS ...4 Tools and Parts ...4 Options ...4 Location Requirements ...4 Electrical Requirements ...6 Venting Requirements...7 INSTALLATION INSTRUCTIONS ...8 Electrical Connection ...8 Plan Vent System ...11 Install Vent System...12

[Page 3: Dryer Safety](#)

Your safety and the safety of others are very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "DANGER"...

[Page 4: Installation Requirements](#)

Stack Kit W10178021, which fits Whirlpool washer models starting with WFC. If you have a Whirlpool washer model starting with LHW, use Stack Kit 8182452. If you have any other washer model, call the dealer from whom you purchased your dryer or refer to the "Assistance or Service"...

[Page 5](#) Installation Clearances The location must be large enough to allow the dryer door to open fully. Dryer Dimensions 39" 23 ¼" (99.1 cm) (60.3 cm) 23 " (59.37 cm) *Most installations require a minimum 5½" (14.0 cm) clearance behind the dryer for the exhaust vent with elbows. See "Venting Requirements."...

[Page 6: Electrical Requirements](#)

It is your responsibility To contact a qualified electrical installer. To be sure that the electrical connection is adequate and in conformance with the National Electrical Code, ANSI/NFPA 70- latest edition and all local codes and ordinances. The National Electric Code requires a 4-wire supply connection for homes built after 1996, dryer circuits involved in remodeling after 1996 and all mobile home installations.

[Page 7: Venting Requirements](#)

WARNING Fire Hazard Use a heavy metal vent. Do not use a plastic vent. Do not use a metal foil vent. Failure to follow these instructions can result in death or fire. WARNING: To reduce the risk of fire, this dryer MUST BE EXHAUSTED OUTDOORS.

[Page 8: Installation Instructions](#)

INSTALLATION INSTRUCTIONS Power Supply Cord WARNING Fire Hazard Use a new UL listed 30 amp power supply cord. Use a UL listed strain relief. Disconnect power before making electrical connections. Connect neutral wire (white or center wire) to center terminal (silver). Ground wire (green or bare wire) must be connected to green ground connector.

[Page 9](#) 6. Replace strain relief (with power cord inserted) back into the terminal block cover. Do not tighten strain relief nut. A. Terminal block cover B. Strain relief C. Strain relief nut D. Power cord 7. Now complete installation following instructions for your type of electrical connection: 4-wire (recommended) 3-wire (if 4-wire is not available)

[Page 10](#) When connecting to the terminal block, place the hooked end of the wire under the screw of the terminal block (hook facing right), squeeze hooked end together and tighten screw. See example below. 1. Locate the neutral ground wire inside the dryer cabinet, behind the external ground conductor screw.

[Page 11: Plan Vent System](#)

1. Loosen or remove center terminal block screw. 2. Place the hooked end of the neutral wire (white or center wire) of power supply cable under the center screw of terminal block (hook facing right). Squeeze hooked end together. Tighten screw. A.

[Page 12: Install Vent System](#)

Determine vent path Select the route that will provide the straightest and most direct path outdoors. Plan the installation to use the fewest number of elbows and turns. When using elbows or making turns, allow as much room as possible. Bend vent gradually to avoid kinking.

[Page 13: Level Dryer](#)

Level Dryer Check the levelness of the dryer. Check levelness first side to side, then front to

back. If the dryer is not level, prop up the dryer using a wood block. Use a wrench to adjust the legs up or down and check again for levelness.

[Page 14: Dryer Use](#)

WARNING Explosion Hazard Keep flammable materials and vapors, such as gasoline, away from dryer. Do not dry anything that has ever had anything flammable on it (even after washing). Failure to follow these instructions can result in death, explosion, or fire. **WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance.

[Page 15: Controls](#)

Controls The control panel is simple to understand and easy to operate. The illustrations below define the knobs and buttons, and the paragraphs define the purpose of each. **Power** This button switches the power to the machine on and off. The indicator light will glow to indicate the power is on.

[Page 16: Dryer Care](#)

See following table for recommended cycles and temperature settings. **Fabric Type Cycle**
REGULAR Heavy cottons and denims Extra Dry Cottons and linens Normal **SYNTHETICS** White and colorfast Normal permanent press White and colorfast items Iron Dry that require ironing Polyester/acrylic blends, Damp Dry rayon, acetate Washable silk and nylon...

[Page 17: Cleaning The Dryer Interior](#)

IMPORTANT: Do not run the dryer with the lint screen loose, damaged, blocked or missing. Doing so can cause overheating and damage to both the dryer and fabrics. As needed cleaning Laundry detergent and fabric softener residue can build up on the lint screen.

[Page 18: Troubleshooting](#)

First try the solutions suggested here and possibly avoid the cost of a service call... **Dryer Operation** Dryer will not run Has a household fuse blown, or has a circuit breaker tripped? There may be 2 fuses or circuit breakers for the dryer. Make sure both fuses are intact and tight, or that both circuit breakers have not tripped.

[Page 19: Assistance Or Service](#)

To locate the Whirlpool designated service company in your area, you can also look in your telephone directory Yellow Pages. For further assistance If you need further assistance, you can write to Whirlpool Corporation with any questions or concerns at: Whirlpool Brand Home Appliances Customer eXperience Center...

[Page 20: Warranty](#)

If you need service, first see the "Troubleshooting" section of the Use & Care Guide. After checking "Troubleshooting," additional help can be found by checking the "Assistance or Service" section or by calling Whirlpool. In the U.S.A., call 1-800-253-1301. In Canada, call 1-800-807-6777.

This manual is also suitable for:

wed7500vwWed7500