



Whirlpool 400 Series Use And Care Manual

Whirlpool dishwasher model series 400, 800, 810, 840 use and care guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

•

-

Troubleshooting

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Use and Care Manual](#)



UseAndCare

I

A Note for You	2
Dishwasher Safety	3
Parts and Features	4
Starting Your Dishwasher	6
Loading Your Dishwasher	7
Using the Dispensers	10
Setting the Controls	12
Selecting a wash cycle	12



HOW TO MAKE A HOME RUN™

Use And Care

[Selecting cycle options](#) 13
[Changing a cycle setting](#).. 14
[Adding an item during a cycle](#) 14
[Washing Special Items](#) 15
[Connecting a Portable Dishwasher](#).. 16
[Caring for Your Dishwasher](#) . . 18
[Saving Energy](#) 20
[Solving Common Dishwashing Problems](#).. 21
[Troubleshooting](#).. 24
[Requesting Assistance or Service](#).. 25
[Index](#) 27
[Warranty](#) 28



HOW TO MAKE A HOME RUN.™

Use And Care

GUIDE

1-800-253-1301

Call our Consumer Assistance Center with questions or comments.

DISHWASHER MODEL SERIES

400,800,810,840

ryqq

A Note to You
Dishwasher Safety
Parts and Features
Starting Your Dishwasher

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 400 Series

[Dishwasher Whirlpool SERIES 400, SERIES 800, SERIES 806, SERIES 810, SERIES 840 Use And Care Manual](#)

(68 pages)

[Dishwasher WHIRLPOOL 400 series Use & Care Manual](#)

(40 pages)

[Dishwasher Whirlpool 800 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide series (40 pages)

[Dishwasher Whirlpool 400 Series Use & Care Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool DU805DWGB1 Use & Care Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool 806 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide (31 pages)

[Dishwasher Whirlpool DP840CWDB3 Use And Care Manual](#)

(27 pages)

[Dishwasher Whirlpool 400 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide (27 pages)

[Dishwasher Whirlpool 810 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide (40 pages)

[Dishwasher WHIRLPOOL 8575989 Use And Care Manual](#)

(40 pages)

[Dishwasher Whirlpool DU850SWLQ0 Use & Care Manual](#)

(36 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Trash Compactor WHIRLPOOL 800 SERIES Use & Care Manual](#)

(16 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Dishwasher Whirlpool 400011511936 Daily Reference Manual](#)

(8 pages)

[Dishwasher Whirlpool WSIP 4033 PFE Instructions For Use Manual](#)

(13 pages)

Summary of Contents for Whirlpool 400 Series

[Page 1: Table Of Contents](#)

Caring for Your Dishwasher . . 18 Saving Energy ..20 Solving Common Dishwashing Problems..21 Troubleshooting..24 Requesting Assistance or Service..25 Index ... 27 Warranty ... 28 1-800-253-1 301 Call our Consumer Assistance Center with questions or comments. 400,800,810,840 ryqq...

[Page 2: A Note Fo You](#)

Whirlpool@ Because your life is getting busier and more complicated, Whirlpool dishwashers are

easy to use, save time, and help you manage your home better. To ensure you enjoy years of trouble-free operation, we developed this Use and Care Guide. It contains valuable information about how to operate and maintain your appliance properly and safely.

[Page 3: Dishwasher Safety](#)

Dishwasher Your safety is important to us. This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the warning symbol. IMPORTANT SAFETY To reduce the risk of fire, electrical shock, or injury when using...

[Page 4: Parts And Features](#)

Parts and Features Your dishwasher is illustrated below with the parts and features called out. To help you find information on specific parts or features quickly, page references are included. Third level wash (on some models) (P. 9) Water inlet opening, Heating element Door latch...

[Page 5](#) Series 400 models Series 800 models Series 810 models Series 840 models Option selector Cycle selector buttons buttons Cycle control knob Option selector switch Option selector Cycle control knob switch Option selector Cyszcontrol knob switch Cyclcontrol knob...

[Page 6: Starting Your Dishwasher](#)

Starting Your Dishwasher This section tells you how to start or stop your dishwasher. Refer to it for quick reference. Starting a wash cycle 1. Load the dishwasher. See pages 7-9. 2. Spin the spray arm. It should turn freely. 3.

[Page 7: Loading Your Dishwasher](#)

Loading Your Dishwasher This section tells how to properly load your dishwasher for best washing and rinsing results. Preparing to load the dishwasher To save water and energy, do not rinse dishes before putting them into the dishwasher. Remove large pieces of food, bones, and other hard items.

[Page 8](#) Loading the bottom Load items with cooked-on or dried-on food in the bottom rack, with soiled surfaces facing inward to the spray. Mixed load Load plates, soup bowls, etc., between prongs and facing inward to the spray. Make sure pot handles and other items do not stop rotation of the spray arm.

[Page 9](#) Loading the top rack Load the top rack with cups, glasses, and smaller items. Do not cover the third level wash (on some models) when loading the top rack. Cup and glass load Load so open ends face down for cleaning and draining.

[Page 10: Using The Dispensers](#)

Using the Dispensers For best washing results, review the information below. It is important to use detergents and rinse agents properly. Using the detergent Use automatic dishwashing detergent only. Other detergents are too mild and much too sudsy. Add detergent just before starting cycle. Store tightly-closed detergent in a cool, dry place.

[Page 11](#) Using the rinse agent Keep the rinse agent dispenser filled with a liquid rinse agent. A rinse agent greatly improves dish drying by helping water flow off them during the last rinse. A rinse agent also keeps water from forming droplets and drying as spots or streaks. A small amount of rinse agent automatically releases into the rinse water during the final rinse of each cycle.

[Page 12: Setting The Controls](#)

For series 400,800, and 810 models: Turn Cycle control knob to desired cycle. For Series 840 models: Press a cycle pad, then turn the Cycle control knob to desired cycle. NORMAL WASH, LIGHT WASH, and RINSE & HOLD all share the same cycle pad.

[Page 13: Selecting Cycle Options](#)

NOTE: You must choose either AIR DRY or HEAT DRY for each wash cycle. Select AIR DRY when using the RINSE & HOLD cycle (series 800, 810, and 840 models). Series 840 Series 400,800, and 810 models models Series 840 Series 400,...

[Page 14: Changing A Cycle Setting](#)

Changing a cycle (on some models) You can change a cycle setting anytime during any cycle. 1. Lii up the door latch to stop the cycle. 2. Turn the Cycle control knob clockwise to the desired cycle. 3. Check the detergent dispensers. They must be filled properly for the new cycle.

[Page 15: Washing Special Items](#)

Washing Special Items If you have any doubts about washing a particular item, check with the manufacturer to see if it is dishwasher safe. MATERIAL DISHWASHER SAFE? Aluminum Bottles and Cans Cast Iron China/ Stoneware Crystal Gold Glass Hollow- Handle Knives Pewter Disposable...

[Page 16: Connecting A Portable Dishwasher](#)

Connecting Dishwasher NOTE: A special adapter must be installed on the faucet before the dishwasher can be connected. Complete instructions and the adapter are packed with your dishwasher. When moving your dishwasher make sure the door is latched. Hold the dishwasher at the top front corners.

[Page 17](#) &prong grounding Power supply cord 3.pronb grounding type wall receptacle Do not, under any circumstances, the power supply cord ground prqng. dishwasher is available at your Whirlpool dealer or authorized Whirlpool service company. Instructions are included with the kit. remove...

[Page 18: Caring For Your Dishwasher](#)

Caring for Your Dishwasher Your new dishwasher is designed to give you many years of dependable service. There are a few things you can do to maintain your dishwasher properly. This section tells you how to clean and care for your dishwasher. Refer to "Solution chart"...

[Page 19](#) Overfill Protector The Overfill Protector (in the front rfght corner of the dishwasher tub) keeps the dishwasher from overflowing. It must be in place for the dishwasher to operate. Check under the float for objects that may keep the protector from moving up or down. Cleaning the filter The filter system requires periodic cleaning...

[Page 20: Saving Energy](#)

Saving Energy Saving energy is important and helps you save money. This section gives you tips on the best ways to save energy with your dishwasher. Loading tips Wash full loads. Running a half-filled dishwasher uses the same amount of electricity and hot water as a fully loaded machine.

[Page 21: Solving Common](#)

Solving Common Dishwashing A convenient checklist for handling minor performance problems. Go over this list before calling for service. If you are unable to solve your dishwasher's problem, turn to page 25 for service information. Solution chart PROBLEM CAUSE Food soil left Improper loading on dishes Water temperature...

[Page 22](#) CAUSE PROBLEM Spotting and Incorrect amount filming of detergent (continued) Use of ineffective detergents Insufficient fill due to low water pressure Dishes do not Dishes do not drain dry completely properly Plastics Silica flm or Water chemical etching reaction with certain (silica film is a types of glassware - white iridescent...

[Page 23](#) PROBLEM CAUSE Brown stains High iron content in water supply on dishes and dishwasher interior Orange stains Large amounts of on dishwasher tomato based foods interior on dishes placed in the dishwasher Odor in the Dishes only washed dishwasher every two to three days Chipping of Improper loading...

[Page 24: Troubleshooting](#)

Troubleshooting Before calling for assistance please check the chart below for problems you can fix. It could save you the cost of a service call. Dishwasher problems PROBLEM CHECK THE FOLLOWING Is the door tightly closed and securely latched? Dishwasher does not run or stops Has the cycle been set correctly? See pages 5 and 12-l 3.

[Page 25: Requesting Assistance Or Service](#)

Whirlpool appliance. To locate FSP replacement parts in your area, refer to Step 2 or call the Whirlpool Consumer Assistance Center number in Step 1. 4. If you are not satisfied...

[Page 26: Index](#)

Index This index is alphabetical. Look for the word or phrase you are interested in, then look for the page number. TOPIC BOTTOM RACK ... 8 CLEANING Exterior..18 Interior ... 18 COMMON WASHING PROBLEMS Solving ... 21-23 CONNECTING A PORTABLE DISHWASHER ...

[Page 27: Warranty](#)

E. Repairs to parts or systems caused by unauthorized modifications made to the appliance. WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This manual is also suitable for:

[800 series](#)[810 series](#)[840 series](#)