



Whirlpool 400 Series Use And Care Manual

Whirlpool dishwasher use & care guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27

•

•

Bookmarks

| |
|--|
| |
|--|

Quick Links

[Download this manual](#) See also: [Use and Care Manual](#)



UseAndCare

| | |
|--|----|
| A Note to You | 2 |
| Dishwasher Safety | 3 |
| Parts and Features | 4 |
| Starting Your Dishwasher | 6 |
| Loading Your Dishwasher | 7 |
| Using the Dispensers | 10 |
| Setting the Controls | 12 |
| Selecting a wash cycle | 12 |
| Canceling a cycle | 13 |
| Selecting cycle options | 13 |



Use And Cai

| | |
|---|----|
| Changing a cycle setting.. | 14 |
| Adding an item during a cycle.. | 14 |
| Washing Special items | 15 |
| Connecting a Portable Dishwasher.. | 16 |
| Caring for Your Dishwasher | 18 |
| Saving Energy | 20 |
| Solving Common Dishwashing Problems.. | 21 |
| Troubleshooting | 24 |
| Requesting Assistance or Service | 25 |
| Index.. | 27 |
| Warranty | 28 |

1-800-253-1301

-I

Call our Consumer
 & Home Manager
 Customer
 with questions
 or comments.

DISHWASHER MODEL SERIES 400, 800, 810, 830, 840

PART NO. 3373757 Rev. A

3194



HOW TO MAKE A HOME BELT

Use And Care

G U I D E

A Note to You
Dishwasher Safety
Parts and Features
Starting Your Dish
Loading Your Dish
Using the Dispens
Setting the Control
Selecting a Wash



[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 400 Series

[Dishwasher Whirlpool SERIES 400, SERIES 800, SERIES 806, SERIES 810, SERIES 840 Use And Care Manual](#)

(68 pages)

[Dishwasher WHIRLPOOL 400 series Use & Care Manual](#)

(40 pages)

[Dishwasher Whirlpool 800 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide series (40 pages)

[Dishwasher Whirlpool 400 Series Use & Care Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool DU805DWGB1 Use & Care Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool 806 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide (31 pages)

[Dishwasher Whirlpool DP840CWDB3 Use And Care Manual](#)

(27 pages)

[Dishwasher Whirlpool 400 Series Use And Care Manual](#)

Whirlpool dishwasher model series 400, 800, 810, 840 use and care guide (27 pages)

[Oven Whirlpool AKZM 830 User And Maintenance Manual](#)

(71 pages)

[Dishwasher Whirlpool 810 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide (40 pages)

[Dishwasher WHIRLPOOL 8575989 Use And Care Manual](#)

(40 pages)

[Dishwasher Whirlpool DU850SWLQ0 Use & Care Manual](#)

(36 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Trash Compactor WHIRLPOOL 800 SERIES Use & Care Manual](#)

(16 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Dishwasher Whirlpool WSIP 4033 PFE Instructions For Use Manual](#)

(13 pages)

Summary of Contents for Whirlpool 400 Series

[Page 1: Table Of Contents](#)

UseAndCare DISHWASHER MODEL SERIES 400,800,810,830,840 PART NO. 3373757 Rev. A A
Note to You ... 2 Dishwasher Safety ... 3 Parts and Features ... 4 Starting Your Dishwasher ..6
Loading Your Dishwasher..7 Using the Dispensers ... 10 Setting the Controls ...

[Page 2: A Note To You](#)

Properly connect dishwasher to electricity, water, and drain.' See Installation Instructions for complete information. Whirlpool dishwashers Registration Card provided with your information. Model Number Serial Number Purchase Date Dealer Name Dealer Address Dealer Phone...

[Page 3: Dishwasher Safety](#)

Dishwasher Your safety is important to us. This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the warning symbol. IMPORTANT SAFETY Read all instructions...

[Page 4: Parts And Features](#)

Parts and Features Your dishwasher is illustrated below with the parts and features called out. To help you find information on specific parts or features quickly, page references are included. Third level wash Water inlet opening (P- 9) ; ; ; + I \$ > Heating element Door i&h'...

[Page 5](#) Series 400 models Series 800 models Series 8 10 models Series 830 models Selector button8 Series 840 models Cycle Selector Option Selector button8 button8 Cycle control knob Option selector switch Option selector Cycle control knob switch Cycle control knob Option selector switch Cycle control knob Cycle control knob...

[Page 6: Starting Your Dishwasher](#)

Starting Your Dishwasher This section tells you how to start or stop your dishwasher. Starting a wash cycle 1. Load the dishwasher. See pages 7-9. y amt. ft should turn freely. gent. See page 10. agent, if needed. See page 11. 5.

[Page 7: Loading Your Dishwasher](#)

Loading Your Dishwasher This section tells how to properly load your dishwasher for best washing and rinsing results. Preparing to load the dishwasher To save water and energy, do not rinse dishes before putting them into the dishwasher. Remove large pieces of food, bones, and other hard items.

[Page 8](#) Loading the bottom Load items with cooked-on or dried-on food in the bottom rack, with soiled surfaces facing inward to the spray. Mixed load Load plates, soup bowls, etc., between prongs and facing inward to the spray. Make sure pot handles and other items do not stop rotation of the spray arm.

[Page 9](#) Loading the top rack Load the top rack with cups, glasses, and smaller items. Do not cover the third level wash (on some models) when loading the top rack. Cup and glass load Load so open ends face down for cleaning and draining.

[Page 10: Using The Dispensers](#)

Using the Dispensers For best washing results, review the information below. It is important to use detergents and rinse agents properly. Using the detergent Use automatic dishwashing detergent only. Other detergents are too mild and much too sudsy. Add detergent just before starting cycle. Store detergent tightly closed in a cool, dry Fresh automatic dishwasher...

[Page 11](#) Using the rinse agent Keep the rinse agent dispenser filled with a rinse A rinse agent greatly liquid agent. Improves dish drying by helping water flow off them during the last rinse. agent also keeps water from forming droplets drying as spots or streaks. A small amount of rinse agent automatically releases into the rinse water during the rinse of...

[Page 12: Setting The Controls](#)

Setting the Controls Operating your dishwasher's controls properly helps you obtain the best possible washing results. This section tells you how to select wash cycles and options. Selecting a wash For Series 400, 800, and 810 models: For Series 830 models: Press POTS DRY or AIR DRY for NORMAL WASH and LIGHT WASH cycles.

[Page 13: Canceling A Cycle](#)

Canceling a cycle You can cancel a cycle at any time. 1. Turn the Cycle Control Knob slowly clockwise until you hear water draining. Let the dishwasher drain completely. 2. Open the door. 3. Turn the Cycle Control Knob to OFF. Selecting cycle options...

[Page 14: Changing A Cycle Setting](#)

Changing a cycle (on some models) You can change a cycle setting anytime during any cycle. 1. Lift up the door latch to stop the cycle. 2. Turn the Cycle Control Knob clockwise the desired cycle. 3. Check the detergent dispensers. They must be filled properly for the new cycle.

[Page 15: Washing Special Items](#)

Washing Special If you have doubts about washing a particular item, check with the manufacturer if it is dishwasher safe. MATERIAL DISHWASHER SAFE? Aluminum Bottles and Cans Cast iron China/ Stoneware Crystal Gold Glass Hollow- Handle Knives Pewter Disposable Plastics Plastics Stainless Steel Sterling...

[Page 16: Dishwasher](#)

Connecting Dishwasher NOTE: A special adapter must be installed on the faucet before the dishwasher can be connected. Complete instructions and the adapter are packed with your dishwasher. When moving your dishwasher make sure the door is latched. Hold the dishwasher the top front corners.

[Page 17](#) No. 4317656. The kit Hose connection a-prong grounding Power Supply cord 3-prong type wall receptacle dishwasher can be is available at your Whirlpool dealer or model authorized Whirlpool service company. Instructions are included with the kit. grounding...

[Page 18: Caring For Your Dishwasher](#)

Caring for Your Dishwasher Your new dishwasher is designed to give you many years of dependable service. There are a few things you can do to maintain your dishwasher properly. This section tells you how to clean and care for your dishwasher. Refer to "Solution chart"...

[Page 19](#) Overfill Protector The Overfill Protector (in the front right corner of the dishwasher tub) keeps the dishwasher from overfilling. It must be in place for the dishwasher to operate. Check under the float for objects that may keep the protector from moving up or down. Cleaning the filter The filter system requires periodic cleaning...

[Page 20: Saving Energy](#)

Saving Energy Saving energy is important and helps you save money. This section gives you tips on the best ways to save energy with your dishwasher. Loading tips Wash full loads. Running a half-filled dishwasher uses the same amount of electricity and hot water as a fully loaded machine.

[Page 21: Solving Common](#)

Solving Common Dishwashing A convenient checklist for handling minor performance problems. Go over this list before calling for service. If you are unable to solve your dishwasher's service information. Solution chart CAUSE Hard soil left Improper loading on dishes Water temperature too low use of incorrect, little, or ineffective...

[Page 22](#) CAUSE PROBLEM Spotting Incorrect amount and filming of detergent (continued) Use of ineffective detergents Insufficient fill due to low water pressure Dishes do not drain dry completely properly Plastics Silica film or Water chemical etching reaction with certain (silica film is a type of glassware - white iridescent...

[Page 23](#) PROBLEM CAUSE Brown stains High iron content on dishes and in water supply dishwasher interior Orange stains Large amounts of on dishwasher tomato-based foods interior on dishes placed in the dishwasher Odor in the Dishes only washed dishwasher every two to three days Chipping of Improper loading...

[Page 24: Troubleshooting](#)

Troubleshooting Before calling for assistance please check the chart below for problems you can fix. If a service call could save you the cost of call. Dishwasher problems PROBLEM CHECK THE

FOLLOWING Dishwasher does Is the door tightly closed and securely latched? not run or stops
Has the cycle been set correctly? See pages 5 and 12-I 3.

[Page 25: Requesting Assistance Or Service](#)

Whirlpool appliance. To locate FSP replacement area, refer to Step 2 or call the Whirlpool
Consumer Assistance Center number in Step 1. 4. If you are not satisfied...

[Page 26: Connecting A Portable Dishwasher](#)

Index This index is alphabetical. Look for the word or phrase you are interested in, then look for
the page number. - TOPIC BOTTOM RACK ... CLEANING Exterior..Interior..COMMON WASHING
PROBLEMS Scfving ... CONNECTING A PORTABLE DISHWASHER CYCLE Canceling ...

[Page 27: Warranty](#)

WARRANTY DUFTAPERMTM tub and/or inner door should they fail to From Date of Purchase
contain water due to defective materials or workmanship. Service must be provided by an
authorized Whirlpool service company. WHIRLPOOL WILL NOT PAY FOR A. Service calls to: 1.

This manual is also suitable for:

800 series810 series840 series830