



Whirlpool 915 Series Use And Care Manual

Whirlpool dishwasher use & care guide 900, 915

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29

• PAGE

1

OF 29 GO

•

-

Troubleshooting

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Use and Care Manual](#)



Zkl

ol@

4a

Home
Appliances
HowtoM*KLHOME--"



HOW TO MAKE A HOME BLIN.™

UseAndCare

UseAndCare

[A Note to You](#)

Dishwasher
 Safety
 3
 Parts and Features
 4
 Starting
 Your Dishwasher
 6
 Loading
 Your Dishwasher..
 .. 7
 Using the Dispensers
 12
 Setting the Controls..
 14
 Selecting a wash cycle 14
 Canceling a cycle 15
 Selecting cycle options 16
 Changing a cycle setting.. . 16
 Changing an option
 setting
 16
 Adding an item during
 a cycle..
 17
 Using delay wash.. 17
 The clean signal light 17
 Washing
 Special Items 18
 Caring for Your
 Dishwasher

 19
 Saving Energy
 21
 Solving
 Common
 Dishwashing
 Problems..
 22
 Troubleshooting

 25
 Requesting
 Assistance
 or Service..

 26
 Index.....
 30
 Warranty

 32



HOW TO MAKE A HOME RUN.™

Use And Care

GUIDE



A Note to You
Dishwasher Safety
Parts and Features
Starting Your Dish
Loading Your Dish
Using the Dispens
Setting the Control
 Selecting a wash
 Canceling a cycle
 Selecting cycle o
 Changing a cycle
 Changing an opt
 setting
 Adding an item d
 a cycle
 Using delay was
 The clean signal
Washing Special I
Caring for Your
Dishwasher
Saving Energy
Solving Common
Dishwashing Prob
Troubleshooting ..
Requesting Assist
or Service
Index
Warranty

Assistance
Center
with questions
or comments.

DISHWASHER MODEL SERIES 900,915

w5

PART NO. 3376813 Rev. A



[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool 915 Series

[Dishwasher Whirlpool 900 SERIES Use & Care Manual](#)

Dishwasher (31 pages)

[Dishwasher Whirlpool DU900PCDQ5 Use And Care Manual](#)

(72 pages)

[Dishwasher Whirlpool 900 Series Use And Care Manual](#)

Whirlpool dishwasher use & care guide 900 (72 pages)

[Dishwasher Whirlpool 900 Series Use And Care Manual](#)

Whirlpool 900 series dishwashers use & care guide (25 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Trash Compactor WHIRLPOOL 800 SERIES Use & Care Manual](#)

(16 pages)

[Trash Compactor Whirlpool 800 Series Use & Care Manual](#)

(16 pages)

[Dishwasher Whirlpool 910 Series Use And Care Manual](#)

Whirlpool 910 series dishwasher use & care guide (64 pages)

[Dishwasher Whirlpool Series 1000 Use And Care Manual](#)

Undercounter dishwasher (39 pages)

[Dishwasher WHIRLPOOL Series 925 Use & Care Manual](#)

Undercounter (47 pages)

[Dishwasher Whirlpool 925 SERIES Use And Care Manual](#)

(31 pages)

[Dishwasher Whirlpool 920 Series Use And Care Manual](#)

(33 pages)

[Dishwasher Whirlpool 9400 Series Use And Care Manual](#)

Whirlpool dishwasher use&careguide 9400 (31 pages)

[Dishwasher Whirlpool 980 Series Use And Care Manual](#)

Whirlpool 980 series dishwasher use & care guide (27 pages)

[Dishwasher Whirlpool Series 980 Use And Care Manual](#)

Whirlpool dishwasher use and care guide series 980 (30 pages)

[Dishwasher WHIRLPOOL series 980 Use And Care Manual](#)

(30 pages)

Summary of Contents for Whirlpool 915 Series

[Page 1: Table Of Contents](#)

UseAndCare DISHWASHER MODEL SERIES 900,915 PART NO. 3376813 Rev. A Home Appliances HowloM*KLAHOME~." A Note to You ... Safety ... Dishwasher Parts and Features ... Starting Your Dishwasher Loading Your Dishwasher.. Using the Dispensers Setting the Controls.. Selecting a wash cycle ... 14 Canceling a cycle ...

[Page 2: A Note To You](#)

A Note to You Thank you for buying a WHIRLPOOL@ Because your life is getting busier and more complicated, easy to use, save time, and help you manage your home better. To ensure you enjoy years of trouble-free operation, we developed this Use and Care Guide. It contains

valuable information about how to operate and maintain your appliance properly and safely.

[Page 3: Dishwasher Safety](#)

Dishwasher Your safety is important This guide contains safety statements under warning symbols. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of the warning symbol. IMPORTANT SAFETY Read all instructions before using the dishwasher.

[Page 4: Parts And Features](#)

Parts and Features Your dishwasher is illustrated below with the parts and features called out. To help you find information on specific parts or features quickly, page references are included. Third level wash (P. 10) Water inlet opening (P. 9) Rack bumper (P.

[Page 5](#) Control panels Cyclepads Optiqn pads Cycle control knob 900 Model Series Cycle pads Signal, lights Cycle control knob Opti pads 915 Model Series...

[Page 6: Starting Your Dishwasher](#)

Starting Your Dishwasher This section tells you how to start or stop your dishwasher. a wash cycle Starting 1. Load the dishwasher. See pages 7-11 2. Spin the spray arms, They should turn freely. 3. Add detergent. See page 12. 4.

[Page 7: Loading Your Dishwasher](#)

Loading Your Dishwasher This section tells how to properly load your dishwasher Preparing to load your dishwasher To save water and energy, do not rinse dishes before putting them into the dishwasher. Remove large pieces of food, bones, and other hard items. The POWER CLEAN™ module removes food particles from the water.

[Page 8](#) Loading the silverware Load the silverware basket while it is in the door or take the basket out for loading on a counter or table. Mix items in each section of the basket with some pointing up and some down to avoid nesting.

[Page 9](#) Loading the bottom Load items with cooked-on or dried-on food in the bottom rack, with soiled surfaces facing inward to the spray. Mixed load Load plates, soup bowls, etc., between prongs and facing inward to the spray. Make sure pot handles and other items do not stop rotation of the spray arms.

[Page 10](#) Loading the top rack Load the top rack with cups, glasses, and other small items. Do not cover the third level wash when loading the top rack. Cup and glass load Load so open ends face down for cleaning and draining. Load glasses in top rack only - bottom rack is not designed for glasses.

[Page 11](#) Adjustable 3-position top rack (on some models) You can raise or lower the rack to fit tall items in either the top or bottom rack. The high and low positions are marked on the adjuster on the side facing the center of the dishwasher.

[Page 12: Using The Dispensers](#)

Using the Dispensers For best washing results, review the information below. It is important to use detergents and rinse agents properly. Using the detergent Use automatic dishwashing detergent only. Other detergents are too mild and much too sudsy. Add detergent just before starting cycle. Store tightly closed detergent in a cool, dry place.

[Page 13](#) Using the rinse agent Keep the rinse agent dispenser filled with a liquid rinse agent. A rinse agent greatly improves dish drying by helping water flow off them during the last rinse. A rinse agent also keeps water from forming droplets and drying as spots or streaks.

[Page 14: Setting The Controls](#)

Setting the Controls Operating your dishwasher's controls properly helps you obtain the best possible washing results. This section tells you how to select wash cycles and options. Selecting a wash cycle Press a Cycle pad. (Some cycles share the same pad.) Turn the cycle control knob to the desired cycle.

[Page 15: Canceling A Cycle](#)

The water heats to 140°F in the final rinse (marked 7). Select the Air Dry Option when using this cycle. On 915 Model Series: Air Dry is automatically selected. - Cycle time includes dry time and may be longer depending...

[Page 16: Selecting Cycle Options](#)

Air Dry. For 900 Model Series: Always select the Air Dry option when using the Rinse-Wash Later cycle. For 915 Model Series: The Air Dry option is automatically selected for the Rinse-Wash Later cycle. setting NOTE: Turning the cycle control knob...

[Page 17: Adding An Item During A Cycle](#)

Adding an item during You can add an additional item to the dishwasher anytime before the cycle control knob reaches Light. Items added after the cycle control knob reaches Light may only be rinsed. 1. Lift up the door latch to stop the cycle. Wait for spraying action to stop before opening the door.

[Page 18: Washing Special Items](#)

Washing Special If you have any doubts about washing a particular piece of tableware, check with the manufacturer to see if it is dishwasher MATERIAL DISHWASHER SAFE? Aluminum Bottles and Cans Cast Iron China/ Stoneware Crystal Gold Glass Hollow- Handle Knives Pewter Disposable...

[Page 19: Caring For Your Dishwasher](#)

Caring for Your Dishwasher Your new dishwasher is designed to give you many years of dependable few things you can do to maintain your dishwasher clean and care for your dishwasher. Refer to "Solving Common Dishwashing pages 22-24 for special cleaning problems. See Installation storing your dishwasher and for cleaning the drain air gap.

[Page 20](#) Overfill protector The overfill protector (in the front right corner of the dishwasher tub) keeps the dishwasher from overflowing. It must be in place for the dishwasher to operate. Check under the float for objects that may keep the protector from moving up or down.

[Page 21: Saving Energy](#)

Saving Energy Saving energy is important and helps you save money. This section gives you tips on the best ways to save energy with your dishwasher. Loading tips Wash full loads. Running a half-filled dishwasher uses the same amount of electricity and hot water as a fully loaded machine.

[Page 22: Solving Common](#)

Solving Common Dishwashing A convenient checklist for handling minor performance problems. Go over this list before calling for service. If you are unable to solve your dishwasher's service information. Solution chart CAUSE Food soil left Improper loading on dishes Water temperature too low Use of incorrect, too little, or ineffective...

[Page 23](#) PROBLEM CAUSE Spotting Use of incorrect and filming detergents (continued) Incorrect amount of detergent Use of ineffective detergents Insufficient fill due to low water pressure Water temperature Cycle takes is too low extremely long time Dishwasher is not installed properly Dishes do not drain Dishes do not properly...

[Page 24](#) PROBLEM CAUSE White spots on Seasoning removed cookware with by dishwasher non-stick finish detergents Brown stains High iron content on dishes and in water supply dishwasher interior Orange stains Large amounts of on dishwasher tomato-based foods interior on dishes placed in the dishwasher Odor in the Dishes only washed...

[Page 25: Troubleshooting](#)

Troubleshooting Before calling for assistance please check the chart below for problems you can fix. It could save you the cost of a service call. Dishwasher problems CHECK THE FOLLOWING PROBLEM Dishwasher does Is the door tightly closed and securely latched? not run or stops Has the cycle been set correctly? See pages 6 and 14-15.

[Page 26: Requesting Assistance](#)

WHIRLPOOL To locate FSP replacement parts in your area, refer to Step 2 or call the Whirlpool Consumer Assistance Center number in Step 1. 4. If you are not satisfied...

[Page 27: Index](#)

Index This index is alphabetical. Look for the word or phrase you are interested in, then look for the page number. TOPIC BOTTOM RACK ... CLEANING Exterior..Interior ... CLEAN LIGHT_... COMMON WASHING PROBLEMS Solving .

[Page 28](#) POWER CLEAN™ washing system covered by your warranty Third level wash tower Upper spray arm Spray tower Nozzle cap Washer Lower spray arm parts POWER CLEAN module and motor...

[Page 29: Or Service](#)

WARRANTY DURAPERMTM tub and/or inner door should they fail to From Date of Purchase contain water due to defective materials or workmanship. Service must be provided by an authorized Whirlpool service company. WHIRLPOOL WILL NOT PAY FOR A. Service calls to: 1.

This manual is also suitable for:

[900 series](#)