



# Loading Bottom Rack - Whirlpool DU1000 Use And Care Manual

Whirlpool dishwasher use & care guide



1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44

---

•

[Table of Contents](#)

- 


Troubleshooting

•

## Bookmarks



Available languages

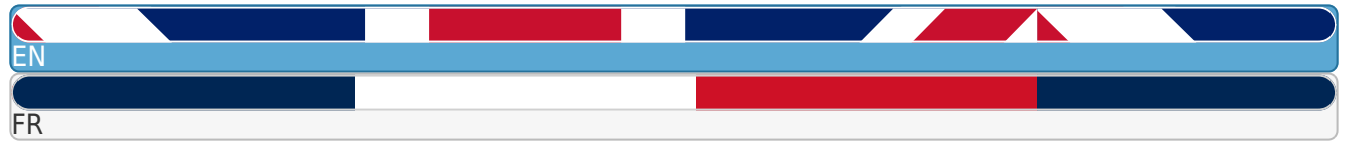



The bottom rack is designed for plates, pans, casseroles, and utensils. Many items, up to 13" (33 cm) tall, fit in the bottom rack.

(See recommended loading patterns shown.)

**NOTE: The features on your dishwasher rack may vary from the drawings shown.**

*10 place setting*

*12 place setting*

 
 
Do not load glasses, cups, or plastic items in the bottom rack. Load small items in the bottom rack only if they are secured in place.

Load plates, soup bowls, etc., between tines.

Overlap the edges of plates for large loads.

Load soup, cereal, and serving bowls in the rack in a variety of ways depending upon their size and shape. Load bowls securely between the rows of tines. Do not nest bowls because the spray will not reach all surfaces.

*Utensil load*

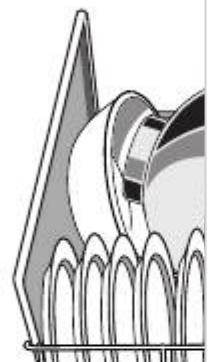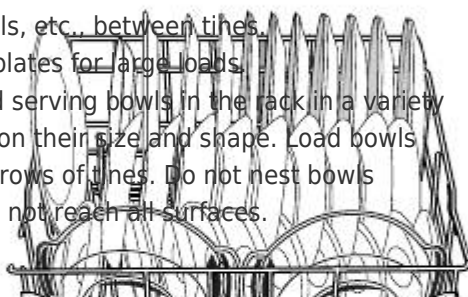

## Loading Bottom Rack

Load cookie sheets, cake pans, and other large items at the sides and back. Loading such items in front can keep the water spray from reaching the detergent dispenser.

Secure heavily soiled cookware face down in the rack.

Make sure pot handles and other items do not stop rotation of the spray arm(s). The spray arm(s) must move freely.

Do not load items between the bottom rack and the side of the dishwasher tub because they might block the water inlet opening.

 
 
### Fold-down tines (on some models)

You can fold down one row of tines at the back of the bottom rack.

1. Grasp the tip of the tine that is in the tine holder.
2. Gently pull the tine out of the tine holder.
3. Lay the row of tines down in the rack to make room for large dishes, bowls, pots, pans or roasters.

*Mixed load*

9

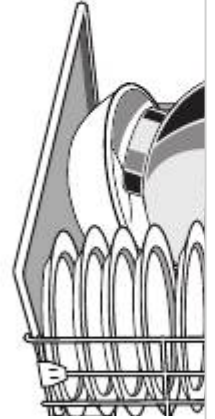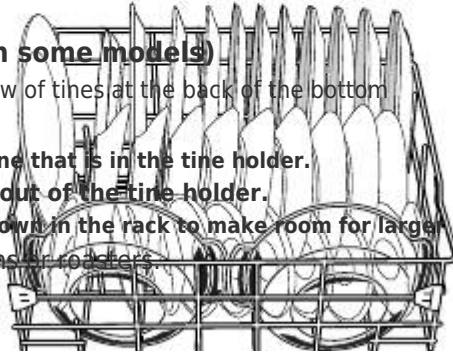

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
6  
7  
8  
9  
10  
11  
12  
13

Quick Links:

[Table of Contents](#)

[Control Panels](#)

## Related Manuals for Whirlpool DU1000

[Dishwasher Whirlpool DU1055XTSB0 Use & Care Manual](#)

(44 pages)

[Dishwasher Whirlpool DU1100XTPS9 Use & Care Manual](#)

(44 pages)

[Dishwasher Whirlpool DU1015 Use And Care Manual](#)

Whirlpool dishwasher use & care guide (44 pages)

[Dishwasher Whirlpool DU1101XTPQ9 Use & Care Manual](#)

(44 pages)

[Dishwasher Whirlpool TUD8700SQ Installation Instructions Manual](#)

Undercounter dishwasher plastic giant tub models (39 pages)

[Dishwasher Whirlpool DU1014TXD Installation Instructions Manual](#)

Undercounter dishwasher (40 pages)

[Dishwasher Whirlpool GU2475XTVY Manual](#)

(28 pages)

[Dishwasher Whirlpool DU1055XT User Instructions](#)

Whirlpool du1055xt: user guide (13 pages)

[Roper RUD8000R Loading Bottom Rack](#)

Whirlpool Roper RUD8000R

[Roper RUD4000MB2 Loading Bottom Rack](#)

Whirlpool Roper RUD4000MB2

[Roper RUD6000PQ2 Loading Bottom Rack](#)

Whirlpool Roper RUD6000PQ2

[ESTATE TUD8700RQ1 Loading Bottom Rack](#)

Whirlpool ESTATE TUD8700RQ1

[Roper RUD5000 Loading The Bottom Rack](#)

Whirlpool Roper RUD5000

[Ikea IUD4000RQ0 Loading Bottom Rack](#)

Whirlpool Ikea IUD4000RQ0

[Ikea IUD6000RQ2 Loading Bottom Rack](#)

Whirlpool Ikea IUD6000RQ2

[DU7500XR1 Bottom Rack Loading](#)

Whirlpool DU7500XR1

This manual is also suitable for:

[Du1048Du1055Du1200Du1201Du1245Du1248](#)