



Sanyo AU by KADDI W43SA Basic Manual

Cdma 1x win


1
2
3
4
5
6
7
8
9

Table Of Contents

10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94



•

[Table of Contents](#)

-


Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links

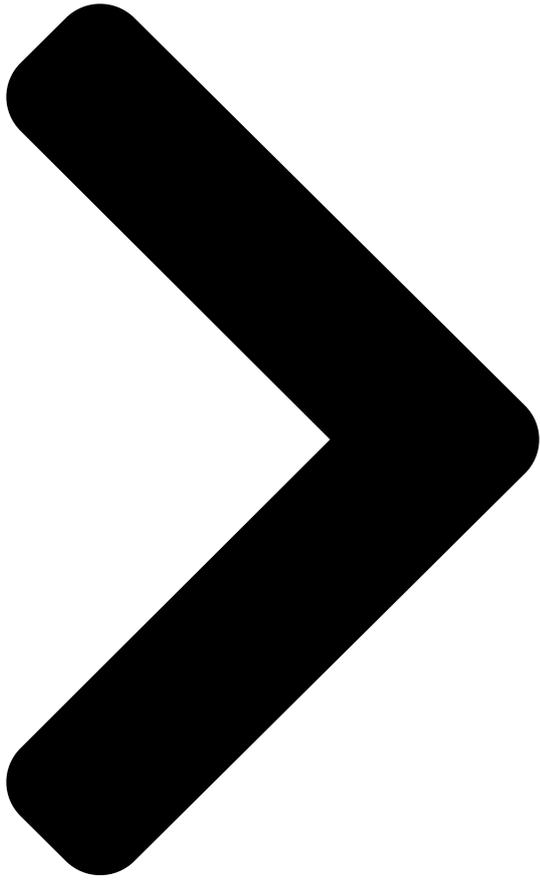

Basic Manual

W43SA

by SANYO

Contents/

Before Use

Phone Call

Inputting Text

**Address Book/
Pair Function
Mail
Hello Messenger
Camera
EZweb
PC Site Viewer
EZ Navi
EZ Television
(1Seg)/EZ · FM
Remote Auto Lock
Other Features/
Troubleshooting
Index**

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Sanyo AU by KADDI W43SA

[Cell Phone Sanyo W61SA User Manual](#)

(84 pages)

[Cell Phone Sanyo W64SA User Manual](#)

(76 pages)

[Cell Phone Sanyo W54SA User Manual](#)

(82 pages)

[Cell Phone Sanyo W63SA User Manual](#)

(86 pages)

[Cell Phone Sanyo W63SA Operating Instructions Manual](#)

(12 pages)

[Cell Phone Sanyo W52SA User Manual](#)

(78 pages)

[Cell Phone Sanyo W51SA Basic Manual](#)

(94 pages)

[Cell Phone Sanyo w41sa Basic Manual](#)

(93 pages)

[Cell Phone Sanyo W33SA Basic Manual](#)

(104 pages)

[Cell Phone Sanyo SANYO Innuendo User Manual](#)

(140 pages)

[Cell Phone Sanyo SCP-2400 User Manual](#)

Sanyo cell phone user guide (140 pages)

[Cell Phone Sanyo Sprint SCP-7200 User Manual](#)

Pcs vision ready link phone (197 pages)

[Cell Phone Sanyo SCP-2700 User Manual](#)

Sprint cell phone (160 pages)

[Cell Phone Sanyo Cell Phone User Manual](#)

Sprint pcs vision phone (256 pages)

[Cell Phone Sanyo SCP-3200 User Manual](#)

(141 pages)

[Cell Phone Sanyo Sprint SCP-3810 User Manual](#)

(160 pages)

Summary of Contents for Sanyo AU by KADDI W43SA

[Page 1](#) Basic Manual Contents/ Before Use Phone Call Inputting Text Address Book/ Pair Function Mail Hello Messenger Camera EZweb PC Site Viewer EZ Navi EZ Television (1Seg)/EZ · FM W43SA Remote Auto Lock by SANYO Other Features/ Troubleshooting Index...

[Page 2](#) " [情報](#) (Information)" → [オンラインマニュアル](#) (Online Manual)". Check the website of SANYO Electric Co., Ltd. below, for the troubles on your W43SA. • From W43SA → Press for more than one second. (SANYO Keitai Planet, in Japanese only) • From PC <http://www.sanyo-keitai.com> (SANYO Keitai Arena, in Japanese only)

[Page 24: Answering A Call](#)

001 KOKUSAI MOBILE TALK ■ Application required. For inquiries, contact KDDI Customer Service Center at 0077-7160 (Toll-free; open 9:00 to 20:00 every day including weekends and national holidays). 123-XXXX ☐ ☐ ☐ ☐ KDDI Country code Area code Phone number International (USA) access code...

[Page 25: Calling Back \(Outgoing Calls/Incoming Calls\)](#)

Calling Back (Outgoing Calls/Incoming Calls) Example: To make a call from Incoming Calls Press while the standby screen is displayed. The screen is displayed. Press to display Outgoing Calls. The list shows the latest dialed/received call on top. to select the phone number, then press Information...

[Page 26: Changing Ringer Volume And Type](#)

Changing Ringer Volume and Type Press while the standby screen is displayed. Press to select "Basic Settings" and press (Select). Press to select "Sound/Vib/Lamp" and press (Select)...

to select " " and press (Select). Press ↓ to increase the volume and press (Set). Press ↑ to decrease the volume. The ringer volume can be adjusted in 5 levels. Set the volume to "OFF"...

to select a melody Press and press (Set). Press (Save). The melody (ringer) is set. Information The default ringer is "Polonaise No.6 Heroique". • ® The latest Chaku-Uta (ringer) can be downloaded and set as the ringer. •...

[Page 29: Adjusting The Other Party's Voice Volume](#)

Adjusting the Other Party's Voice Volume to adjust volume during a call. Press to increase the volume. Press to decrease the volume. The voice volume can be adjusted in 9 levels during the call. Setting Manner Mode The vibrator of the W43SA notifies you of the incoming call. Press for more than one second while the standby...

[Page 30: Setting Answer Phone](#)

Setting Answer Phone Press for more than one second while the standby screen is displayed. Answer Phone is turned ON and " " appears on the standby screen. To Turn Answer Phone OFF ■ Press for more than one second while the standby screen is displayed.

[Page 31: Playing Back Messages On Answer Phone](#)

Playing Back Messages on Answer Phone When a message is recorded on Answer Phone: A message "New Notice Found" appears on the standby screen. Press to select " " and press (Check). Icons : Unchecked Answer Phone message : Checked Answer Phone message ...

[Page 32: Switching Input Mode](#)

Inputting Text Switching Input Mode On the character input screen, press to display the input mode selection screen. to select an input mode and press (OK). Entering Single-byte Alphanumeric Characters You can use the key to enter characters. The characters appear as shown in the following table each time the indicated key is pressed.

[Page 33](#) Consecutively Entering Characters Assigned ■ to the Same Key After entering the first character, press and the next key. Example: Entering "ab" Press once. Press Press twice. Erasing Characters ■ Press to erase a character. Press for more than one second to erase all characters after the cursor (...)

[Page 34: Entering E-Mail Address](#)

Entering E-mail Address Example: To enter "taro@sanyo.ne.jp" using Phrase Enter "taro@sanyo". Press once. Press once. Press 3 times. Press 3 times. Press twice. OK Press 4 times. Press once. ...

[Page 35: Entering Pictograph](#)

Entering Pictograph Press on the character input screen. Press to select " " and press (OK). Press (Category) or to switch between the pictograph lists by category. Press to select a ...

[Page 36: Registering Data In Address Book](#)

Address Book Registering Data in Address Book You can register data up to 1000 in the address book. Press for more than one second while the standby screen is displayed. Press to select ...

[Page 37](#) Enter a phone number and press (OK). Press to select a type of phone number and press (Select). Enter the area code when registering a regular telephone number. When you do not enter an E-mail address, go to step 8.

[Page 38: Making A Call From Address Book](#)

Making a Call from Address Book Press while the standby screen is displayed. Press to select the person to call. Press to call. ...

[Page 39: Editing Address Book Data](#)

Editing Address Book Data Example: To change a phone number Press while the standby screen is displayed, and use Press to select the data to edit. Press (Detail) and (Edit).

[Page 40: Registering Data From Outgoing/Incoming Calls](#)

Registering Data from Outgoing/Incoming Calls Press while the standby screen is displayed. Press The Outgoing Calls screen appears. Press to display the Incoming Calls screen while the standby screen is displayed.

[Page 41: Registering Data As Popular Contact](#)

Pair Function You can register the frequent contacts (up to 5 entries) as Popular Contacts to make calls, send mails or use Hello Messenger easily. Registering Data as Popular Contact Press while the standby screen is displayed.

[Page 42: Making A Call To The Popular Contact](#)

Making a Call to the Popular Contact Press while the standby screen is displayed. Press to select the person to call. Press to select "Dial" and Press (Select).

[Page 43: E-Mail](#)

Mail Application to the EZweb service is required to use E-mail. Contact au shops or the au Customer Service Center if you did not apply to the service at the time of purchase. Perform the EZweb initialization before using this service. If you have not performed initialization yet, see page 17.

[Page 44: Creating And Sending E-Mail](#)

Creating and Sending E-mail Press while the standby screen is displayed. Press Press (New) and press (Select). Press to select ...

the standby screen. Press the [Check] key to select " " and press [Check] (Check). The received C-mail is usually stored in the ...

[Page 56: Hello Messenger](#)

Hello Messenger Hello Messenger is a service that allows you to communicate freely in a meeting with the combination of text, voice or photo, between au cellphones "applicable to Hello Messenger" using an animated character you like. The host can select up to 4 meeting members from the address book. Hello.

[Page 57: Displaying Hello Messenger Menu](#)

Displaying Hello Messenger Menu Press while the standby screen is displayed. to select "Hello Messenger" and press (Select). When you activate Hello Messenger for the first time, press (OK), select your character and press [Set] (Set)). Item Description Selects members to invite and starts the meeting. ...

[Page 58: Inviting Member To The Meeting](#)

Inviting Member to the Meeting You can select members to invite to the meeting from [Address Book] (Address Book), (Group) or (Hello Ranking; the ranking of members that you have invited to the meeting or received the invitation), and start the meeting. to select "...

[Page 59: When Receiving The Meeting Invitation](#)

When Receiving the Meeting Invitation When you receive the meeting invitation, Ringer or Vibrator is activated and the invitation screen appears. However, if you set " (Incoming Mode)" to " (Auto Answer)", the invitation is automatically accepted without any ringer. When you receive the meeting invitation: The invitation message (the incoming message) screen appears.

[Page 60: Camera](#)

Camera What You Can Do with Camera W43SA has 1.99-megapixel camera that allows you to shoot photos or movies. The camera has built-in auto focus function. The auto focus function works when you press the shutter key. Photos and movies which you shot can be sent by E-mail.

[Page 61](#) How to Hold W43SA Upright ■ Photo : Mobile/Wallpaper Size Movie : Standard (S/M Size) High Quality (M/L Size) Long-Time (M/L Size, Shutter key QVGA Size(Vert)) You can also shoot photos or movies with your W43SA folded. Landscape-Oriented ■ Photo : VGA/SXGA/UXGA Size Movie : Long-time (QVGA Size(Horz), VGA Size) Shutter key...

[Page 62: Shooting Photo](#)

Shooting Photo Press for more than one second while the standby screen is displayed. The view seen through the lens appears. Press to switch between the light and flash. Aim at the object on the main display and press (Shoot).

[Page 63: Recording Movie](#)

Recording Movie Press for more than one second while the standby screen is displayed, and press The view seen through the 00:00:15 lens appears. Press to turn the light ON/OFF. Aim at the object on the main display and press (Record).

[Page 64](#) Title of Movie You Recorded ■ The Recording Mode (Size) is set to "High Quality (L Size)" at the time of purchase. Recording mode (Size) Title of a movie Where to save Standard (S Size) S_year + month + date + time + minute + serial number "Movie Folder"...

[Page 65: Viewing Photos Or Movies](#)

Viewing Photos or Movies Press while the standby screen is displayed. Press [Data Folder] and press (Select). Press [Photo Folder] or "Movie Folder" and press (Select).

this service.

[Page 88: In Case You Lose Your W43Sa](#)

Remote Auto Lock In Case You Lose Your W43SA The Remote Auto Lock function enables you to lock your W43SA through remote operation so that no one else can use your W43SA. Setting Remote Auto Lock Activation Conditions ■ Auto Lock is activated when your W43SA receives the specified number of calls from the registered phone number within the specified period of time.

[Page 89](#) to select "Duration(min)" and press (Select). Enter Duration and press (Set). Duration(min): Sets the time limit to receive the specified number of incoming calls. The time can be set between 1 and 10 minutes. to select "Incm Call Ct" and press (Select).

[Page 90: Other Features](#)

Other Features W43SA is provided with other useful features. Global Expert The W43SA supports Global Expert function using au IC card. Global Expert is an international roaming service that allows you to connect to the world by simply inserting your au IC card into a GSM mobile phone for overseas use.

[Page 91: Troubleshooting](#)

For detailed information, visit the website of SANYO Electric Co., Ltd. as below. From W43SA Press for more than one second. (SANYO Keitai Planet, in Japanese only) □...

[Page 92: Index](#)

Index Accessories.....10 E-mail41 Address Book.....34 Attach a Photo or a Movie....64 Create and Send42 Edit37 Initialization17 Make a Call.....36 Read.....45 Register34 Reply48 Register Data from Outgoing Calls/ View Received Photos or Movies... 47 Incoming Calls38 E-mail Address.....17,18 Adjust the Other Party's Voice...

[Page 93](#) Ringer Manners for Using Cellphones ..1 Change Volume and Type24 microSD™ Memory Card.....16 Missed Calls22 Movie SANYO Round-type Earphone Jack Attach to E-mail Messages 64 Conversion Adapter 01.....10 Record.....61 Security Code20 Recording Mode.....62 Set Language.....14...

[Page 94](#) Pressing zero will connect you to an operator, after calling 157 on your au cellphone. Sales : KDDI CORPORATION • OKINAWA CELLULAR TELEPHONE COMPANY SANYO Electric Co., Ltd. Manufactured by : October 2006 Edition Access the au online manual from here.