

Whirlpool GC2000 Use And Care Manual

Food waste disposers

1
2
3
4
5
6
7
8
Table Of Contents
9

Table of Contents






Table of Contents

- 1 Important Safety Instructions
- 2 Table of Contents
- 3 Product Registration Card
- 4 Operating Instructions
- 5 If Your Disposer Jams
- 6 Operation with Dishwasher

7 Care and Cleaning

8 Troubleshooting

Download this manual

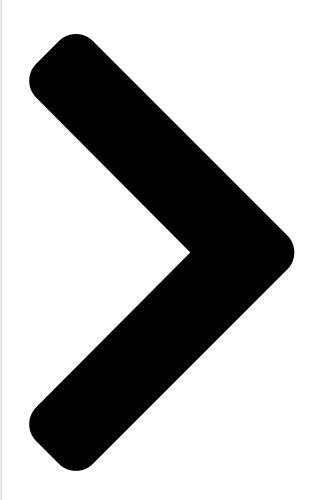



Food Waste Disposers
Models Making Your World



Table of Contents



Related Manuals for Whirlpool GC2000

Garbage Disposal Whirlpool GC1000 Use And Care Manual

(9 pages)

Garbage Disposal WHIRLPOOL 4211597 Installation Instructions

(5 pages)

Garbage Disposal Whirlpool GC2000 Warranty

Whirlpool washer - front load washing machine user manual (1 page)

Garbage Disposal Whirlpool GC1000XE Installation Care And Use

Manual

Food waste disposer (2 pages)

Garbage Disposal Whirlpool GC1000XE - 1/3 HP Continuous-Feed Food

Disposal Warranty

Warranty (1 page)

Garbage Disposal Whirlpool GC1000PE Dimension Manual

Food-waste disposer (1 page)

Garbage Disposal Whirlpool GC5000XE Parts List

Whirlpool disposer parts list (2 pages)

Garbage Disposal Whirlpool GC1000PE1 Parts List

Whirlpool disposer parts list (2 pages)

Garbage Disposal Whirlpool GC2000PE1 Parts Manual

Disposer (2 pages)

Garbage Disposal Whirlpool GC2000PE2 Parts Manual

Whirlpool disposer parts manual (2 pages)

Garbage Disposal Whirlpool GC5000XE2 Parts List

Whirlpool disposer parts list (2 pages)

Garbage Disposal WHIRLPOOL GC2000XE5 Installation Instructions

(2 pages)

Garbage Disposal Whirlpool GX900QPPQ0 Use & Care Manual

(16 pages)

Summary of Contents for Whirlpool GC2000

<u>Page 1</u> Making Your World A Little Easier.'" Food Waste Disposers Models GCI 000 GC2000 GC3000 GC4000 Use and Care Guide...

<u>Page 2</u> IMPORTANT SAFETY INSTRUCTIONS WARNING - When using electric appliances, be followed, including the following: 1. Read all the instructions before using the appliance. 2. To reduce the risk of injury, close supervision is used near children. 3. Do not put fingers or hands into a waste disposer. 4.

Page 3 TABLE OF CONTENTS Important Safety Instructions Grounding Instructions Product Registration Card ... Operating Instructions CareandCleaning When You Need Service or Assistance Warranty PRODUCT REGISTRATION Before you use your disposer, please fill out and mail your product registration card. This card will enable us to contact you in the unlikely event of a product safety notification and assist us in complyin Safety Act.

<u>Page 4</u> OPERATING INSTRUCTIONS Your Whirlpool disposer has a cover that acts only as a seal and drain cover. To SEAL cover for holding water in the sink, press the cover firmly in the

disposer opening. NOTE: Do not operate the disposer...

<u>Page 5</u> NOTE: Do not put items like glass, china, metal, tin cans, bottle caps or oyster and clam shells into the disposer. It Your Disposer Jams Accidental entry of foreign material will cause any disposer to jam occasionally. free jammed material, the following procedure should be used: Turn disposer switch off before using Jam Breaker Wrench.

<u>Page 6</u> The baking soda will freshen the inside of the disposer. NOTE: NEVER use chemical Your WHIRLPOOL@ disposer is permanently tional lubrication in this Use and Care Guide. may appear on the face of the grinding disc.

<u>Page 7</u> Is the switch controlling the disposer Is the red Reset Button on the bottom of the disposer 2. If the problem is not due to one of the above items, call the Whirlpool Assistance Center: 1-800-253-I 3. If you are not satisfied...

<u>Page 8</u> WHIRLPOOL@ Disposer Models GCI 000, GC2000, GC3000 and GC4000 DNE YEAR FULL WHIRLPOOL WARRANTY PAY FOR: ROM DATE OF Replacement ,NSTALLATION repair labor to correct OR MODELS: defects in materials or workmanship. 3c2000 must be provided by an authorized Whirlpool...

This manual is also suitable for:

Gc3000Gc4000GciGc2000xeGc1000

Save PDF