





## Whirlpool FGC355V Use And Care Manual

Whirlpool corporation gas range use and care guide



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12

• PAGE

1

OF 12 GO

•

[Table of Contents](#)

•

## Bookmarks

[Download this manual](#)

## Quick Links



 


Gas Range

# Use and Care Guide

**ROPER**

Appliances  
FGPZIOV

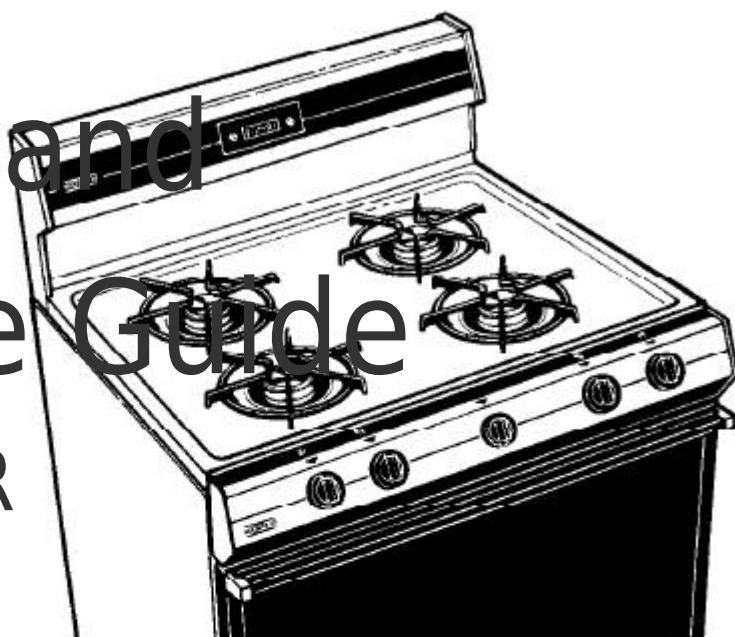

Gas  
**Use  
Care**  
**RO**  
Ap

FLP320V  
 FLPZIOV  
 FGP325V  
 FGP215V  
 FLP330V  
 FGP310V  
 FGP335V  
 FLP310V  
 FGP345V  
 FGP315V  
 FGP355V  
 FGP320V  
 FGC355V

Thank you for choosing a Roper appliance.

This Use and Care Guide will help you operate and maintain your new, quality-built Roper range. Keep this Use and Care Guide in a safe place for future reference.

Complete and mail the Product Registration Card.

**Thank you for choosing a Roper appliance.**

This card enters your warranty into our warranty system that ensures efficient claim processing. This Use and Care Guide will help you operate and maintain your new, quality-built Roper range. Keep this Use and Care Guide in a safe place for future reference.

**Complete and mail the Product Registration Card.**

 
**NOTE:** This card enters your warranty into our warranty system that ensures efficient claim processing. Because this Use and Care Guide covers several models, not all illustrations shown or features discussed will apply to your appliance. It is your responsibility to be sure that

your range has been properly installed where it is protected from the elements, and on a floor strong enough to support its weight. (See the Installation Instructions.)

Is not used by anyone unable to operate it properly.

Is properly maintained.

Is used only for jobs expected of a

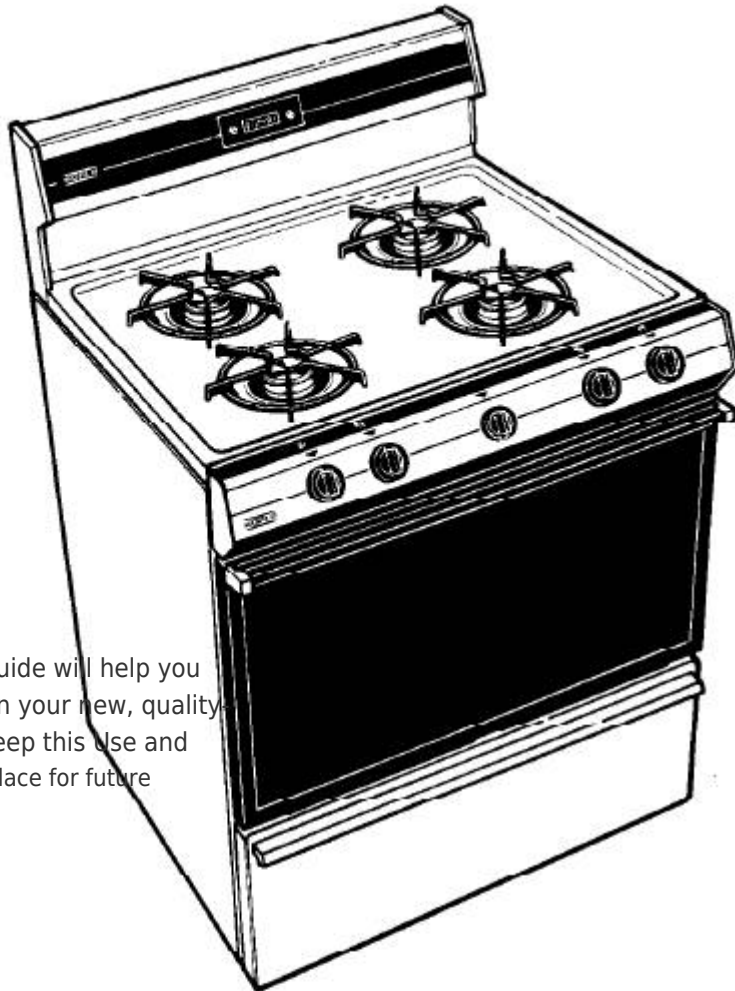

# Gas Use Care

Appliance  
 FGP21  
 FLP21  
 FGP21  
 FGP31  
 FLP31  
 FGP31  
 FGP32

## You are responsible for

- Has been properly installed where it is protected from the elements, and on a floor strong enough to support its weight. (See the Installation Instructions.)
- Is not used by anyone unable to operate it properly.
- Is properly maintained.
- Is used only for jobs expected of a home range.
- Is secured by properly installed anti-tip bracket(s), with rear leveling leg(s) positioned under bracket(s).

**NOTE:** This card covers several models. Not all illustrations shown or features discussed will apply to your appliance.

## Cont

**Important Parts And Using Your Appliance**  
 Using the Lighting Setting  
 Using the Oven  
 The oven

home range.

Is secured by properly installed anti-tip bracket(s), with rear leveling leg(s) positioned under bracket(s).

## Contents

[Important Safety Instructions](#)

[Parts](#)

[And Features](#)

[Using Your Range](#)

[Using the surface burners](#)

[Lighting standing pilots](#)

[Setting the clock and timer](#)

[Using](#)

[the oven controls](#)

[The oven vent](#)

[Caring](#)

[For YOU!](#)

[Range](#)

[The control knobs](#)

[The control panel](#)

[The surface burner grates](#)

[The lift-up cooktop](#)

[The surface burners](#)

[The removable oven door](#)

[The standard-cleaning](#)

[oven](#)

[The continuous-cleaning](#)

[oven](#)

 
[Cleaning chart](#)

[The oven light](#)

[Before You Call For Service](#)

[Warranty](#)

[How to get service assistance](#)

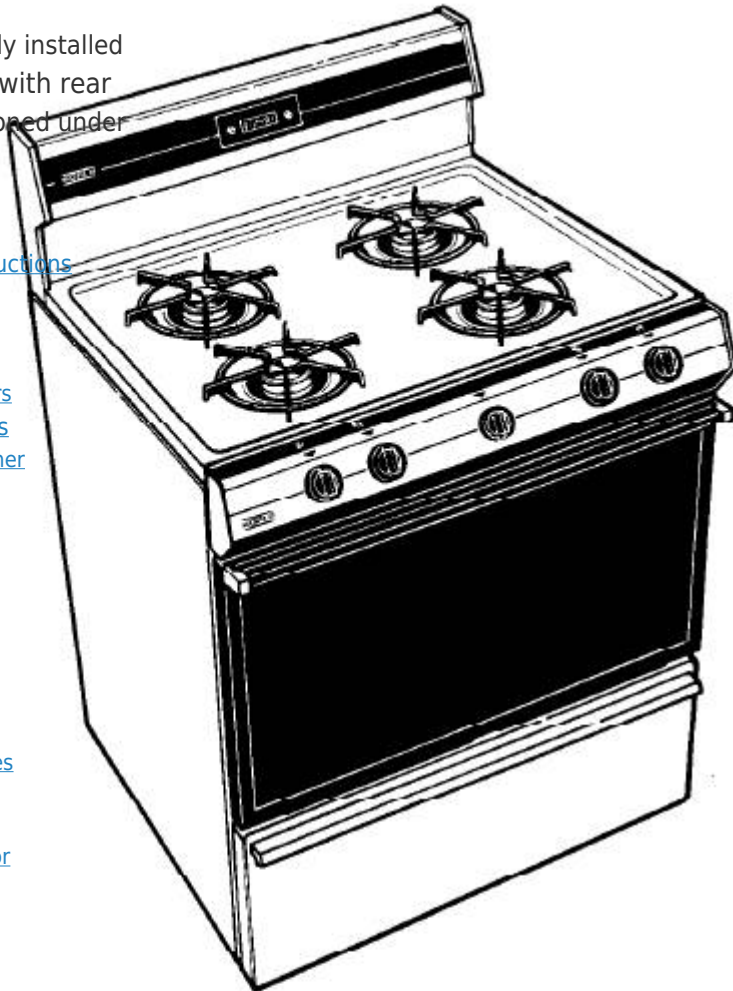

# Gas Use Care RO

Ap

FGP21

FLP21

FGP21

FGP31

FLP31

FGP31

FGP32

**Thank you for choosing a Roper appliance.**

**This Use and Care Guide will help you operate and maintain your new, quality-**

**You are responsible for**

**ensuring that your appliance is properly installed and maintained.**

- Has been properly installed where

**NOTE:** This guide covers all models of the Roper brand.

ManualsLib.com

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Whirlpool FGC355V

### [Ranges Whirlpool FGC355Y Use And Care Manual](#)

Whirlpool standard-cleaning gas ranges use and care fgp355y fgc355y fgp345y fgp335y (28 pages)

### [Ranges Whirlpool FGP300JN0 Installation Instructions Manual](#)

30" freestanding gas range with standard clean oven (10 pages)

### [Ranges Whirlpool FGP300BL0 Installation Instructions Manual](#)

30" freestanding gas range (7 pages)

### [Ranges Whirlpool FGP315B Use And Care Manual](#)

Whirlpool standard-cleaning gas range use and care (27 pages)

### [Ranges Whirlpool SF3000SE W Service Manual](#)

Freestanding standard gas range (106 pages)

### [Ranges Whirlpool FGP320A Use And Care Manual](#)

Whirlpool self-cleaning gas range use & care (28 pages)

### [Ranges Whirlpool FGP325H Use And Care Manual](#)

Whirlpool corporation gas range use & care guide (16 pages)

### [Ranges Whirlpool FGP337G Use And Care Manual](#)

Whirlpool corporation gas range use & care guide fgp337g (16 pages)

### [Ranges Whirlpool 8522407 Use And Care Manual](#)

Self-cleaning gas range (16 pages)

### [Ranges Whirlpool FGS385V Care Manual](#)

Whirlpool range fgs385v, fgs395v use and care guide (16 pages)

### [Ranges Whirlpool SF372BEE W/N Service Manual](#)

Freestanding self-clean gas range (112 pages)

### [Ranges Whirlpool FGS387Y Important Safety Instructions Manual](#)

Whirlpool fgs387y gas range user guide (32 pages)

### [Ranges Whirlpool FGS395Y Use And Care Manual](#)

Whirlpool self-cleaning gas range use and care guide fgs395y (36 pages)

### [Ranges Whirlpool Roper FGS325RQ0 Use And Care Manual](#)

Whirlpool gas range use & care guide (20 pages)

### [Ranges Whirlpool FGS335E Use & Care Manual](#)

Whirlpool self-cleaning gas range use & care guide fgs335e (29 pages)

### [Ranges Whirlpool 8177945 Manual](#)

Standard clean freestanding gas range (40 pages)

## Summary of Contents for Whirlpool FGC355V

### [Page 1: Table Of Contents](#)

FGP215V FLP330V FGP310V FGP335V FLP310V FGP345V FGP315V FGP355V FGP320V FGC355V  
Because this Use and Care Guide NOTE: covers several models, not all illustrations shown or features discussed will apply to your specific model. Contents Important Safety Instructions And Features Parts...

### [Page 2: Important Safety Instructions](#)

Important Safety Instructions Gas ranges have been thoroughly tested for safe and efficient

operation. However, as with any appliance, there are specific installation and safety precautions which must be followed to ensure safe and satisfactory operation. To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, DO NOT STORE OR USE GASOLINE THE VICINITY...

### [Page 3: Parts And Features](#)

22. DO NOT store things children might want above the range. Children could be burned or injured while climbing on it. Parts 81 Features Models FGC355V, FGP355V, FGP345V (shown), FGP335V, FLP330V, FGP325V FLP320V & FGP320V Surface burners Broiler drawer Models FGP315V, FLPIIOV, FGPIIOV (shown), FGP215V, FLPIIOV &...

### [Page 4: Using Your Range](#)

Using Your Range Models FGC355V, FGP355V, FGP345V(shown), FGP335V, FLP330V. FGP325V, FLP320V, FGP320V, FGP315V. FLP310V. FGPIIOV Surface burner indicators Right front control knob Left front Left rear Oven temp control knob control knob control Models FGP215V, FLPIIOV & FGPIIOV Surface burner indicaton...

### [Page 5: Lighting Standing Pilots](#)

140°F (60°C). The burner will take 50-60 seconds to light. 5. Replace the broiler drawer. Setting the clock and timer (Models FGC355V, FGP355V, FGP345V 81 FGP335V) The clock/timer acts as both a time-of- day clock and as a minute timer.

### [Page 6: The Oven Vent](#)

Adjusting the oven temperature control Does your oven seem hotter or colder than your old oven? The temperature of your old oven may have shifted gradually without you noticing the change. Your new oven is properly adjusted to provide accurate temperatures.

### [Page 7: Caring For Your Range](#)

Hold cooktop up securely with one hand. Models FGC355V, FGP355V, NOTE: FGP345V, FGP335V, FLP330V, FGP325V, FLP320V & FGP320V have removable cooktops. For these models, lift cooktop completely off.

### [Page 8: The Standard-Cleaning](#)

Some can become trapped in the porcelain surface and give off harmful fumes. (Models FGC355V, FGP355V WINDOW & FGP345V) - Keep clean with warm soapy water or spray glass cleaner. Use a plastic scouring pad for heavily-soiled areas.

### [Page 9: Cleaning Chart](#)

Control knobs Control panel and trim Broiler drawer, pan and grid Oven racks Oven door glass (Models FGC355V, FGP355V & FGP345V) Burn And Electrical Shock Hazard WHAT TO USE Warm, soapy water and a soft cloth. Non-abrasive plastic scouring pad for heavily-soiled areas.

### [Page 10: The Oven Light](#)

PART Standard oven Continuous-cleaning oven The oven light (Models FGC355V, FGP355V & FGP345V) To turn the oven light on, push the Oven Light Switch on the control panel. Push the switch again to turn off the light. To replace: Electrical Shock And Personal Injury Hazard .

### [Page 11: Before You Call For Service](#)

Before You Call For Service If you are having an operating problem, check the chart to see what the cause might be before you call for assistance. OPERATING PROBLEM Nothing operates. Oven will not operate. Burner fails to light. Burner flames are uneven. Burner flames lift off ports, are yellow, or are noisy when turned off.

### [Page 12: How To Get Service Or Assistance](#)

E. Any labor costs during the limited warranties. This Roper appliance is warranted by Whirlpool Corporation. Under no circumstances shall it be liable under this warranty for incidental or consequential damages and all implied warranties are limited to the same time periods stated in the express warranties for Roper Brand Appliances.

This manual is also suitable for:

[Fgp310vFgp315vFgp320vFgp325vFgp335v flp310vFgp345v ...](#) [Show all](#)