



Whirlpool GS440LELB0 Installation Instructions Manual

30" freestanding sealed burner gas range with self-cleaning oven

1

2

3

4

5

6


7

8

9

Table Of Contents

 10



•


[Table of Contents](#)

•

Bookmarks

Quick Links

[Download this manual](#) See also: [Use and Care Manual](#)

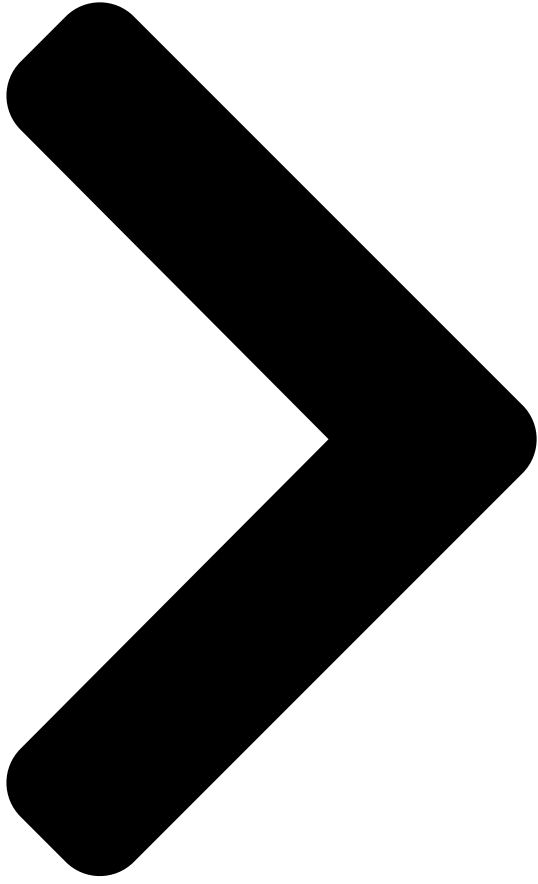


Installation Instructions

30"

Sealed Burner

 A child or adult can tip the range and be killed.
Connect anti-tip bracket to rear range foot.
Reconnect the anti-tip bracket, if the range is moved.
Failure to follow these instructions can result in death or serious burns to children and adults.

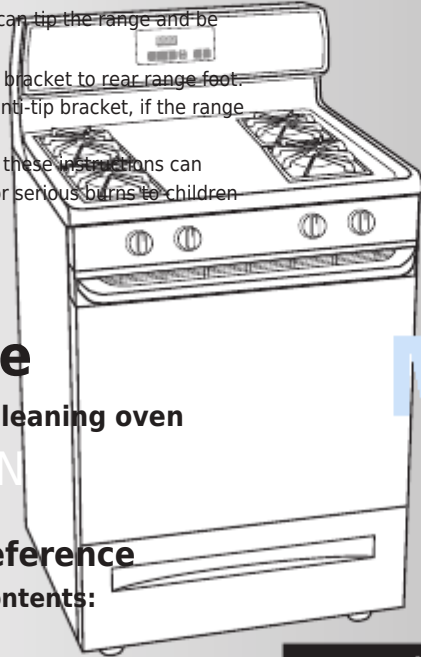

Range with self-cleaning oven

Tip Over Hazard

Quick Reference

Table of Contents:

Pages

- 2 Before you start
- Product dimensions
- 2 Cabinet dimensions/requirements
- 2 Electrical requirements
- 3 Gas supply requirements
- 3 Installation steps
- 4 - 7 Gas conversions
- 7 - 8 Back cover
- If range does not operate
- Back cover
- If you need assistance/service
- Back cover
- Moving the range

If you need assistance:

 
Check your
the dealer
in the Yellow
Household
Call when

Have questions about range installation or operation.
Need to obtain the name and number of an authorized service company.



When you call, you will need:

- The range model number.
- The range serial number.

Both numbers are listed on the model/serial rating plate located on the frame behind the storage drawer.

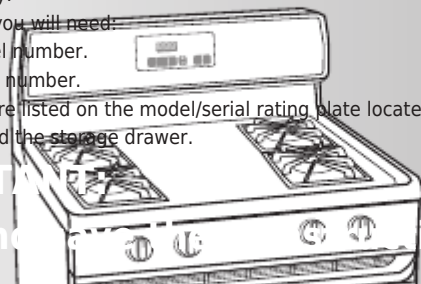

ManualsLib.com

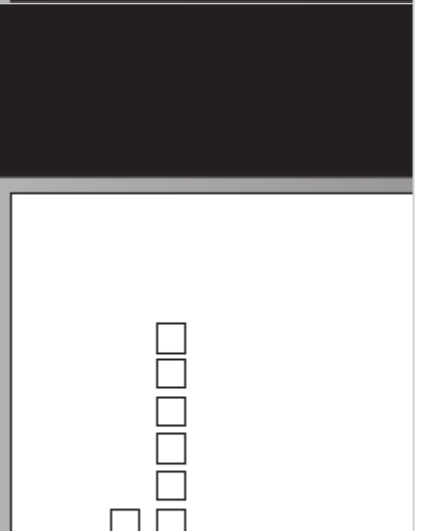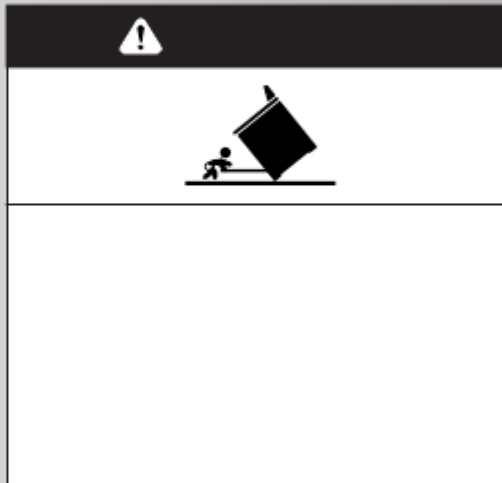  

IMPORTANT:

: Leave Installation Instructions with the homeowner.
owner: Keep Installation Instructions for future reference.
Installation Instructions for local electrical inspector's use.
8523783

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool GS440LELB0

[Ranges Whirlpool GS475LELS2 Use & Care Manual](#)

(21 pages)

[Ranges Whirlpool GS440LELB0 Installation Instructions Manual](#)

30" freestanding sealed burner, with self-cleaning oven (10 pages)

[Ranges Whirlpool GS440LEL Use & Care Manual](#)

Gas range (20 pages)

[Ranges Whirlpool GS440LEMB5 Use & Care Manual](#)

Whirlpool corporation gas range use&careguide gas range (44 pages)

[Ranges WHIRLPOOL SF380LEPQ3 Use & Care Manual](#)

(20 pages)

[Ranges Whirlpool GS440LEMQ5 Use & Care Manual](#)

Gas range (44 pages)

[Ranges Whirlpool GS395LEGB Instructions](#)

30" freestanding gas range (1 page)

[Ranges Whirlpool GS440LEMT2 Installation Instructions And Operation Manual](#)

30" (76.2 cm) freestanding gas ranges (32 pages)

[Ranges Whirlpool GS475LEMS1 Installation Instructions Manual](#)

30" freestanding sealed burner gas range with self-cleaning oven (13 pages)

[Ranges Whirlpool GS445LEMS1 Installation Instructions Manual](#)

30" freestanding sealed burner gas range with self-cleaning oven (12 pages)

[Ranges Whirlpool SF195LEK Use And Care Manual](#)

Gas range (21 pages)

[Ranges Whirlpool KR-32 User Manual](#)

30" freestanding self-cleaning gas range (68 pages)

[Ranges Whirlpool 9761040 Use And Care Manual](#)

Whirlpool 9761040 gas range use & care guide (44 pages)

[Ranges Whirlpool GS470LEMB3 Use & Care Manual](#)

(20 pages)

[Ranges Whirlpool GS563LXS Parts Manual](#)

30" gas freestanding self clean range sealed burner (10 pages)

[Ranges Whirlpool SF367LXSQ0 Use & Care Manual](#)

(40 pages)

Summary of Contents for Whirlpool GS440LELB0

[Page 1](#) Installation Instructions 30" Freestanding Sealed Burner with self-cleaning oven
WARNING Tip Over Hazard A child or adult can tip the range and be killed. Connect anti-tip bracket to rear range foot. Reconnect the anti-tip bracket, if the range is moved. Failure to follow these instructions can result in death or serious burns to children and adults.

[Page 2: Product Dimensions](#)

Before you start... Your safety and the safety of others are very important. We have provided many important safety message in this manual and on your appliance. Always read and obey all safety messages. This is the safety alert symbol. This symbol alerts you to potential hazards

that can kill or hurt you and others.

[Page 3: Tools Needed](#)

Tools needed level 3/8" drive ratchet flat-blade screwdriver wood floor: 1/8" drill bit
concrete/ceramic floors: 3/16" carbide-tipped masonry drill bit (Hammer may be Phillips needed
for anchors.) screwdriver tape measure or ruler channel lock 15/16" pliers and 3/8" combination
wrenches stainless steel/glass mirror...

[Page 4: Installation Steps](#)

Plug power supply cord into grounded outlet Make proper gas connection Install anti-tip bracket
Secure range with anti-tip bracket Installation steps Preparation **WARNING** Excessive Weight
Hazard Use two or more people to move and install range. Failure to follow this instruction can
result in back or other injury.

[Page 5: Operating Position](#)

Operating position front leveling leg rear leveling leg Remove cardboard shipping base from
under range. Remove storage drawer. Use a 3/8" drive ratchet to lower rear leveling legs one-
half turn. Use channel lock pliers to lower front leveling legs one-half turn. Gas and electrical
connections All connections must be wrench-tightened.

[Page 6: Check Operation](#)

Check operation Electronic ignition system Cooktop and oven burners use electronic ignitors in
place of standing pilots. When a cooktop control knob is turned to the "LIGHT" position, the
system creates a spark to light the burner. This sparking continues until the control knob is
turned to the desired setting.

[Page 7: Check Operation Of Oven Broil Burner](#)

Check operation (cont.) Check operation of oven broil burner Follow the instructions for your
type of oven controls. Note: A faint ticking sound will be heard while the oven burner lights. The
oven burner should light within 8 seconds. If your range has an oven temperature control knob:
PUSH TO TURN...

[Page 8: Natural Gas Conversion](#)

reinstall Surface one of the orifice Burners: screws spud Remove burner spark electrode caps.
Use a orifice Phillips or spud holder Quadrex screwdriver to remove the two screws holding
range cooktop the burner head down. Lift the burner head off the cooktop to uncover the orifice
spud holder.

[Page 9: Moving The Range](#)

Both numbers are listed on the model/serial rating plate located on the frame behind the
storage drawer. Part No. 8523783 © 2002 Whirlpool Corporation Moving the range: **WARNING**
Tip Over Hazard A child or adult can tip the range and be killed.